


# Crosley CDE8000AZW 03 - DOOR (SERIES 11)

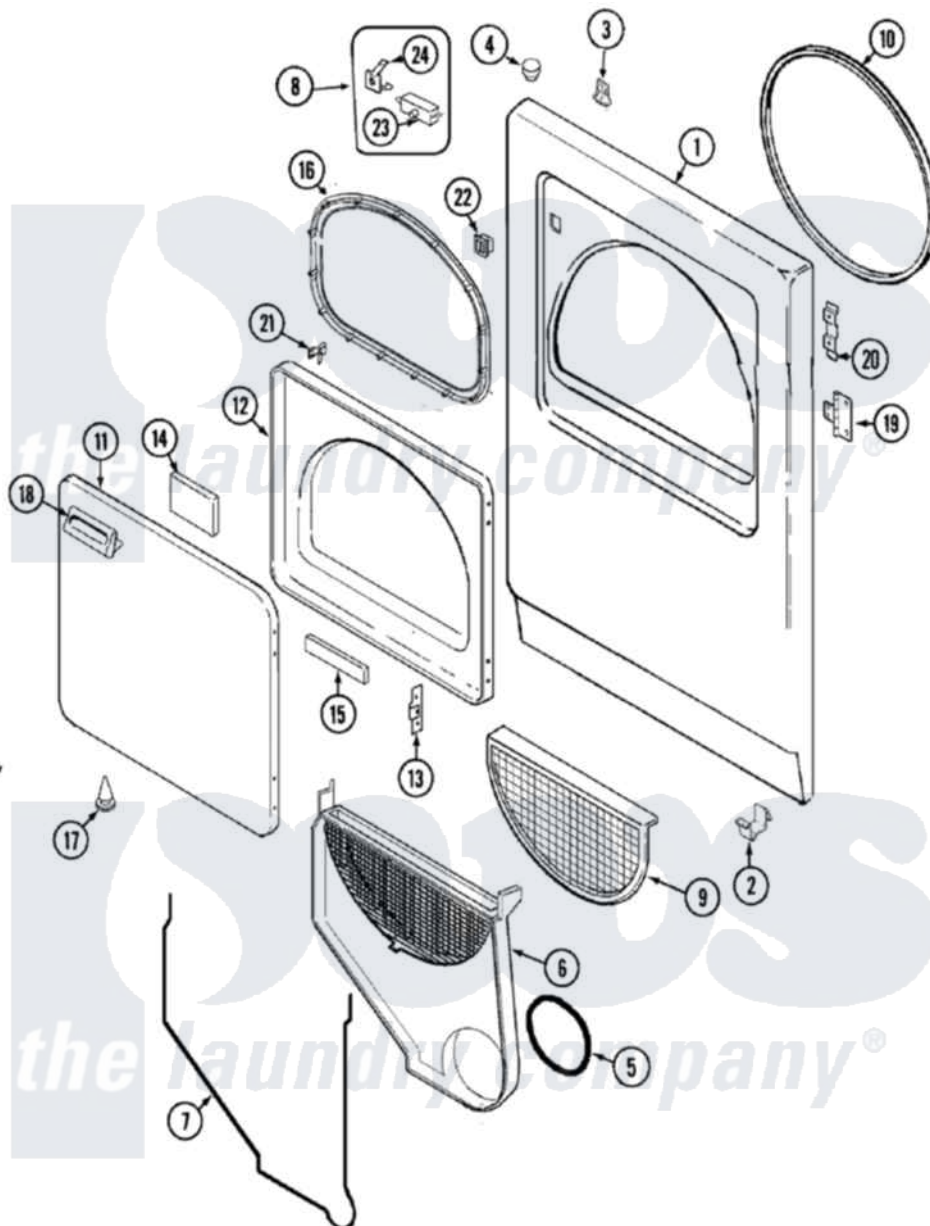

Crosley [Residential Crosley CDE8000AZW Dryer Parts](#) Parts Diagram 03 - DOOR (SERIES 11)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0726	<a href="#">31001771</a>		Panel, Front
2	<a href="#">53-0120</a>			Clip, Front Panel
3	<a href="#">31001526</a>			Lock, Top
4	<a href="#">33-2653</a>			Bumper, Cabinet
5	53-0203	<a href="#">12001324</a>		Duct Kit, Collector
6	25-7810	<a href="#">415013-35</a>		Screw
"	<a href="#">12001324</a>			Duct Kit, Collector
7	<a href="#">53-0204</a>			Seal
8	<a href="#">LA-1005</a>			Switch Kit
9	<a href="#">53-0918</a>			Filter, Lint
10	53-0281	<a href="#">31001747</a>		Seal Assembly
11	25-7770	<a href="#">3196169</a>		Screw, Element
"	<a href="#">53-0154</a>			Panel, Outer Door
12	53-0912		Not Available	PANEL, INNER DOOR (WHT)
13	<a href="#">53-0119</a>			Clip, Hinge
14	<a href="#">53-1490</a>			Door Pad

15	<a href="#">53-1491</a>		Door Pad
16	53-0648	<a href="#">31001529</a>	Seal, Door
17	<a href="#">25-7889</a>		Plug Button
18	25-7810	<a href="#">415013-35</a>	Screw
"	<a href="#">53-0927</a>		Handle, Door
19	<a href="#">25-7809</a>		Screw, No.6-20 1/2 Flthd Torx
"	<a href="#">53-1492</a>		Hinge, Dryer Door
20	53-0121	Not Available	TWIN NUT
21	53-2364	<a href="#">LA-1003</a>	Door Catch Kit
22	53-0187	<a href="#">LA-1003</a>	Door Catch Kit
23	53-0147	<a href="#">53-0148</a>	Switch, Door
24	63-5990	<a href="#">31001319</a>	Clip, Switch

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>