


Crosley CDE8500W 04 - DOOR

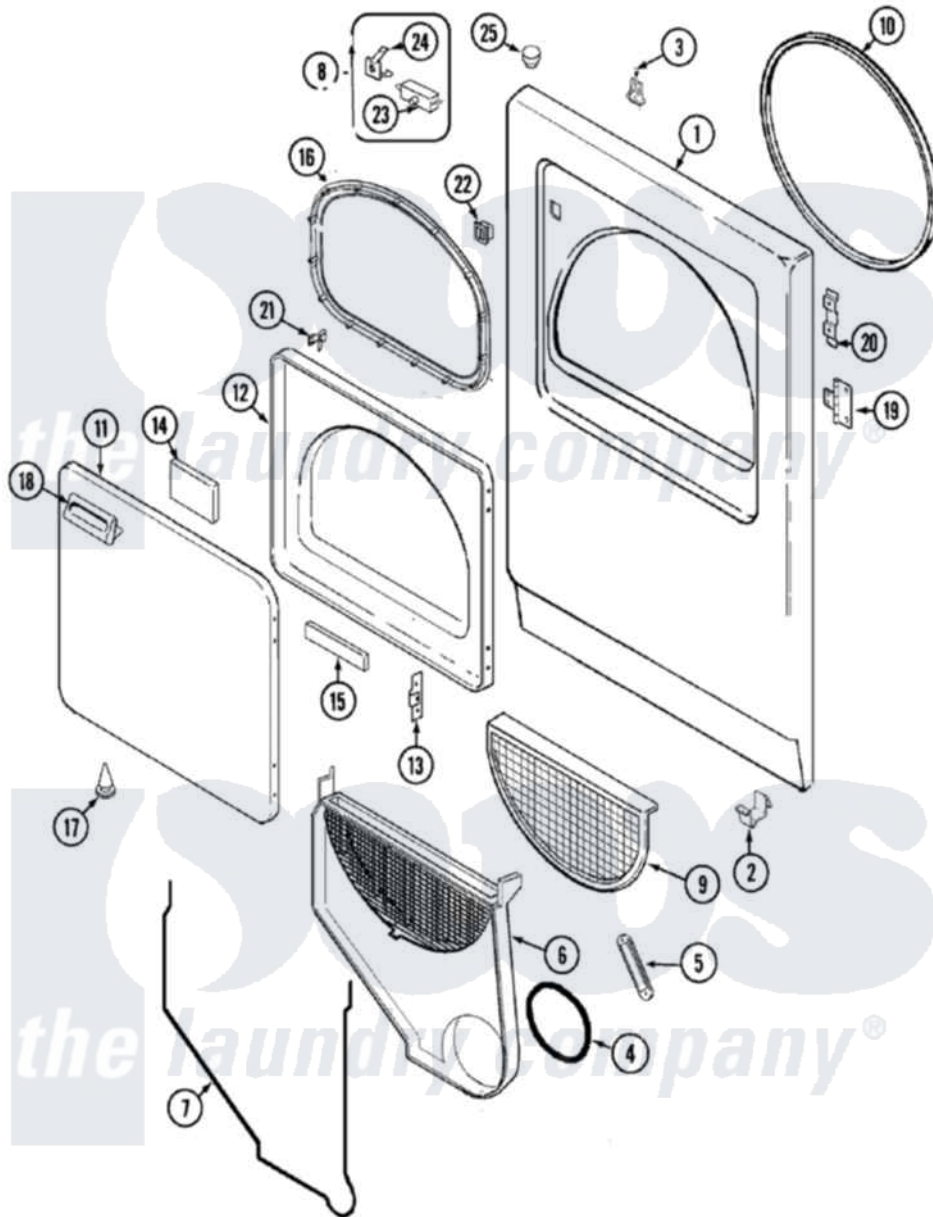

Crosley [Residential Crosley CDE8500W Dryer Parts](#) Parts Diagram 04 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0726	31001771		Panel, Front
2	53-0120			Clip, Front Panel
3	31001526			Lock, Top
4	31001541			Seal, Blower/Collector Duct
5	33001809			Sensor Bar Assembly
"	31001558			Lead Assembly
6	12001324			Duct Kit, Collector
"	25-7810	415013-35		Screw
7	53-0204			Seal
8	LA-1005			Switch Kit
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
9	53-0918			Filter, Lint
10	31001637			Seal Assembly, Cylinder Front
11	53-0154			Panel, Outer Door
"	25-7752	3196169		Screw, Element
12	53-0912		Not Available	PANEL, INNER DOOR (WHT)

13	53-0119		Clip, Hinge
14	53-1490		Door Pad
15	53-1491		Door Pad
16	31001529		Seal, Door
17	25-7889		Plug Button
18	53-0927		Handle, Door
"	25-7810	415013-35	Screw
19	53-1492		Hinge, Dryer Door
"	25-7809		Screw, No.6-20 1/2 Flthd Torx
20	53-0121	Not Available	TWIN NUT
"	31001786	98006631	Screw
21	53-2364	LA-1003	Door Catch Kit
22	53-0187	LA-1003	Door Catch Kit
23	31001732	53-0148	Switch, Door
"	53-0148		Switch, Door
24	31001319		Clip, Switch
"	31001733		Clip, Switch
25	33-2653		Bumper, Cabinet

