



Issued 5/86

N-28-17

Crosley Residential Crosley CDE8630A Dryer Parts Parts Diagram 03 - ELECTRICAL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	63-5114		Not Available	TRANSITION DUCT
2	63-2599		Not Available	DUCT GASKET
3	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
4	63-5848		Not Available	VENT DUCT
5	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
6	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE TAPE (PURCHASE LOCALLY)
7	63-6142		Not Available	THERMOSTAT
8	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
9	63-1216N		Not Available	COVER PLATE
10	63-2837N	<a href="#">LA-1005</a>		Switch Kit
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-

## PURCHASE LOCALLY

11	63-5991	<a href="#">LA-1005</a>	Switch Kit
12	63-5990	<a href="#">31001319</a>	Clip, Switch
13	<a href="#">25-3034</a>		Clip, Wiring
14	63-1195	Not Available	SUPPORT
15	<a href="#">63-2836N</a>		Trmnl Block Kit
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
16	63-1244	<a href="#">53-1518</a>	Block, Terminal
17	63-5805	Not Available	SHIELD
18	25-9103	Not Available	SCREW
19	<a href="#">25-3122</a>		Washer, Flat
20	25-3123	Not Available	WASHER, CUP
21	25-0027	<a href="#">112432</a>	Nut
22	25-6124	Not Available	NUT
23	25-3461	<a href="#">3400094</a>	Screw, 10-32 X 3/8
24	25-7027	<a href="#">16515</a>	Clip

