



Issued 5/86

N-28-17

Crosley Residential Crosley CDE8630H Dryer Parts Parts Diagram 03 - ELECTRICAL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	63-5114		Not Available	TRANSITION DUCT
2	63-2599		Not Available	DUCT GASKET
3	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
4	63-5848		Not Available	VENT DUCT
5	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
6	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE TAPE (PURCHASE LOCALLY)
7	63-6142		Not Available	THERMOSTAT
8	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
9	63-1216N		Not Available	COVER PLATE
10	63-2837N	LA-1005		Switch Kit
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-

PURCHASE LOCALLY

11	63-5991	LA-1005	Switch Kit
12	63-5990	31001319	Clip, Switch
13	25-3034		Clip, Wiring
14	63-1195	Not Available	SUPPORT
15	63-2836N		Trmnl Block Kit
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	63-1244	53-1518	Block, Terminal
17	63-5805	Not Available	SHIELD
18	25-9103	Not Available	SCREW
19	25-3122		Washer, Flat
20	25-3123	Not Available	WASHER, CUP
21	25-0027	112432	Nut
22	25-6124	Not Available	NUT
23	25-3461	3400094	Screw, 10-32 X 3/8
24	25-7027	16515	Clip

