


# Crosley CDE9500W 02 - CONTROL PANEL

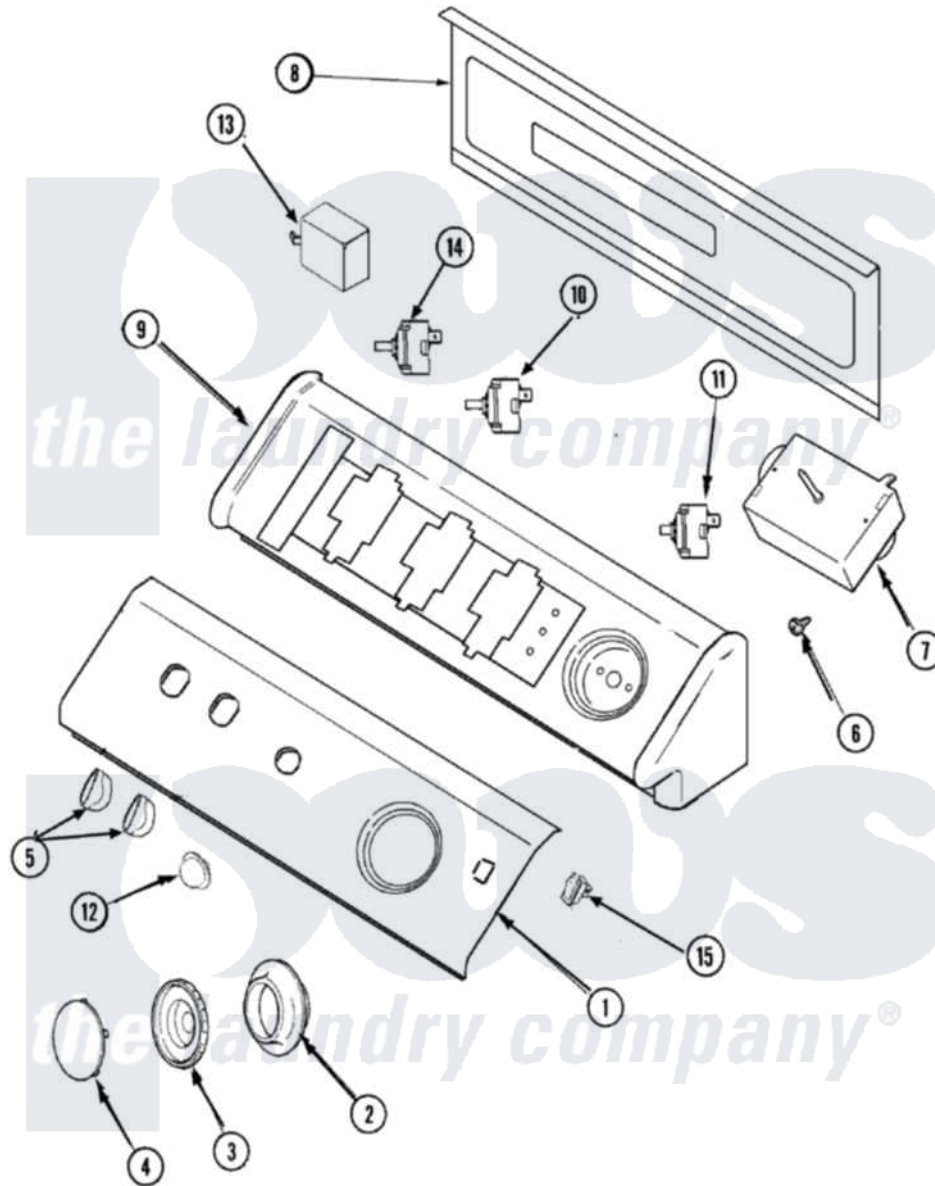

Crosley [Residential Crosley CDE9500W Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	37001123		Not Available	FACIA
2	<a href="#">33001621</a>			Skirt, Timer Dial
3	<a href="#">22001659</a>			Timer Knob - Grey
4	<a href="#">22001664</a>			Timer Knob Insert/Cap
5	<a href="#">22001663</a>			Knob, Selector Switch
6	37001031	<a href="#">3370225</a>		Screw
7	37001089	<a href="#">Y2200920</a>		Timer
8	<a href="#">37001072</a>			Panel, Back
"	Y22002339	<a href="#">8534058</a>		Screw
9	27001110		Not Available	CONSOLE (WHT)
10	<a href="#">22001794</a>			Switch, Rotary
11	33001861	<a href="#">33001618</a>		Switch- PU
12	33001619	<a href="#">37001071</a>		Button, Push-To-Start
13	501086	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">33001623</a>			Buzzer, Non-Adjustable
14	<a href="#">33001640</a>			Switch, Temperature

