


Crosley CDE9500W 03 - DOOR, FRONT, ACCESS & TOP PANELS

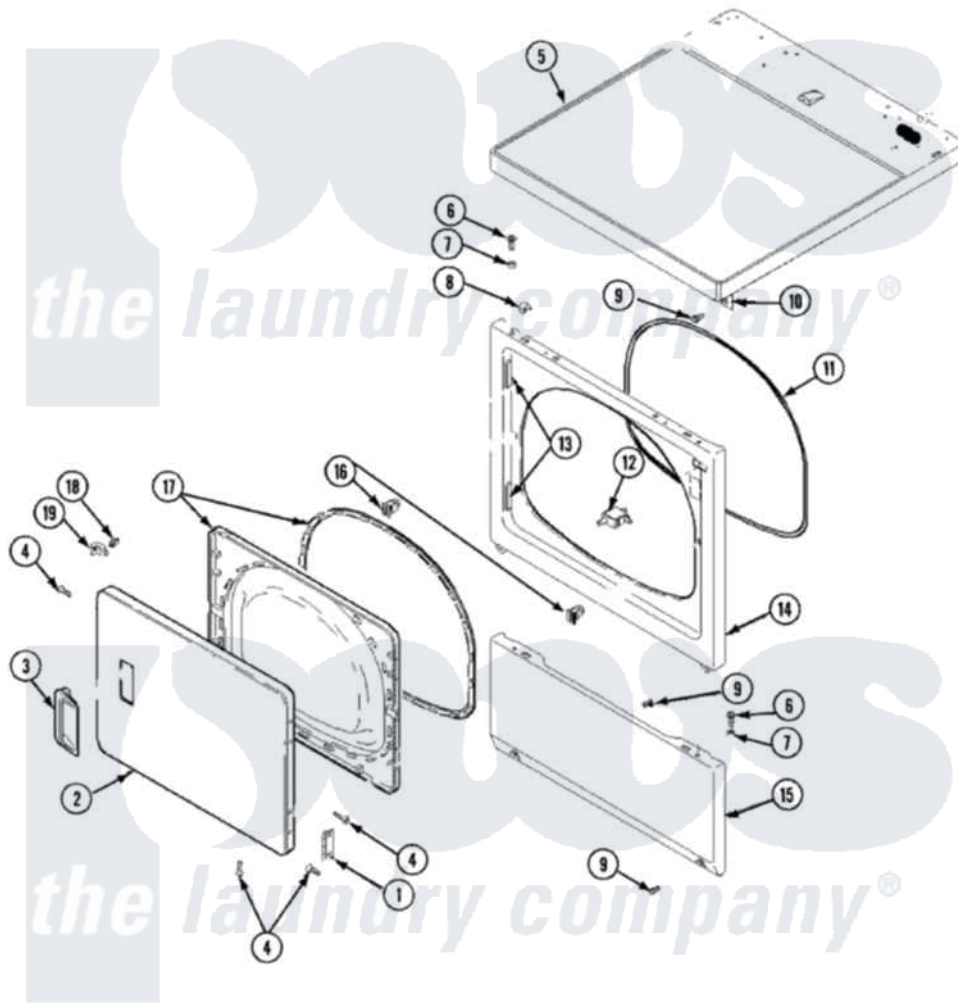

Crosley Residential Crosley CDE9500W Dryer Parts Parts Diagram 03 - DOOR, FRONT, ACCESS & TOP PANELS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y503676			Hinge, Door And Top
2	37001029			Door, Dryer
3	33001241			Handle, Door
4	37001030			Screw, No.8ab-16 x 3/4 Fh
5	Y56128			Pad, Bumper
"	37001027			Panel, Top
6	32671	Y014874		Screw, Idler Arm And Sleeve
7	505187			Locator, Panel
8	56080	22001650		Fastener, Spring
9	503661	27001200		Screw
10	40130801			Bracket, Top Mount
11	504005	511056		Seal Front Panel
12	Y504570	W10169313		Switch-Dor
13	503126			Plug, Hinge Hole
14	503656WP			Panel, Front
15	40045301WP			Panel, Access

16	54660	LA-1003	Door Catch Kit
17	37001028		Seal And Liner, Assembly
18	500039	510181	Strike Doormetal
19	40116201		Bracket, Door Strike

