


# Crosley CDG20M6 01 - CONTROL PANEL (ORIG. REV. A)

CROSLEY

CDG20M6

BACKGUARD

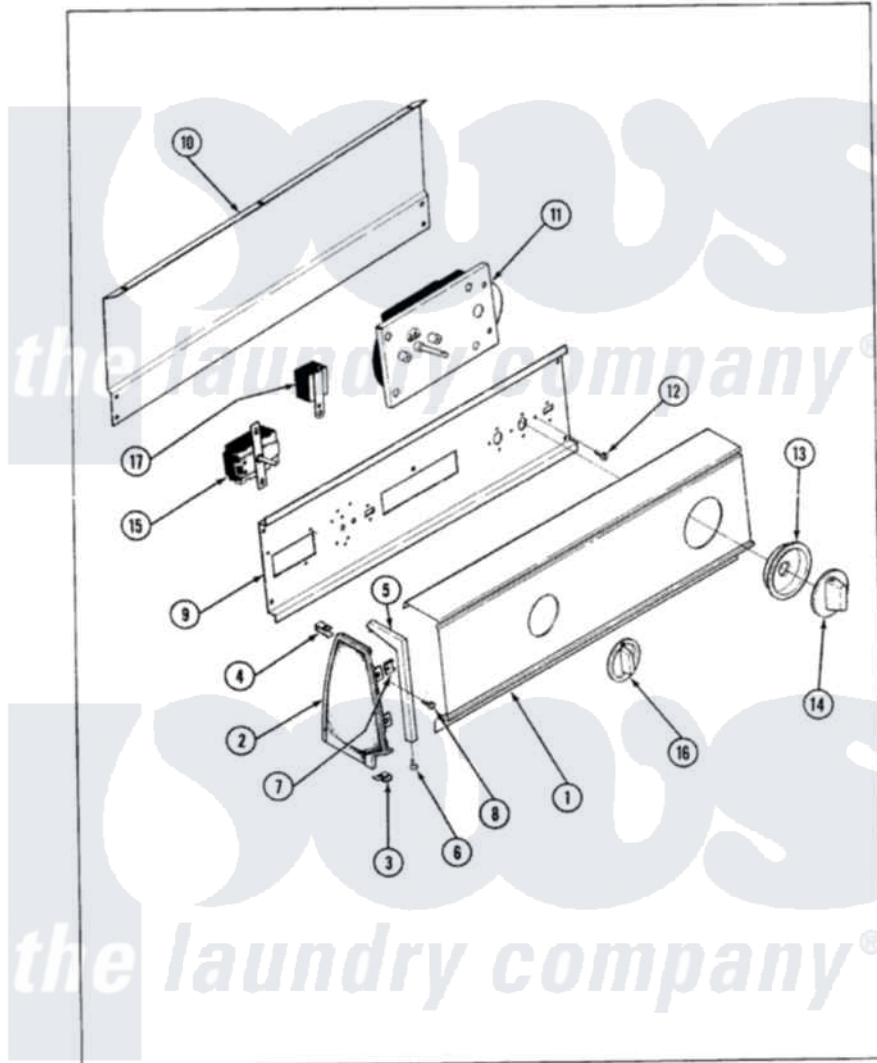

Issued 4/88

Crosley [Residential Crosley CDG20M6 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-3457</a>			Screw, Sems
"	53-0833		Not Available	CONTROL PANEL
2	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7793</a>			Screw
"	<a href="#">53-0264</a>			RH Endcap
"	<a href="#">53-0265</a>			LH Endcap
3	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	25-7697	<a href="#">25-2219</a>		Screw
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	<a href="#">53-1676</a>	Shield, Control
10	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>		Screw, Sems
"	53-0268	<a href="#">21001460</a>	Shield, Rear
11	63-5752	Not Available	SWITCH
"	<a href="#">53-0663</a>		Timer
12	53-0729	Not Available	TIMER KNOB ASM
"	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	35-0092	Not Available	SKIRT ASM
14	53-0651	Not Available	TIMER KNOB
15	53-0394	<a href="#">53-1264</a>	Rotary Switch
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
16	35-0167	<a href="#">21001283</a>	Knob, Selector---Piq
17	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-6731	<a href="#">53-1639</a>	Buzzer Assembly

