


Crosley CDG20P6A 01 - CONTROL PANEL (ORIG. REV. A-D)

CROSLEY CDG20P6 BACKGUARD

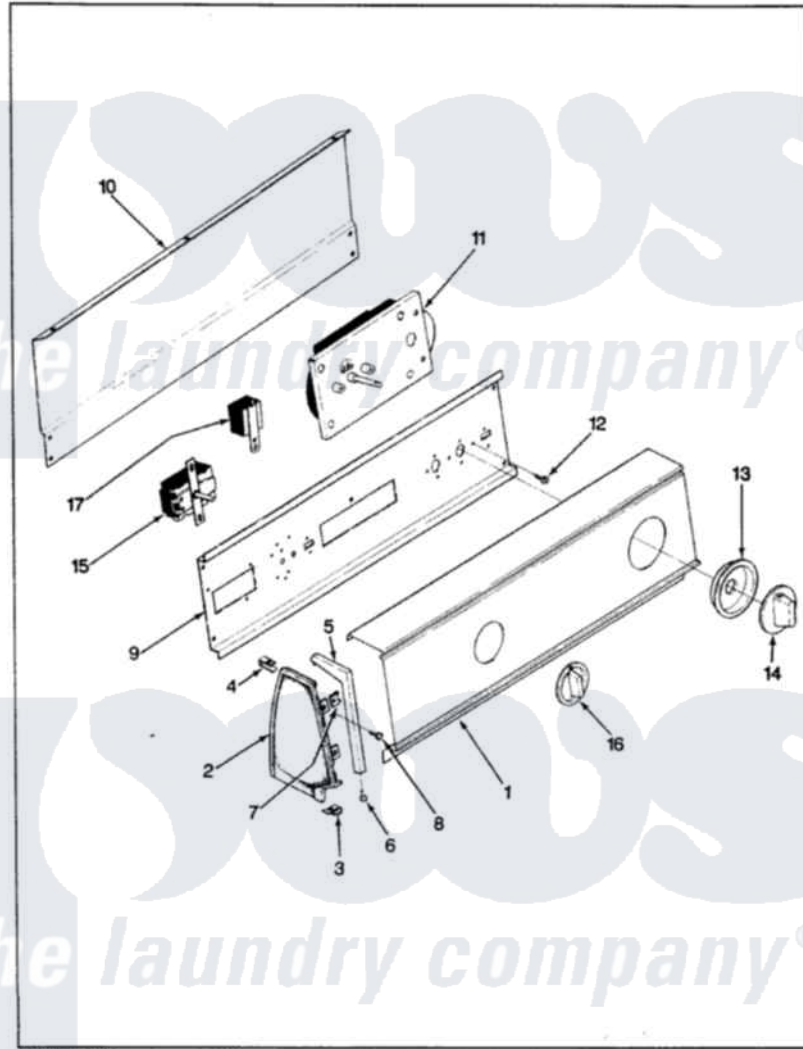

ISSUED 6/89

Crosley [Residential Crosley CDG20P6A Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (ORIG. REV. A-D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-3457			Screw, Sems
"	53-1287		Not Available	CONTROL PANEL
2	53-0265			LH Endcap
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-2488	21001452		Cap- End
"	53-0264			RH Endcap
"	35-2487	21001451		Cap- End
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw

7	25-7702		Speedclip, End Cap To Control Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	53-1676	Shield, Control
"	53-1676		Shield, Control
10	25-3457		Screw, Sems
"	53-0268	21001460	Shield, Rear
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
11	53-1548		Timer
"	53-1302		Timer
"	53-0635	Not Available	TIMER MOTOR
12	25-0205	216412	Screw, Bracket To Timer
13	35-2256	21001283	Knob, Selector---Piq
14	53-0653	31001219	Knob Ski
15	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0344	Not Available	SWITCH, TEMPERATURE
16	35-0145	21001283	Knob, Selector---Piq
17	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

