


Crosley CDG20P6A 02 - CONTROL PANEL (REV. E-F)

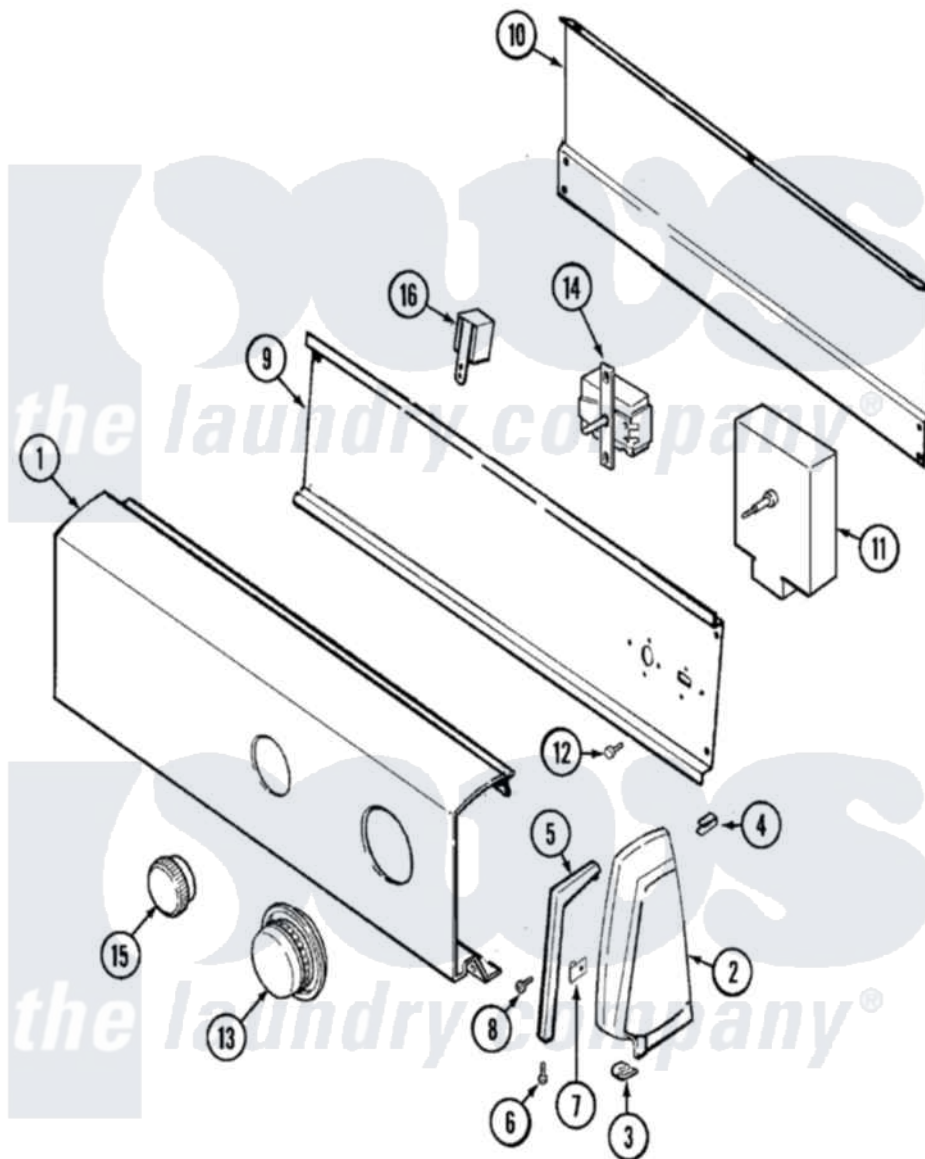

Crosley [Residential Crosley CDG20P6A Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. E-F)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1287		Not Available	CONTROL PANEL
2	25-7851			Speedclip, End Cap To Top
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	25-7691		Not Available	SCREW, END CAP TO TOP
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

	25-1192			Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676			Shield, Control
10	35-2688	21001460		Shield, Rear
11	53-1548			Timer
"	53-1804			Timer
12	25-7435	33002917		Screw, No.10-16
"	25-0205	216412		Screw, Bracket To Timer
13	53-1533	31001219		Knob Ski
14	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0344		Not Available	SWITCH, TEMPERATURE
15	35-2256	21001283		Knob, Selector---Piq
16	53-1639			Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
NI	53-1040		Not Available	MANUAL, USE & CARE
"	16000326			Guide, Quick Ref - Jenn-Air

