


Crosley CDG20P7AC 01 - CONTROL PANEL

Section: BACKGUARD

Models: CDG20P7C

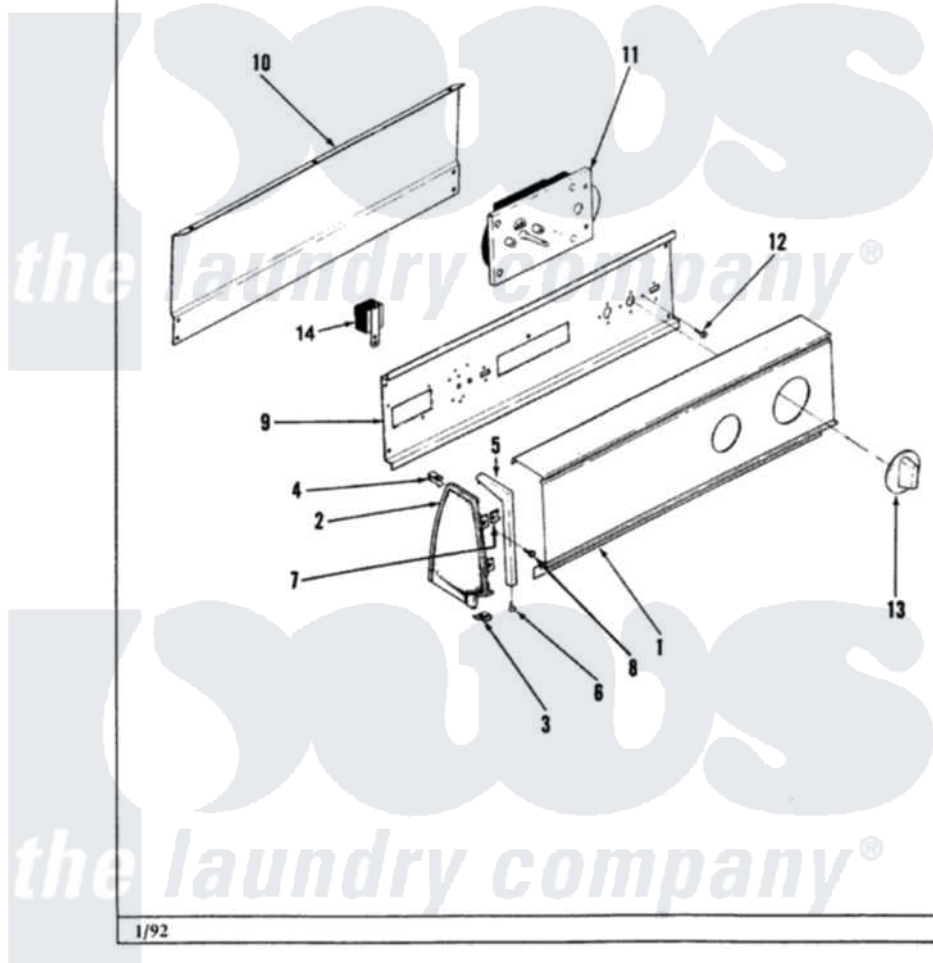

Crosley [Residential Crosley CDG20P7AC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1925		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
"	53-2488	31001109		Owners Man
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
3	25-7691		Not Available	SCREW, END CAP TO TOP
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
11	53-1303		Not Available
"	63-6752		Not Available
"	53-1758		TIMER
"			TIMER MOTOR
"	53-1758		Timer
12	25-0205	216412	Screw, Bracket To Timer
"	25-7435	33002917	Screw, No.10-16
13	53-0653	31001219	Knob Ski
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
14	53-1639		Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
NI	53-1926-1		Not Available
			MANUAL, USE & CARE

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]