


Crosley CDG20P8A 02 - CONTROL PANEL (REV. E-F)

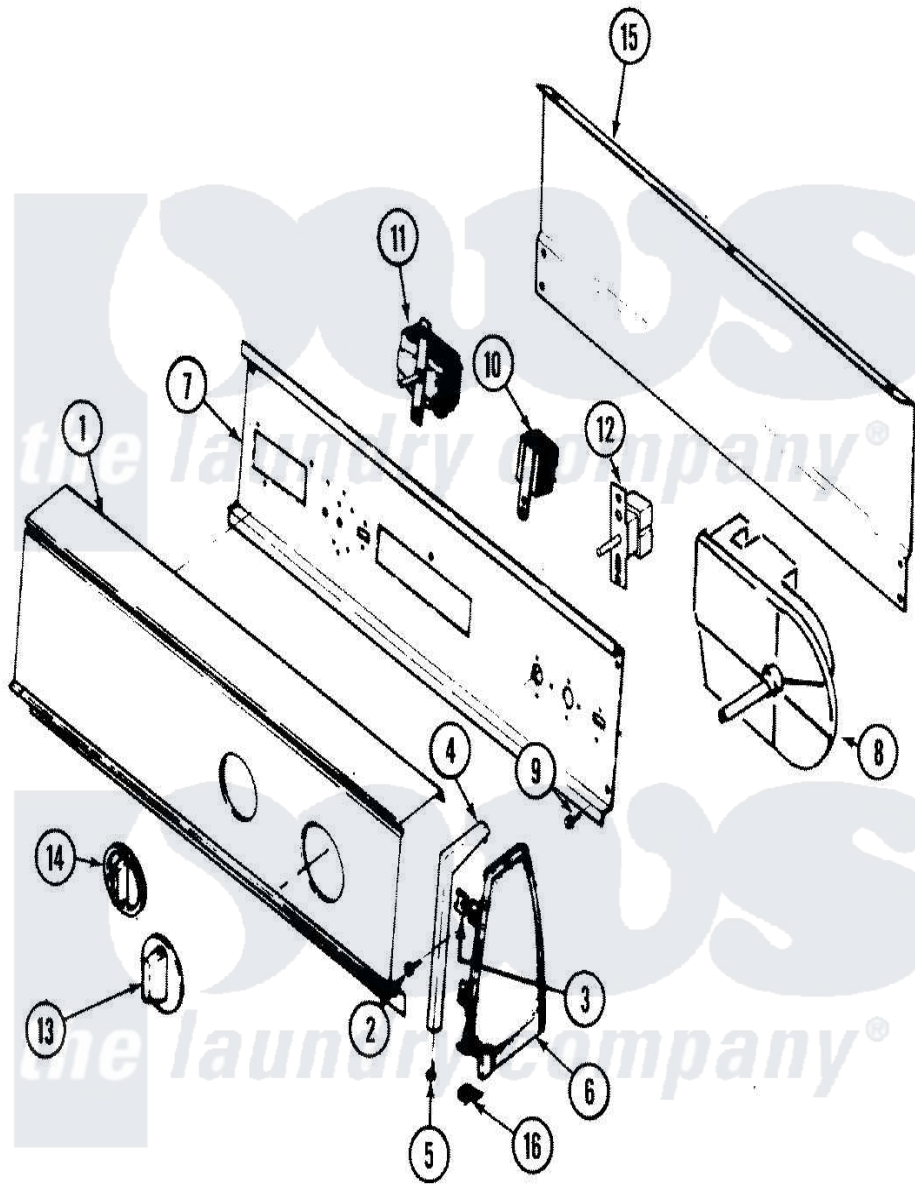

Crosley [Residential Crosley CDG20P8A Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (REV. E-F)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-3457			Screw, Sems
"	53-1286		Not Available	CONTROL PANEL
2	25-7793			Screw
3	25-7702			Speedclip, End Cap To Control Panel
4	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-7760			Screw
6	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
7	53-2504	31001193		Pad, Shield
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1676			Shield, Control
8	53-1816		Not Available	TIMER
9	25-7435	33002917		Screw, No.10-16
10	25-3092	90767		Screw, 8A X 3/8 HeX Washer

10	25-3092	90767		Head Tapping
"	63-6731	53-1639		Buzzer Assembly
11	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1266		Not Available	ROTARY SWITCH
12	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	53-1263		Rotary Switch
13	53-0653	31001219		Knob Ski
14	35-0145	21001283		Knob, Selector----Piq
15	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	35-2688	21001460		Shield, Rear
16	25-7851			Speedclip, End Cap To Top
"	25-2219			Screw
NI	53-1450-1		Not Available	MANUAL, USE & CARE
"	63-5577-1		Not Available	MANUAL, USE & CARE

