


Crosley CDG20P8AC 01 - CONTROL PANEL

SECTION: BACKGUARD
 MODEL: CDG20P8C

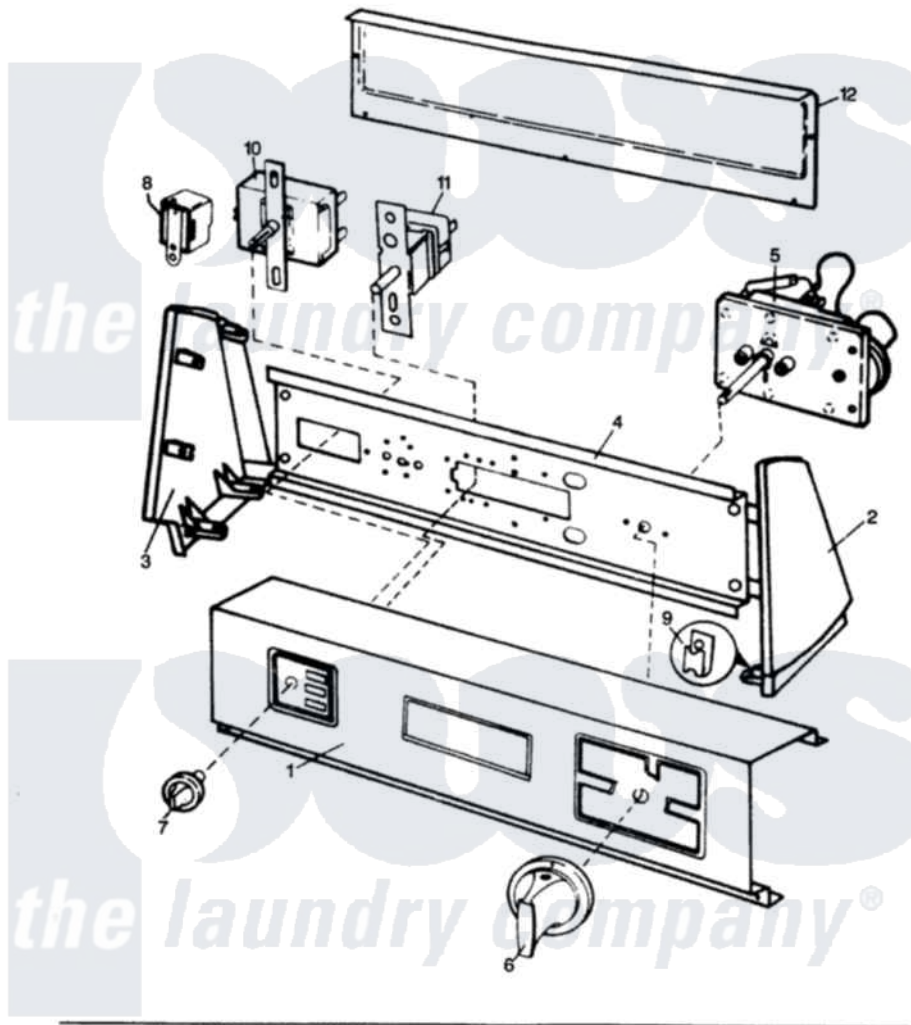

Issue Date: 2/91

Crosley [Residential Crosley CDG20P8AC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	53-1286		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
3	25-7760			Screw
"	35-2488	21001452		Cap- End
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
"	53-1676			Shield, Control
5	63-5685	63-5613		Timer
"	25-0205	216412		Screw, Bracket To Timer
"	53-1300		Not Available	TIMER

6	53-0653	31001219	Knob Ski
7	35-0145	21001283	Knob, Selector---Piq
8	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-7702		Speedclip, End Cap To Control Panel
10	53-1266		Not Available ROTARY SWITCH
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	53-1263		Rotary Switch
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	25-7435	33002917	Screw, No.10-16
"	25-7697	25-2219	Screw
"	34-9487		Not Available PLATE, REINFORCEMENT
"	35-2688	21001460	Shield, Rear
"	53-1450		Not Available MANUAL, USE & CARE
"	25-7851		Speedclip, End Cap To Top

