


Crosley CDG20P8D 01 - CONTROL PANEL (CDG20P8D)

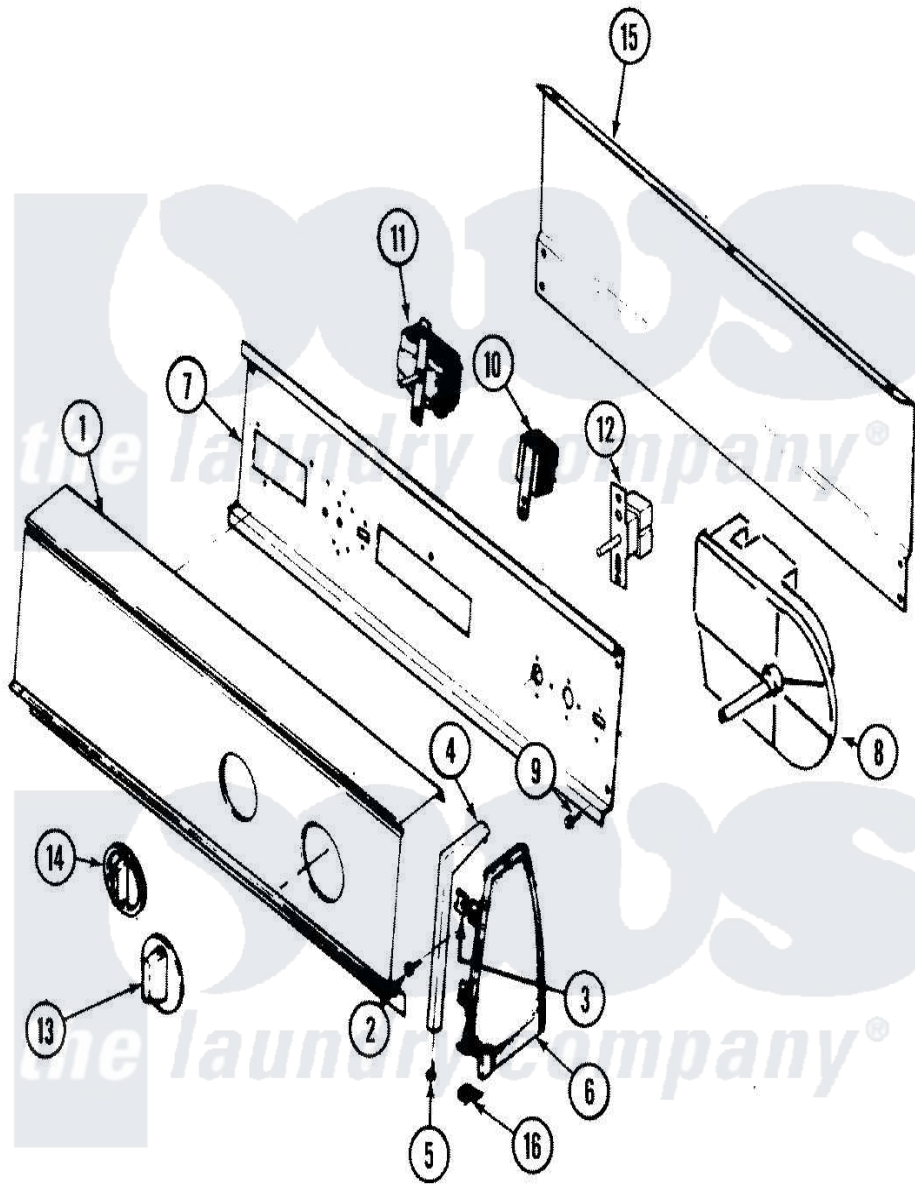

Crosley Residential Crosley CDG20P8D Dryer Parts Parts Diagram 01 - CONTROL PANEL (CDG20P8D)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2189		Not Available	CONTROL PANEL
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
2	35-2668	21001453		Cap- End
3	25-7760			Screw
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
"	53-1676			Shield, Control
5	25-0205	216412		Screw, Bracket To Timer
"	25-7435	33002917		Screw, No.10-16
"	53-1300		Not Available	TIMER

"	25-7435	33002917	Screw, No.10-16
"	63-5685	63-5613	Timer
"	53-1816		Not Available TIMER
6	53-0653	31001219	Knob Ski
7	35-0145	21001283	Knob, Selector---Piq
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1639		Buzzer Assembly
9	25-7702		Speedclip, End Cap To Control Panel
10	53-0392		Not Available SELECTOR SWITCH
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0346	53-1263	Rotary Switch
12	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	33002917	Screw, No.10-16
"	25-7697	25-2219	Screw
"	34-9487		Not Available PLATE, REINFORCEMENT
"	35-2688	21001460	Shield, Rear
"	25-7851		Speedclip, End Cap To Top
13	53-1450		Not Available MANUAL, USE & CARE

