


Crosley CDG20P8DC 01 - CONTROL PANEL (CDG2P8DC)

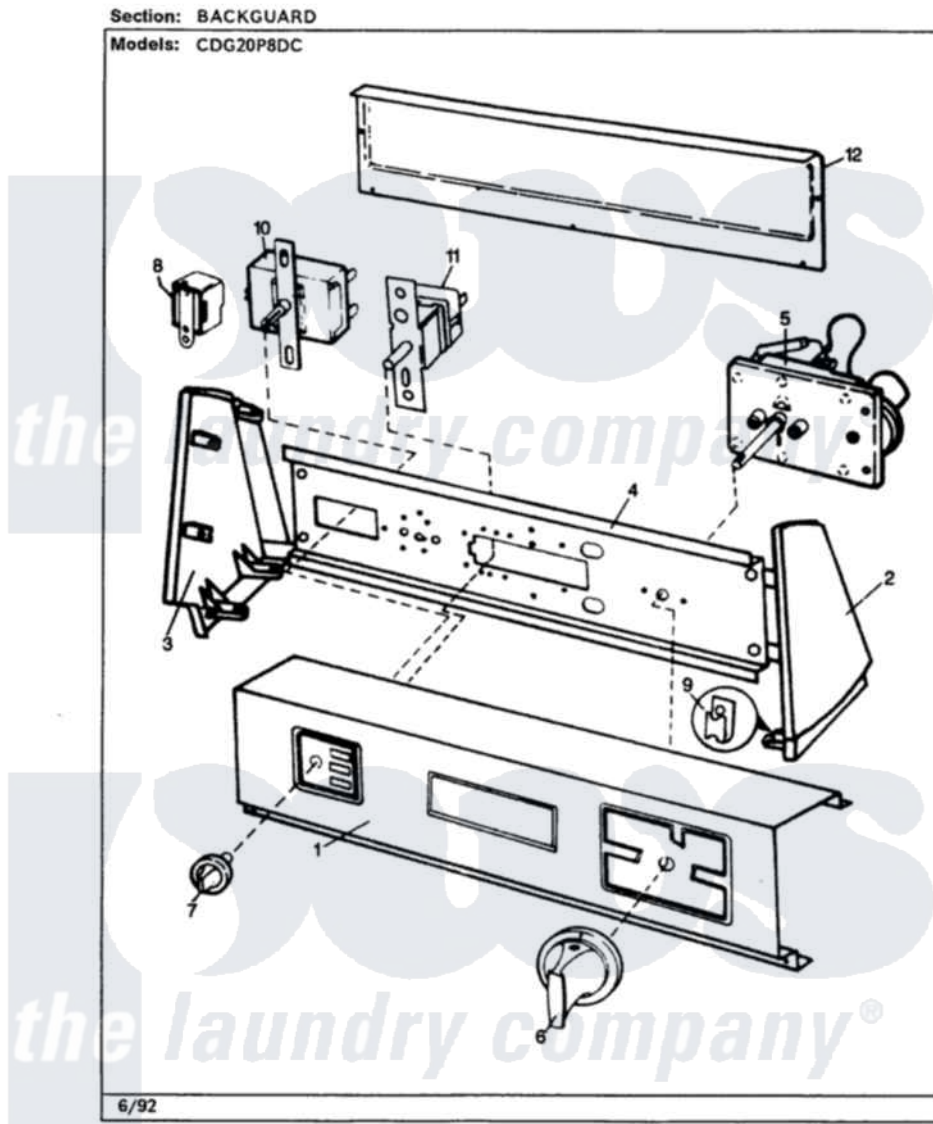

Crosley [Residential Crosley CDG20P8DC Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (CDG2P8DC)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2189		Not Available	CONTROL PANEL
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
2	35-2668	21001453		Cap- End
3	25-7760			Screw
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1676			Shield, Control
"	25-7702			Speedclip, End Cap To Control Panel
5	25-0205	216412		Screw, Bracket To Timer
"	63-5685	63-5613		Timer
"	53-1300		Not Available	TIMER

6	53-0653	31001219		Knob Ski
7	35-0145	21001283		Knob, Selector---Piq
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1639			Buzzer Assembly
9	25-7702			Speedclip, End Cap To Control Panel
10	53-0392		Not Available	SELECTOR SWITCH
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	53-0346	53-1263		Rotary Switch
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
12	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7435	33002917		Screw, No.10-16
"	25-7697	25-2219		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	35-2688	21001460		Shield, Rear
"	53-1450		Not Available	MANUAL, USE & CARE
"	25-7851			Speedclip, End Cap To Top

