


Crosley CDG4205AWW 02 - CABINET

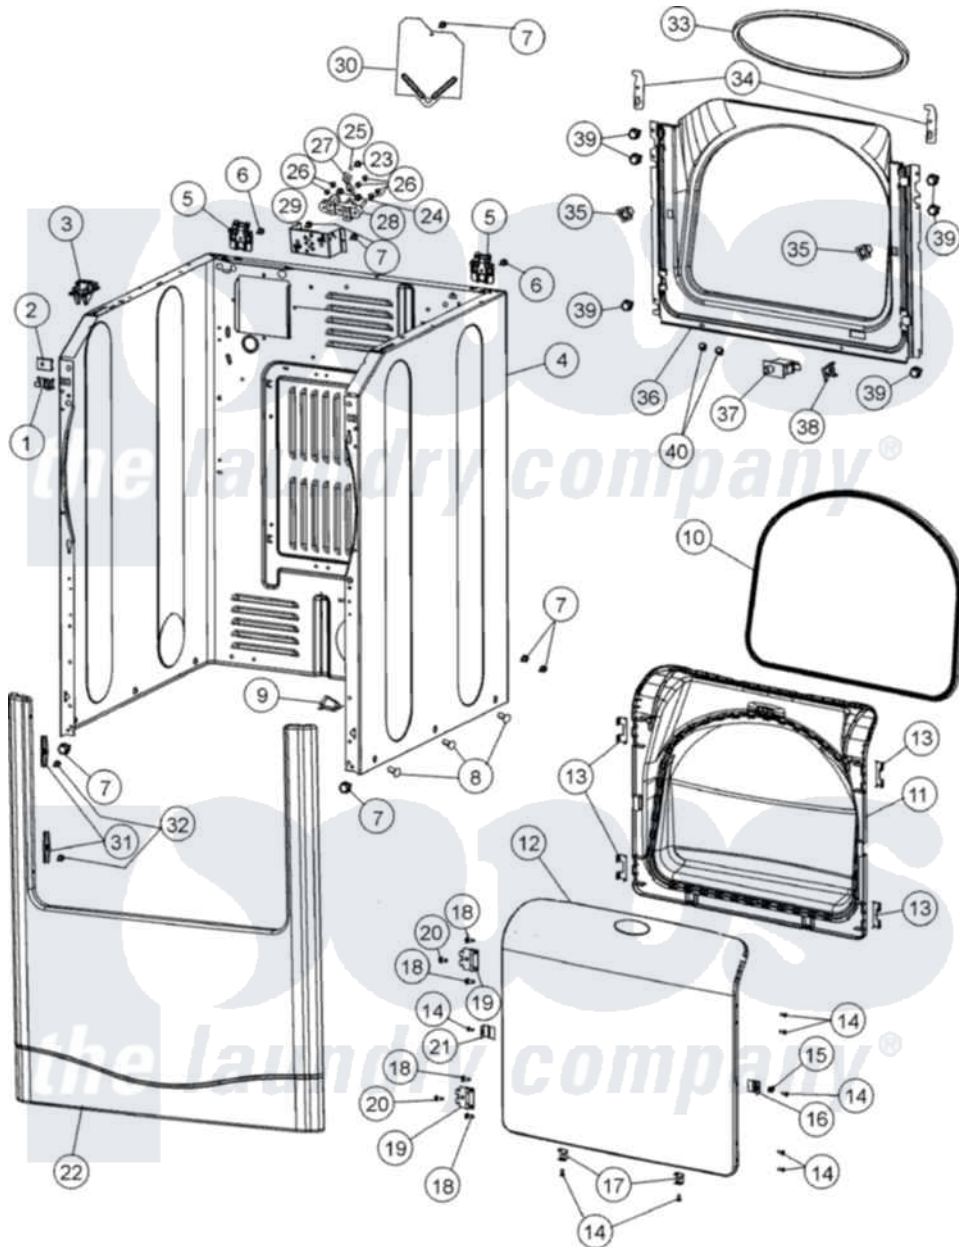

Crosley [Residential Crosley CDG4205AWW Dryer Parts](#) Parts Diagram 02 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	22002049			Clip Note: Clip, Front Panel
3	33002891			Pin, Locator
4	22003639			Cabinet Assembly
5	22004095			Hinge, Plastic
6	22001995			Screw Note: Screw, Tumbler Front And Shroud
7	33002190			SCrew, C BraCe, BraCket, Cabinet
8	33002794	213007		Xfor Cabinet See Cabinet, Back
9	Y310376			Clip, Door Switch Harness
10	33001807			Seal, Tumbler
11	33002544			Door, Inner W/Seal
12	22003785			Door, Outer
13	22002038			Clip, Door
14	22002063			Screw No.8-18AB Wafer Head
15	33001761			Strike, Door

16	33001793		Bracket, Strike
17	22002039		Clip, Door
18	22002062	98006631	Screw
19	33001759		Hinge, Door
20	22002012		Screw, Hinge Note: Screw, Hinge Bracket
21	33001763		Plug, Inner Door
22	22002836		Panel, Front
23	22003781		Screw, Ground Strap
24	Y312209	W10001200	Screw
25	311093		Washer, Terminal Connection
26	311484	112432	Nut
27	Y312184		Strap, Grounding
28	33001244		Block, Terminal
29	33001826	Not Available	BRACKET, TERMINAL BLOCK---NA
30	33001795		Cover, Terminal Block
31	33001764		Cover, Hinge Hole
32	33001787		Screw, Hinge Note: Screw, Hinge Hole Cover
33	33001767		Seal, Shroud
34	33002597		Hook, Security
35	Y304578	LA-1003	Door Catch Kit
36	33001778		Shroud
37	33001508	W10169313	Switch-Dor
38	33001760		Bracket, Hinge
39	22001995		Screw Note: Screw, Tumbler Front And Shroud
40	33001768		Screw, Shroud Note: Screw, Shroud And Outlet Duct

the laundry company[®]

Howes
the laundry company[®]