


# Crosley CDG4205AWW 05 - TUMBLER

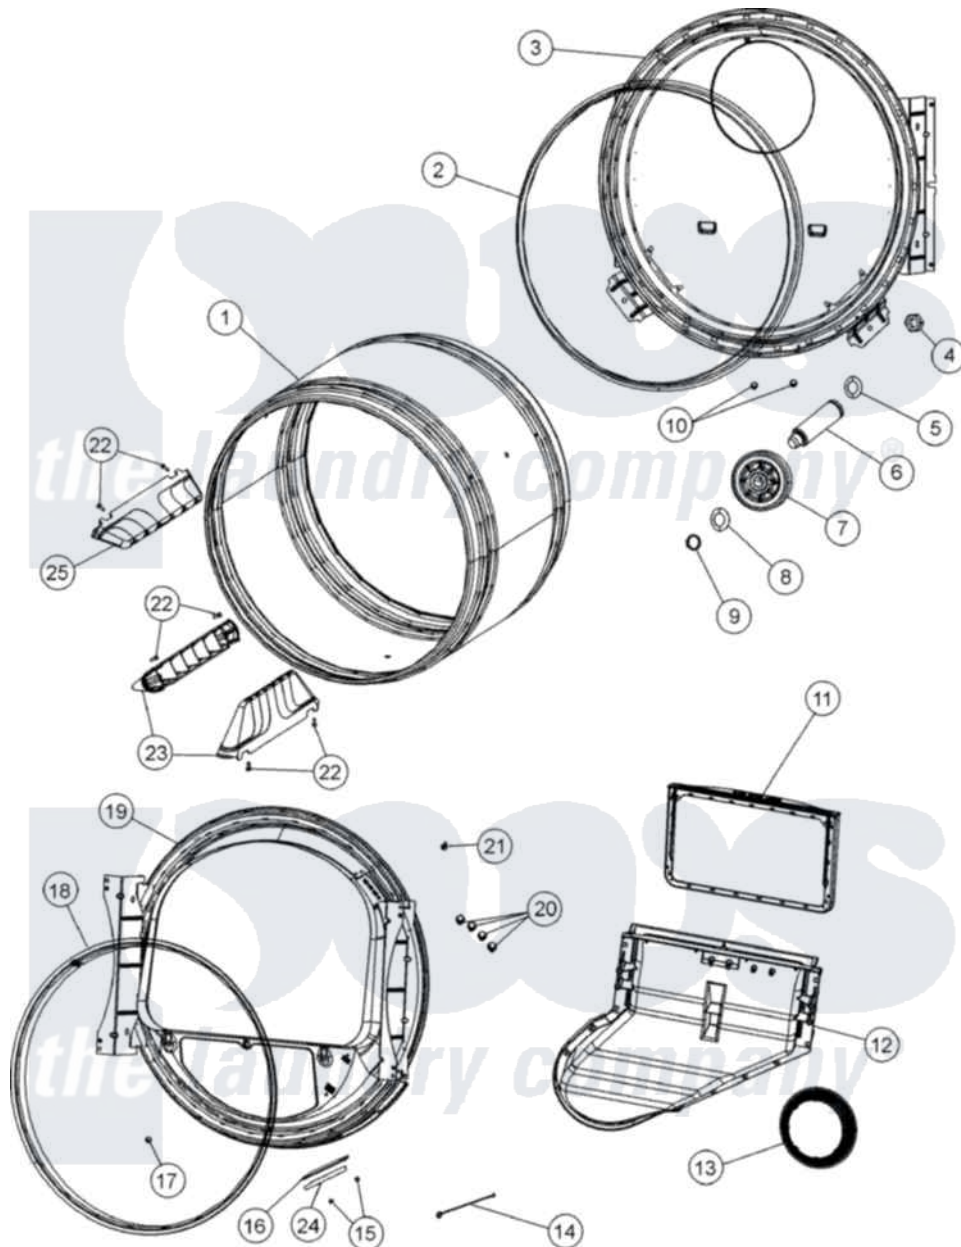

Crosley [Residential Crosley CDG4205AWW Dryer Parts](#) Parts Diagram 05 - TUMBLER  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	33001794	<a href="#">33001889</a>		Tumbler
2	<a href="#">33001807</a>			Seal, Tumbler
3	<a href="#">33003037</a>			Tumbler Back And Seal
"	<a href="#">33002779</a>			Tumbler Back And Seal As-Pack
4	<a href="#">33001443</a>			Nut, Hex
5	<a href="#">312535</a>			Washer, Vault Mounting Brk.
6	Y312948	<a href="#">6-3129480</a>		Shaft- Tumbler
7	<a href="#">12001541</a>			Drum Roller/Washer Assembly--W
8	<a href="#">312535</a>			Washer, Vault Mounting Brk.
9	410233	<a href="#">9703438</a>		Ring-Retrn
10	211294	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
11	<a href="#">33001808</a>			Filter, Lint
12	<a href="#">33001799</a>			Outlet Duct Assembly Note: Outlet Duct Assembly
13	<a href="#">33002560</a>			Seal, Blower

14	<a href="#">Y303711</a>		Sensor Ground Wire
15	<a href="#">210720</a>		Rivet, Bearing To Tumbler Fmt
16	<a href="#">306508</a>		Tumbler Bearing Kit ---W
17	312311	<a href="#">312311MAY</a>	Screw
18	<a href="#">33001807</a>		Seal, Tumbler
19	<a href="#">33001868</a>		Front, Tumbler Front W/Sensor Note: Front, Tumbler
20	33001855	<a href="#">33002917</a>	Screw, No.10-16
21	<a href="#">33001871</a>		Screw Note: Screw, Drum Light
22	33001788	<a href="#">33002973</a>	Screw, No.9-15 X 1.00 Hx WS
23	<a href="#">33002032</a>		Baffle
24	312940	<a href="#">306508</a>	Tumbler Bearing Kit ---W
25	<a href="#">33001755</a>		Baffle

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>