


# Crosley CDG6000A 02 - CONTROL PANEL

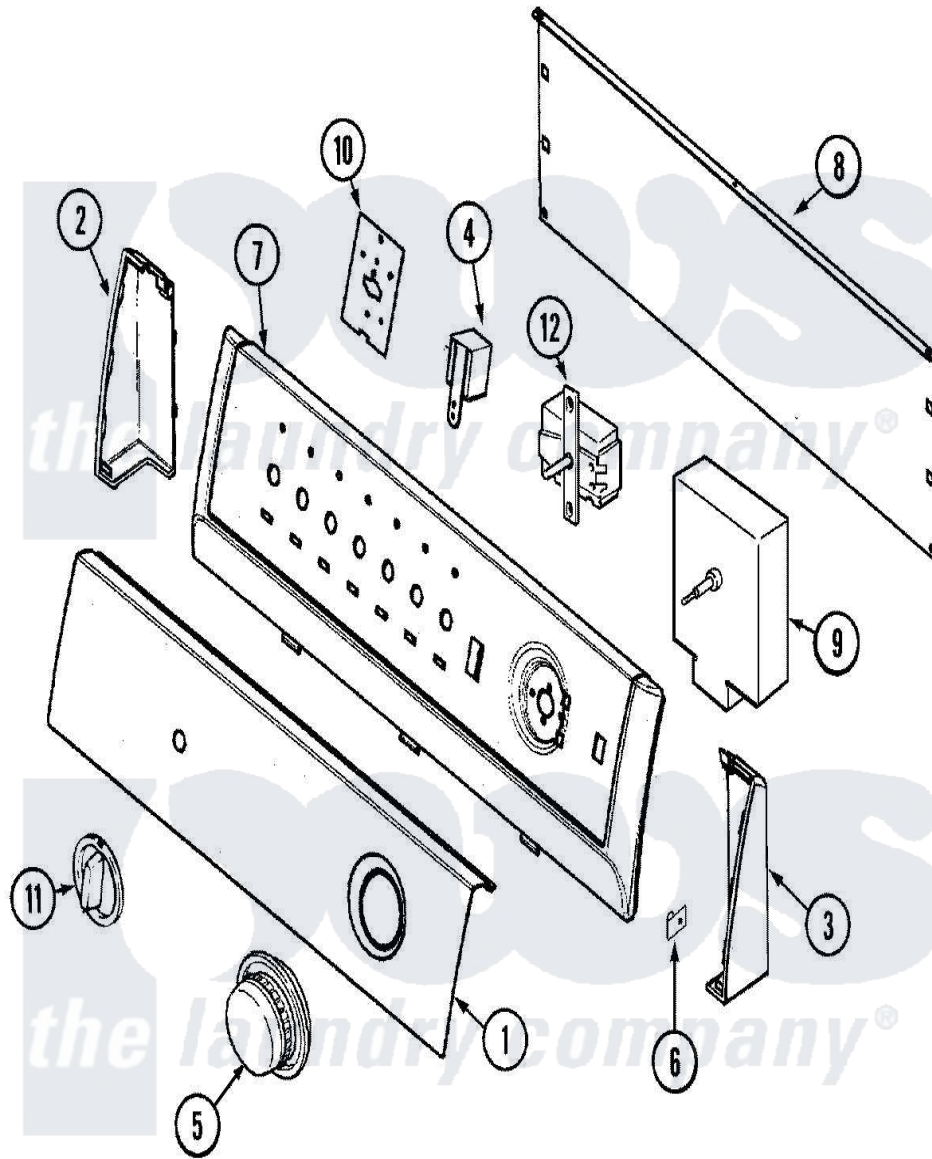

Crosley [Residential Crosley CDG6000A Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">31001392</a>			Panel, Control
2	21001557	<a href="#">21001769</a>		Endcap, Panel
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001564	<a href="#">21001768</a>		Endcap, Panel
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
4	<a href="#">53-1639</a>			Buzzer Assembly
5	<a href="#">31001393</a>			Knob And Skirt Assembly
6	<a href="#">25-7851</a>			Speedclip, End Cap To Top
7	21001560	<a href="#">21001767</a>		Frame
8	<a href="#">25-3457</a>			Screw, Sems
"	<a href="#">21001527</a>			Shield, Rear
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1810</a>			Timer

10	53-2504	<a href="#">31001193</a>	Pad, Shield
"	<a href="#">31001193</a>		Pad, Shield
"	<a href="#">21001517</a>		Shield, Control
11	21001556	<a href="#">21001772</a>	Knob, Selector
12	31001348	<a href="#">31001449</a>	Switch, Selector
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
NI	21001419	Not Available	MANUAL, LAUNDERING TIPS
"	31001418	Not Available	MANUAL, USE & CARE
"	31001460	Not Available	MANUAL, USE & CARE (SPAN)

