


Crosley CDG6000A 03 - DOOR

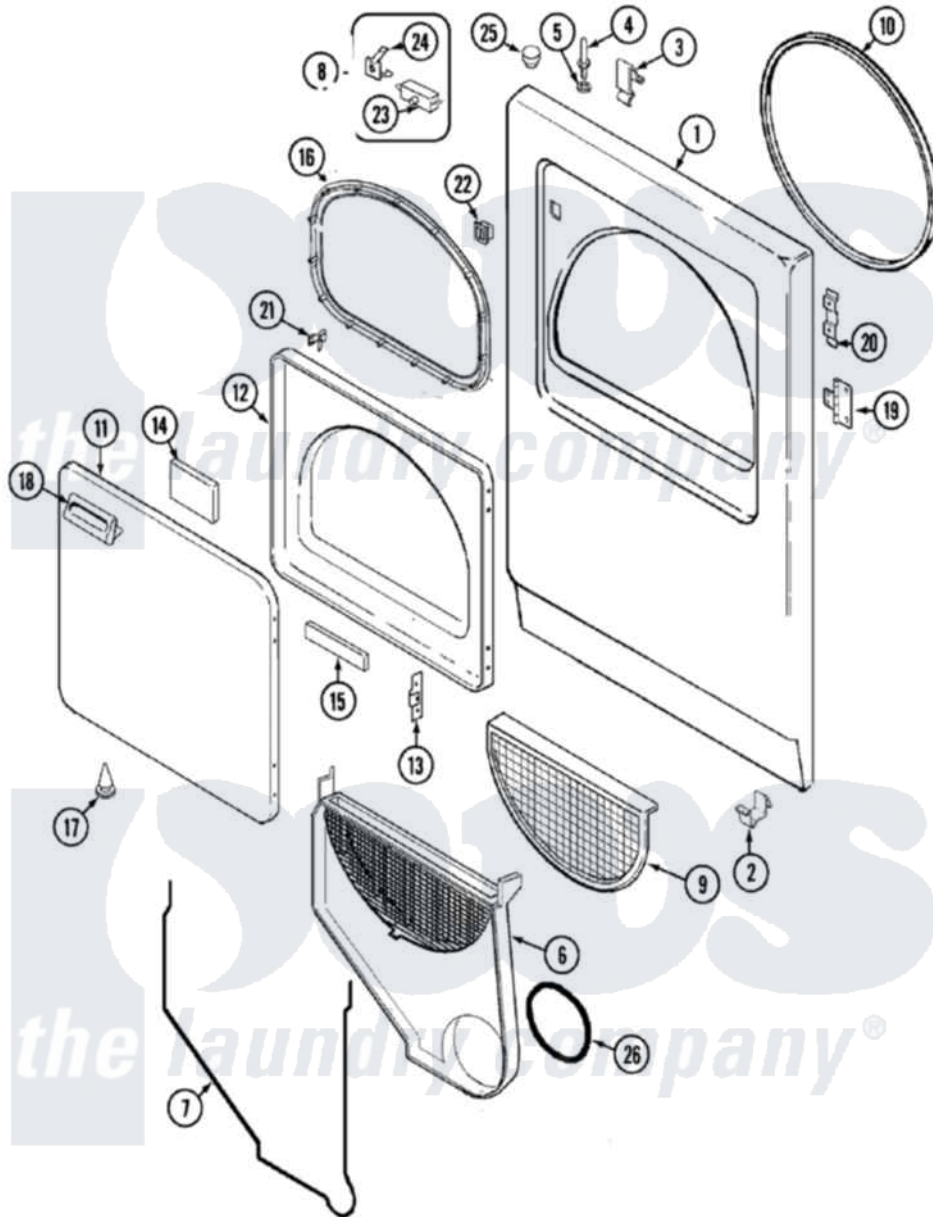

Crosley Residential Crosley CDG6000A Dryer Parts Parts Diagram 03 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	12001210		Not Available	KIT, FRONT PANEL (ALM)
2	53-0120			Clip, Front Panel
3	25-7220			Clip, Cabinet Top
4	53-0643			Pin, Locator
5	25-0224	3400029		Nut, Adapter Plate
"	53-0200			Sleeve, Locator Pin
6	12001324			Duct Kit, Collector
"	25-7810	415013-35		Screw
7	53-0204			Seal
8	LA-1005			Switch Kit
9	53-0918			Filter, Lint
10	53-0281	31001747		Seal Assembly
11	53-0154-24			Panel, Outer Door
"	25-7770	3196169		Screw, Element
12	53-0912-24		Not Available	PANEL, INNER DOOR (ALM)
13	53-0119			Clip, Hinge

14	53-1490		Door Pad
15	53-1491		Door Pad
16	53-0648	31001529	Seal, Door
17	25-7889		Plug Button
18	25-7810	415013-35	Screw
"	31001115	31001482	Handle, Door
19	53-1492		Hinge, Dryer Door
"	25-7809		Screw, No.6-20 1/2 Flthd Torx
20	53-0121	Not Available	TWIN NUT
21	53-2364	LA-1003	Door Catch Kit
"	LA-1003		Door Catch Kit
22	53-0187	LA-1003	Door Catch Kit
23	53-0147	53-0148	Switch, Door
24	63-5990	31001319	Clip, Switch
25	33-2653		Bumper, Cabinet
26	53-0203	12001324	Duct Kit, Collector

