


Crosley CDG6500W 01 - CABINET

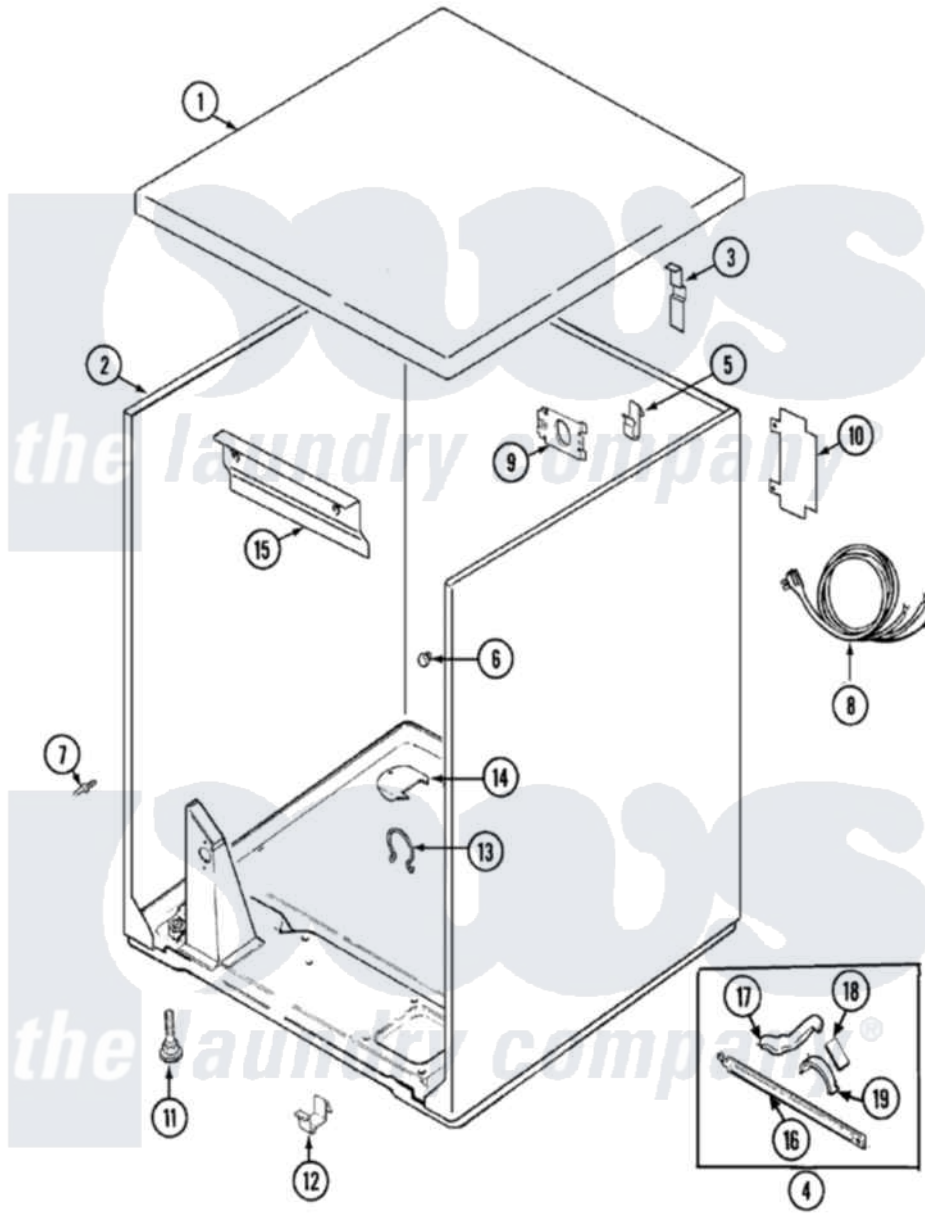

Crosley [Residential Crosley CDG6500W Dryer Parts](#) Parts Diagram 01 - CABINET
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001423			Top, Cabinet
2	31001714			Cabinet And Base Assembly
3	35-4128			Pad, Hinge
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-5712			Hinge, Cabinet Top
4	12002126			Reinforcement Brace/Glide Kit
5	25-3034			Clip, Wiring
6	33-2653			Bumper, Cabinet
7	21001829			Post, Locating
8	31001547			Cord, Power
11	63-5834		Not Available	LEG, LEVELING
12	53-0120			Clip, Front Panel
13	31001320	16515		Clip
14	53-1921			Shield, Wiring
"	25-7733	681414		Screw, 10AB X 1/2
16	53-1625			Brace, Tumbler Support

17 [31001469](#)

Glide, Tumbler

18 [31001356](#)

Pad, Glide

19 [31001470](#)

Glide, Tumbler

