


Crosley CDG6500W 02 - CONTROL PANEL

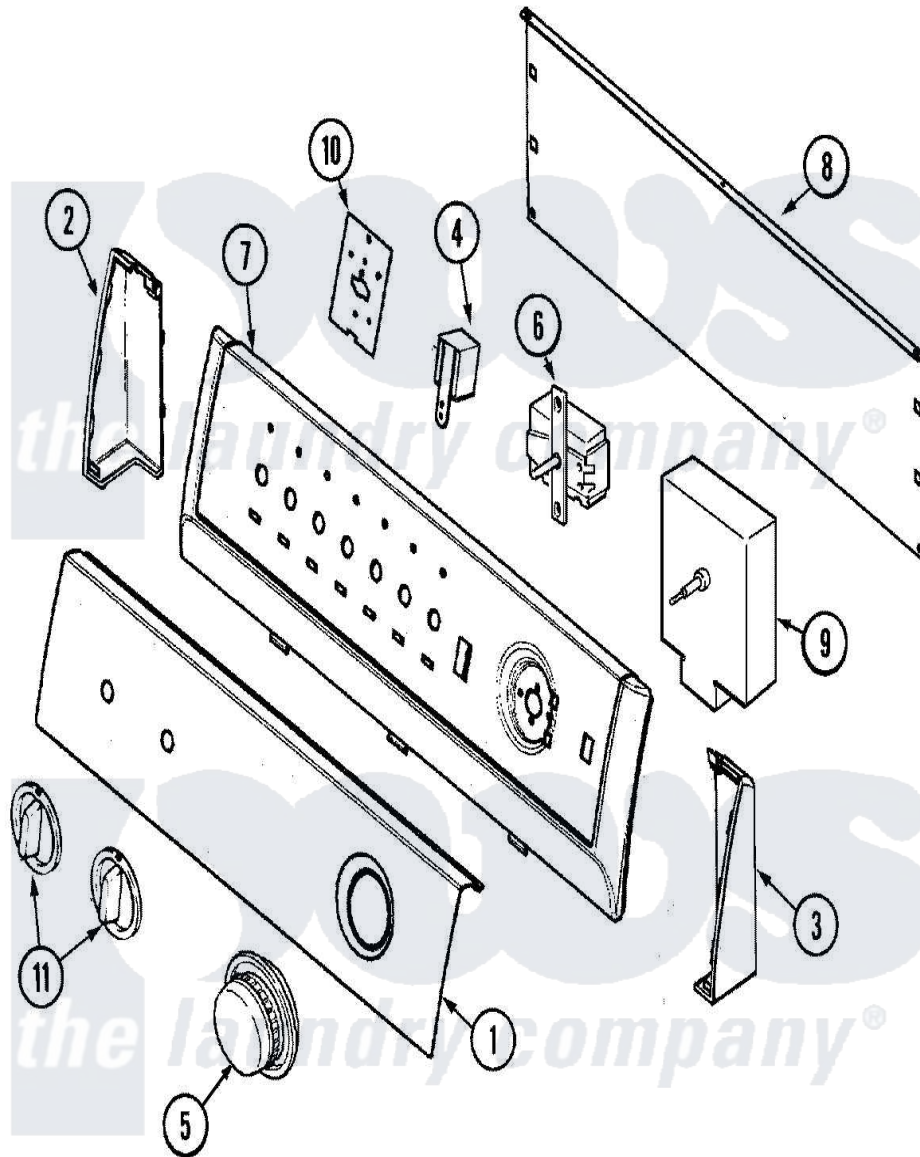

Crosley [Residential Crosley CDG6500W Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001735			Panel, Control
2	21001546			Endcap, Panel
3	21001547			Endcap, Panel
4	31001397			Buzzer
5	31001388			Knob/Skirt, Timer
6	53-4394			Switch, Temperature
"	31001449			Switch, Selector
7	21001552			Frame , Control Panel
8	21001527			Shield, Rear
9	53-1810			Timer
10	21001517			Shield, Control
11	21001544			Knob, Selector
NI	31001491			Harness, Wire
"	21001978			Lead Assembly
"	31001740			Lead Assembly
"	31001741		Not Available	LEAD ASSEMBLY (BUZZER)