


Crosley CDG7500Q 02 - CONTROL PANEL

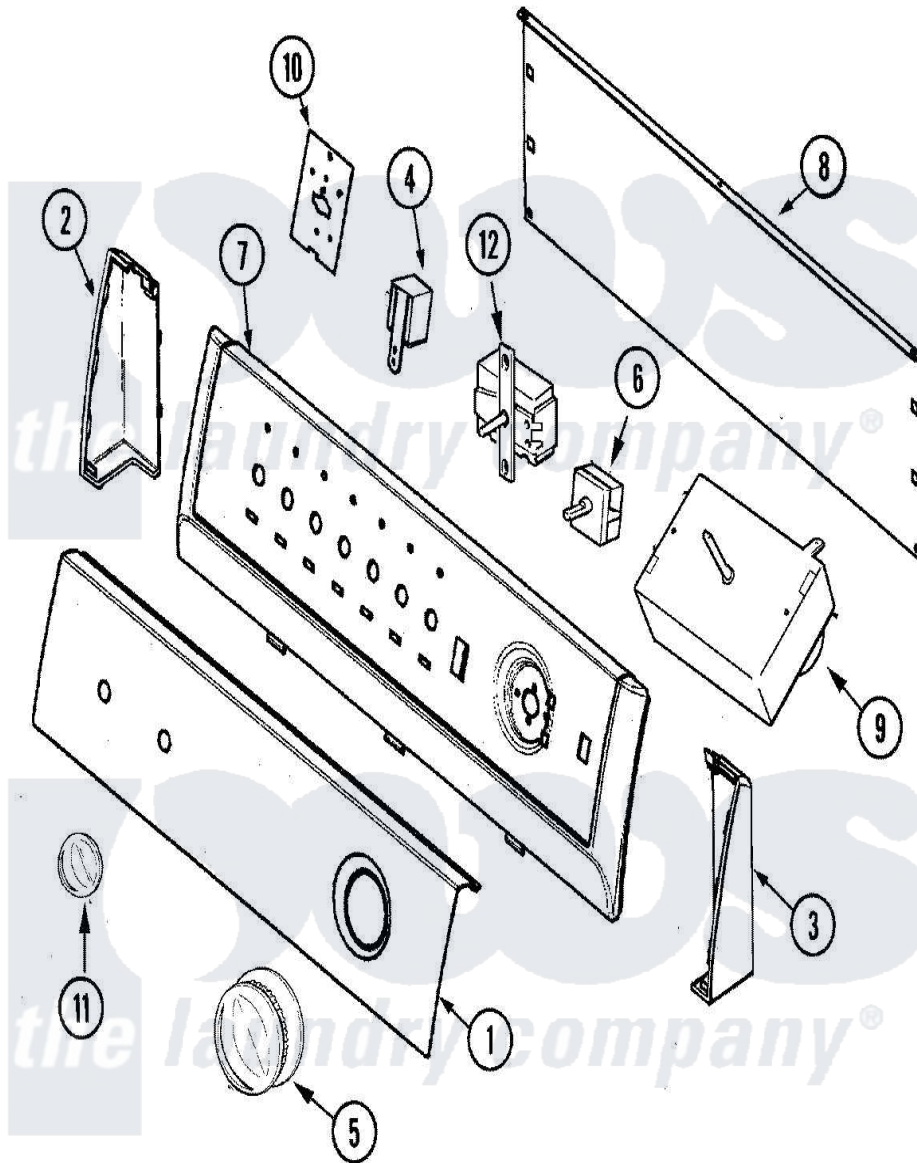

Crosley [Residential Crosley CDG7500Q Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|--------------------------|--------------------------|---------------|---|
| 1 | 31001521 | | | Panel, Control |
| 2 | 21001769 | | | Endcap, Panel |
| 3 | 21001768 | | | Endcap, Panel |
| 4 | 53-1639 | | | Buzzer Assembly |
| 5 | 31001475 | 31001506 | | Knob/Skirt, Timer |
| 6 | 31001190 | | | Switch, Two Position Rotary |
| 7 | 21001767 | | | Frame |
| 8 | 21001527 | | | Shield, Rear |
| 9 | 25-3092 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| " | 53-1815 | 31001513 | | Timer |
| 10 | 21001517 | | | Shield, Control |
| 11 | 21001772 | | | Knob, Selector |
| 12 | 31001243 | 31001445 | | Switch, Temperature |
| NI | 31001491 | | | Harness, Wire |
| " | 21001812 | | Not Available | MANUAL, USE & CARE (FRENCH) |

