


Crosley CDG8500W 02 - CONTROL PANEL

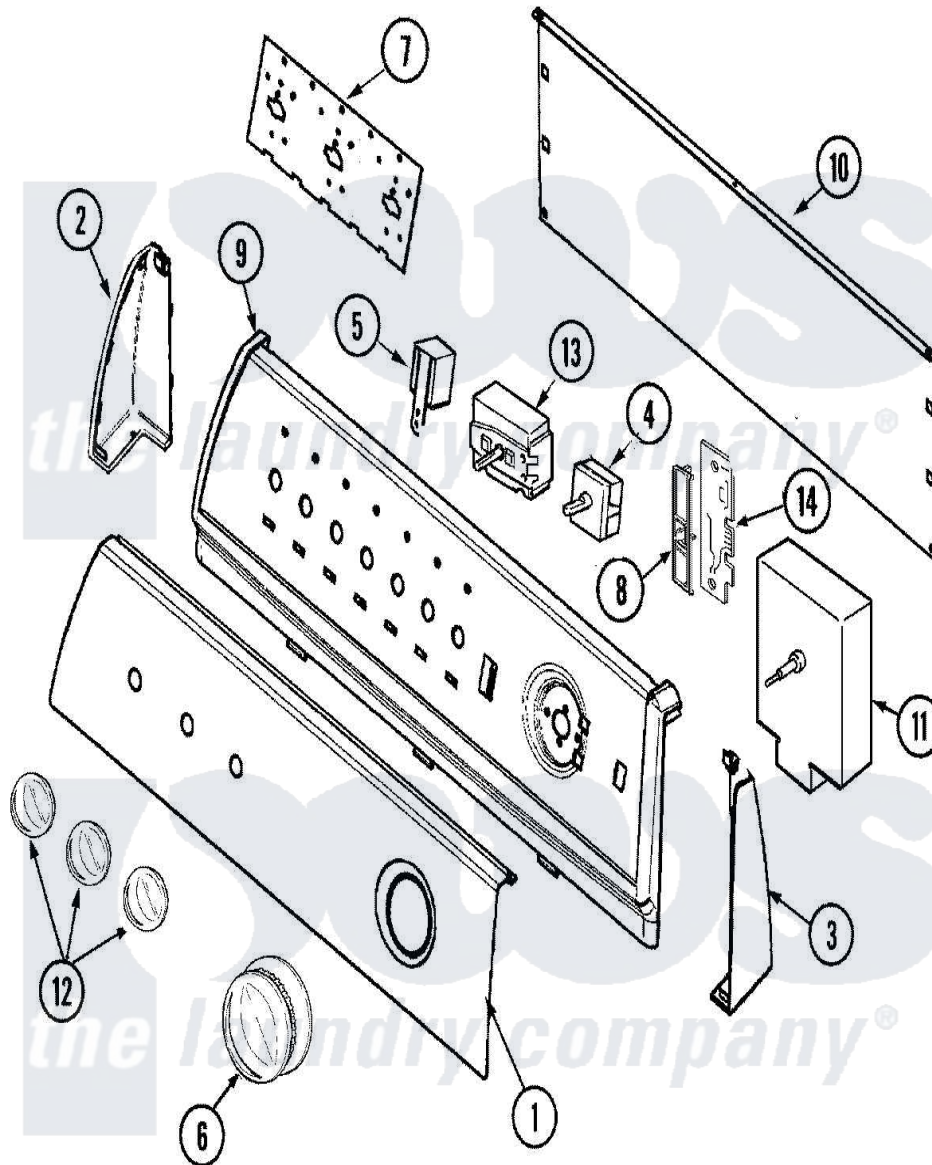

Crosley [Residential Crosley CDG8500W Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001737			Panel, Control
2	21001546			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	21001547			Endcap, Panel
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	31001190			Switch, Two Position Rotary
5	31001397			Buzzer
6	31001388			Knob/Skirt, Timer
7	21001603			Shield, Control
8	31001507			Bracket, Circuit Board
9	21001552			Frame , Control Panel
10	21001527			Shield, Rear
11	31001513			Timer
12	21001544			Knob, Selector
13	31001704			Resistor Assembly

13	31001704		Temperature
"	31001447		Switch, Temperature
14	33001212		Board, Control-Moisture Sensor
NI	31001509		Harness, Wire
"	31001741	Not Available	LEAD ASSEMBLY (BUZZER)
"	21001980		Lead Assembly
"	31001558		Lead Assembly
"	31001740		Lead Assembly

