


Crosley CED126SXQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: CED126SXQ1
(Designer White)

29" ELECTRIC DRYER

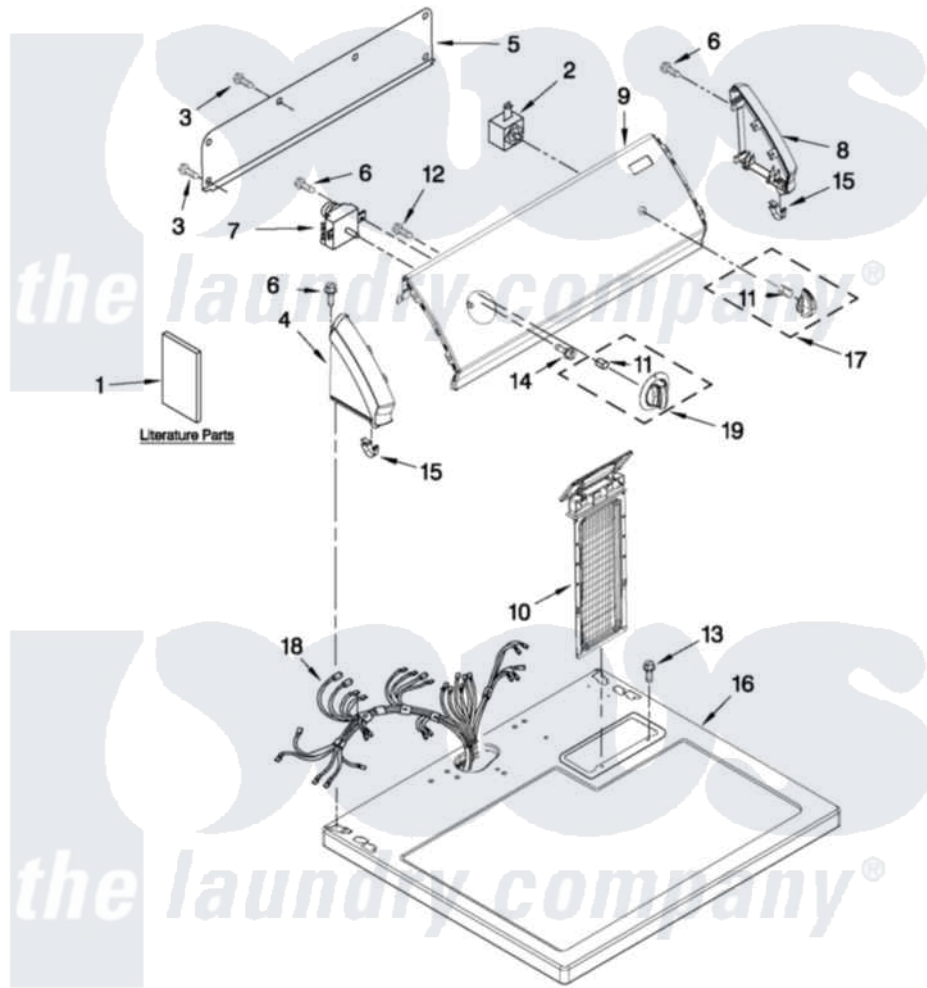

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3-11 Litho in U.S.A. (JLP)(bay)

1

Part No. W10402426 Rev. A

Crosley Residential Crosley CED126SXQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096992		Not Available	USE & CARE GUIDE
"	W10185989		Not Available	WIRING DIAGRAM
2	3977456			Switch, Push-To-Start
3	693995			Screw, Hex Head
4	8559502			Cap, End
5	8274261			Do-It-Yourself Repair Manuals
6	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	W10185988			Timer, 60 Hz
8	8559501			Cap, End
9	W10115483			Panel Console And Bracket Assembly
10	8558467			Screen, Lint
11	8536939			Clip, Knob
12	3400808			Screw. Mounting

13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533974	4331106	Screw, No.10-32 X 7/16
15	8312709		Clip-Console
16	8559800	8563663	Top
17	W10317459		Knob, Push-To-Start
18	W10366762		Harness, Wiring
19	W10317457		Knob, Timer Assembly

