


Crosley CED126SXQ1 02 - CABINET PARTS

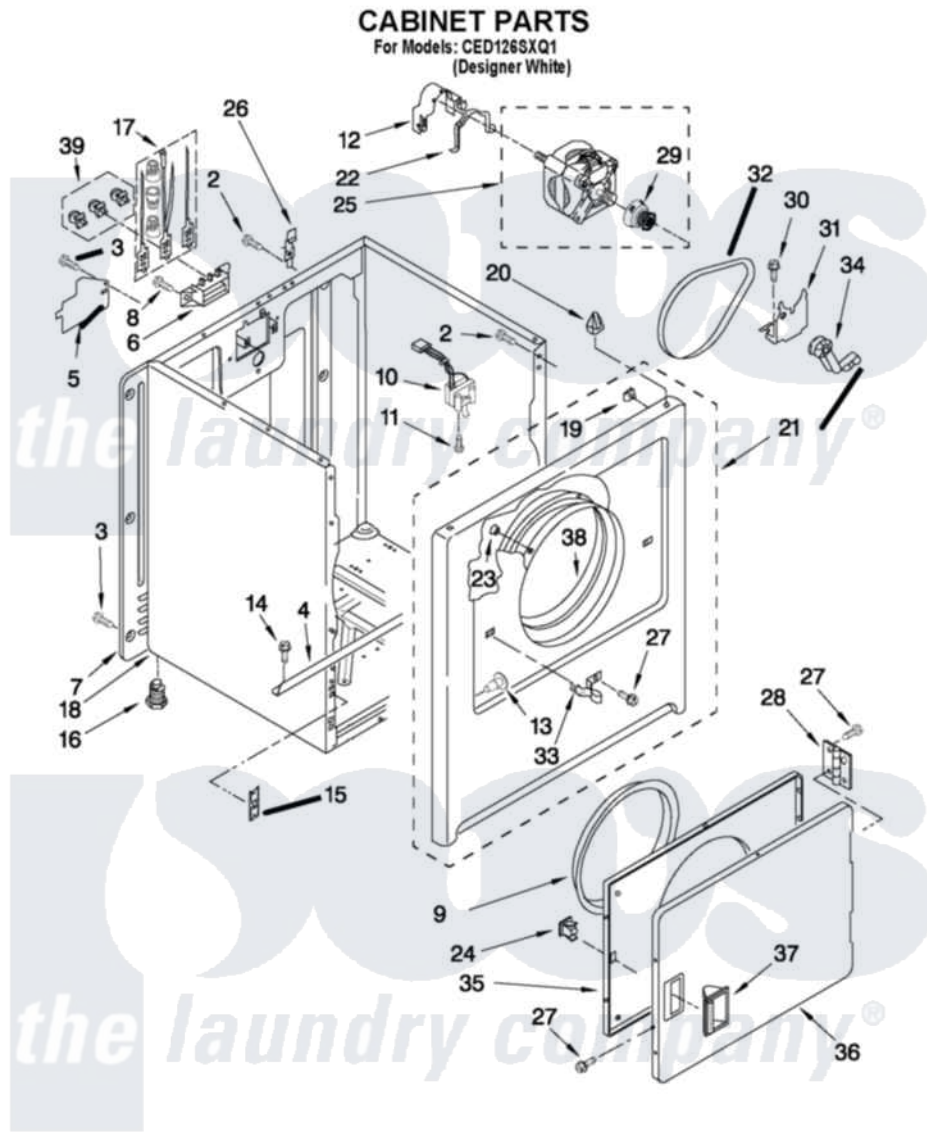

CABINET PARTS

For Models: CED126SXQ1
(Designer White)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10402426

3

Crosley [Residential Crosley CED126SXQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	343641	681414		Screw, 10AB X 1/2
3	693995			Screw, Hex Head
4	W10236073			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	3397659			Block, Terminal
7	3396807	280040		Panel-Rear
8	3393008	308685		Side Trim)
9	3405245			5/16-18 X 3/4
10	3406105			Door Switch Assembly
11	697773	3395530		Screw
12	3404162			Clamp, Motor
13	3404413			Plug, Hinge Hole
14	3390631			Screw, 10-16 X 3/8
15	3394083			Clip, Front Panel
16	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional

17	279318		Terminal Tinned And Brass Panel
18	8530603	8533643	Cabinet
19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	3403571	279844	Panel
22	W10121316		Plug, Multivent
23	685203	279220	Clip
24	690081	279570	Latch
25	W10194250	279827	Motor-Drve
26	8066217		Hinge, Top
27	342055	488627	Screw
28	W10362431		Hinge And Pin Assembly
29	8066184		Pulley, Motor
30	3400500		Bolt, 3405245 5/16-18 X 3/4
31	348780		Base, Motor
32	W10131364	341241	Belt
33	696144	279570	Latch
34	691366		Idler And Pulley Assembly
35	3403371		Door, Inner
36	3403361		Door Front
37	3405184		Handle, Door
38	8066124	279264	Air Channel Box
39	279393		Terminal Block, Screw Kit

the laundry company[®]

the laundry company[®]