


Crosley CED137HXW0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

29" ELECTRIC DRYER

For Models: CED137HXW0, CED137HXQ0
(White) (Designer White)

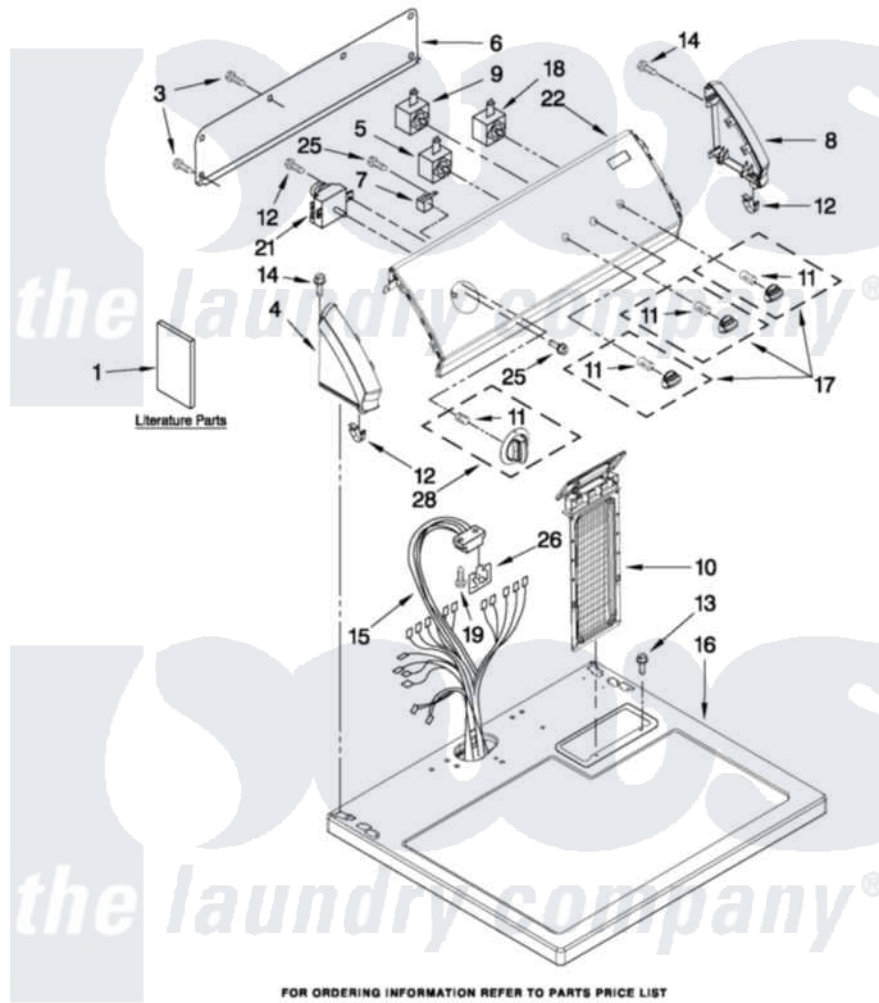

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

11-10 Litho in U.S.A. (L.T.) (eeb)

1

Part No. W10364744 Rev. A

Crosley [Residential Crosley CED137HXW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096992		Not Available	USE & CARE GUIDE
"	8578889		Not Available	Wiring Diagram
3	693995			Screw, Hex Head
4	8559502			Cap, End
5	3405156			Switch, Rotary
6	8274261			Do-It-Yourself Repair Manuals
7	694419			Mini-Buzzer
8	8559501			Cap, End
9	8578354			Switch, Temperature
10	8558463			HANDLE AND LINT SCREEN ASSEMBLY
11	8536939			Clip, Knob
12	8312709			Clip-Console
13	688983	487240		Screw, For Mtg. Service Capacitor

14	3400808		Screw. Mounting
15	8576544	W10071280	Hams-Wire
16	8559800	8563663	Top
17	W10317458		Knob, Control
18	W10117655		Switch, Push-To-Start
19	343641	681414	Screw, 10AB X 1/2
21	8566184		Timer Assembly
22	W10115485		Control Panel And Bracket Assembly
25	3348629	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
26	8558178		Control, Electronic
28	W10317457		Knob, Timer Assembly

the laundry company[®]

the laundry company[®]

the laundry company[®]