


Crosley CED137HXW0 02 - CABINET PARTS

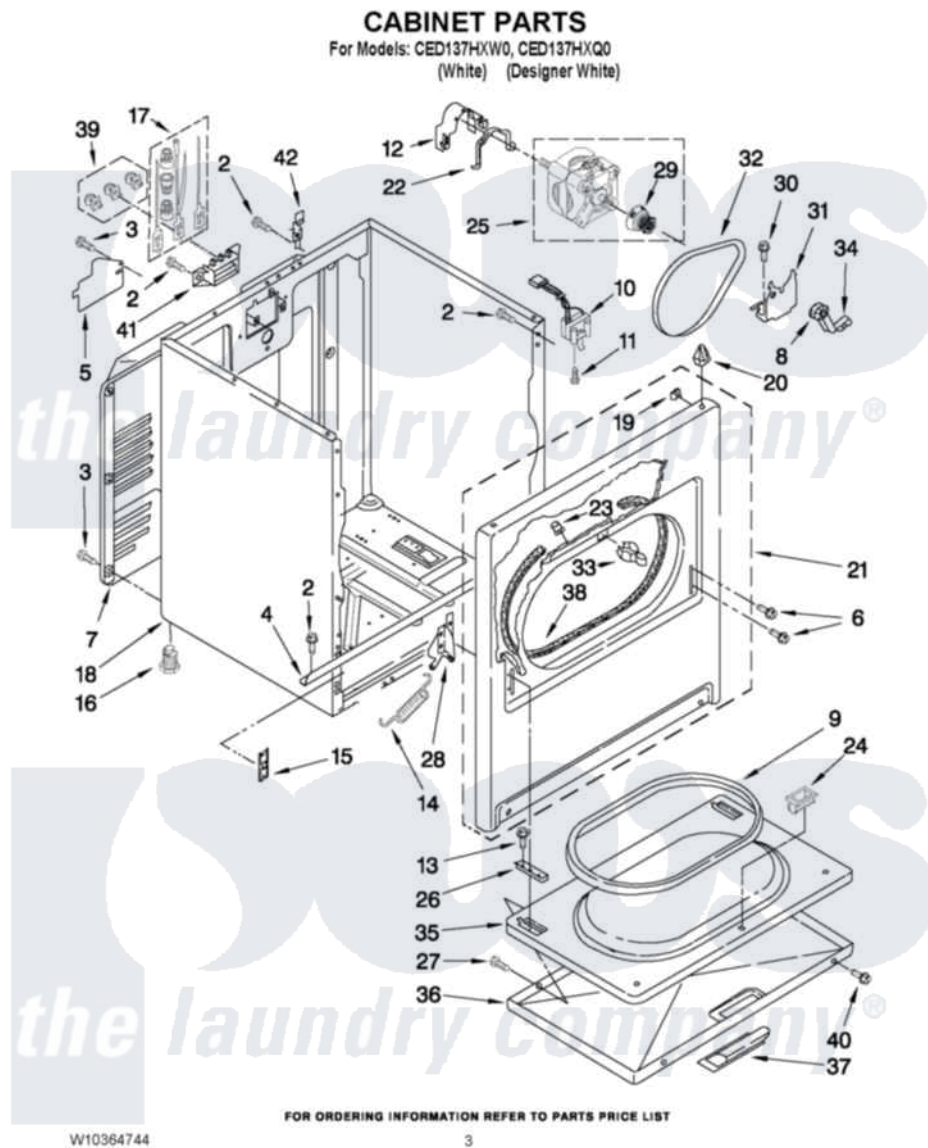

Crosley [Residential Crosley CED137HXW0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
2	3390631			Screw, 10-16 X 3/8
3	693995			Screw, Hex Head
4	W10236073			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	342043	486146		Screw
7	3396805	280043		Panel-Rear
8	691362			Idler Pulley And Bearing Assembly
9	3390731			Seal, Door
10	3406107			Door Switch Assembly
11	697773	3395530		Screw
12	3404162			Clamp, Motor
13	3357011	308685		Side Trim)
14	W10041960			Spring, Door
15	3394083			Clip, Front Panel
16	3392100	49621		Feet-Leveling
"	279810			Foot-Optional

17	279318		Terminal Tinned And Brass Panel
18	8530603	8533643	Cabinet
19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	695620	279443	Panel
22	W10121316		Plug, Multivent
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	W10194250	279827	Motor-Drve
26	337189		Clip, Hinge
27	694091		Trim, Side Right Hand
28	8066056		Hinge, Door
"	8066057		Hinge, Door
29	8066184		Pulley, Motor
30	3400500		Bolt, 3405245 5/16-18 X 3/4
31	348780		Base, Motor
32	W10131364	341241	Belt
33	696144	279570	Latch
34	691366		Idler And Pulley Assembly
35	695737		Door, Rear
36	3393549		Door, Front
37	690270	348721	Handle
38	3406129		Seal And Bearing Assembly
39	279393		Terminal Block Screw Kit
40	342055	488627	Screw
41	3397659		Block, Terminal
42	8066217		Hinge, Top

the laundry company[®]

lws
the laundry company[®]