


Crosley CED147HXW0 01 - TOP AND CONSOLE PARTS

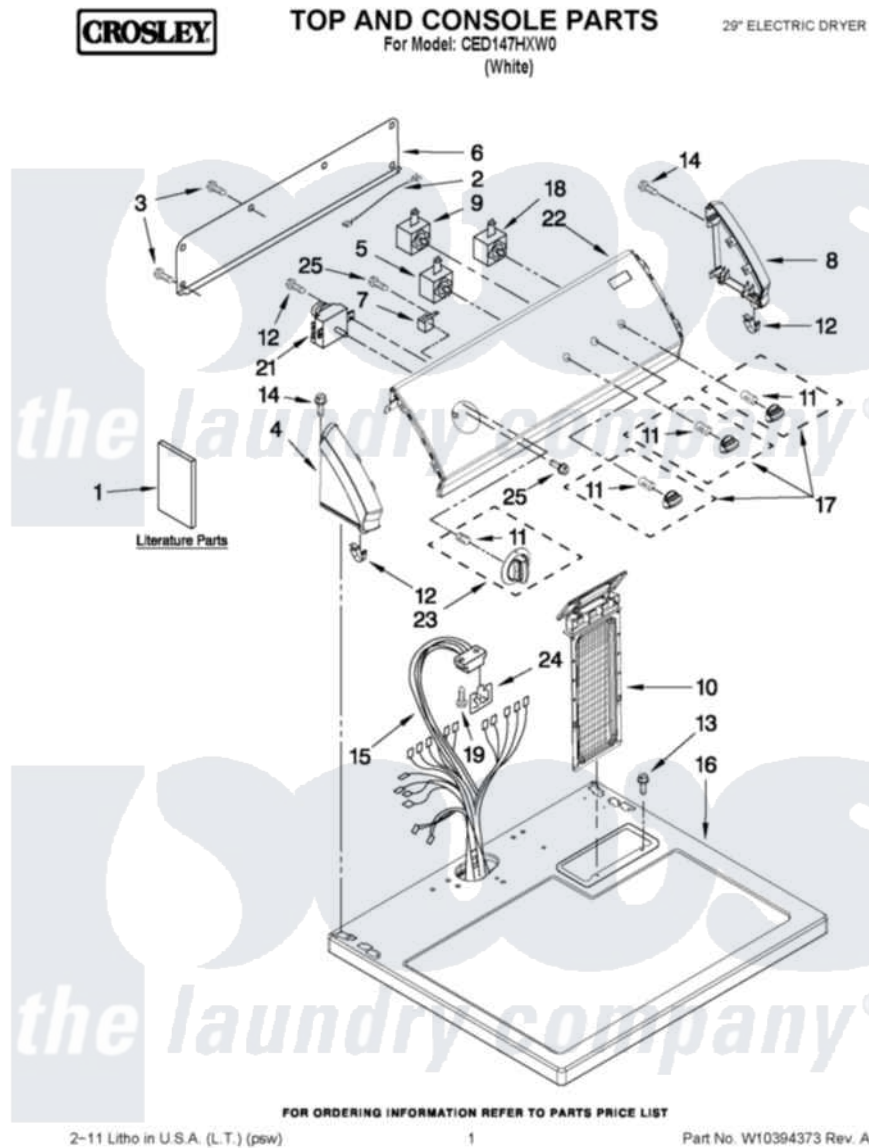

Crosley Residential Crosley CED147HXW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096992		Not Available	USE & CARE GUIDE
"	8578889		Not Available	Wiring Diagram
2	W10113080			Wire, Jumper
3	693995			Screw, Hex Head
4	8559502			Cap, End
5	3405156			Switch, Rotary
6	8274261			Do-It-Yourself Repair Manuals
7	694419			Mini-Buzzer
8	8559501			Cap, End
9	8578354			Switch, Temperature
10	8558463			HAndle And Lint Screen Assembly
11	8536939			Clip, Knob
12	8312709			Clip-Console
13	688082	487240		Screw, For Mtg. Service

13	000903	907440	Capacitor
14	3400808		Screw, Mounting
15	8576544	W10071280	Harns-Wire
16	8559800	8563663	Top
17	W10317458		Knob, Control
18	W10117655		Switch, Push-To-Start
19	343641	681414	Screw, 10AB X 1/2
21	8566184		Timer Assembly
22	W10115485		Control Panel And Bracket Assembly
23	W10317457		Knob, Timer Assembly
24	8558178		Control, Electronic
25	3348629	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

the laundry company[®]

the laundry company[®]

the laundry company[®]