


Crosley CEDS1043VQ1 01 - CABINET PARTS

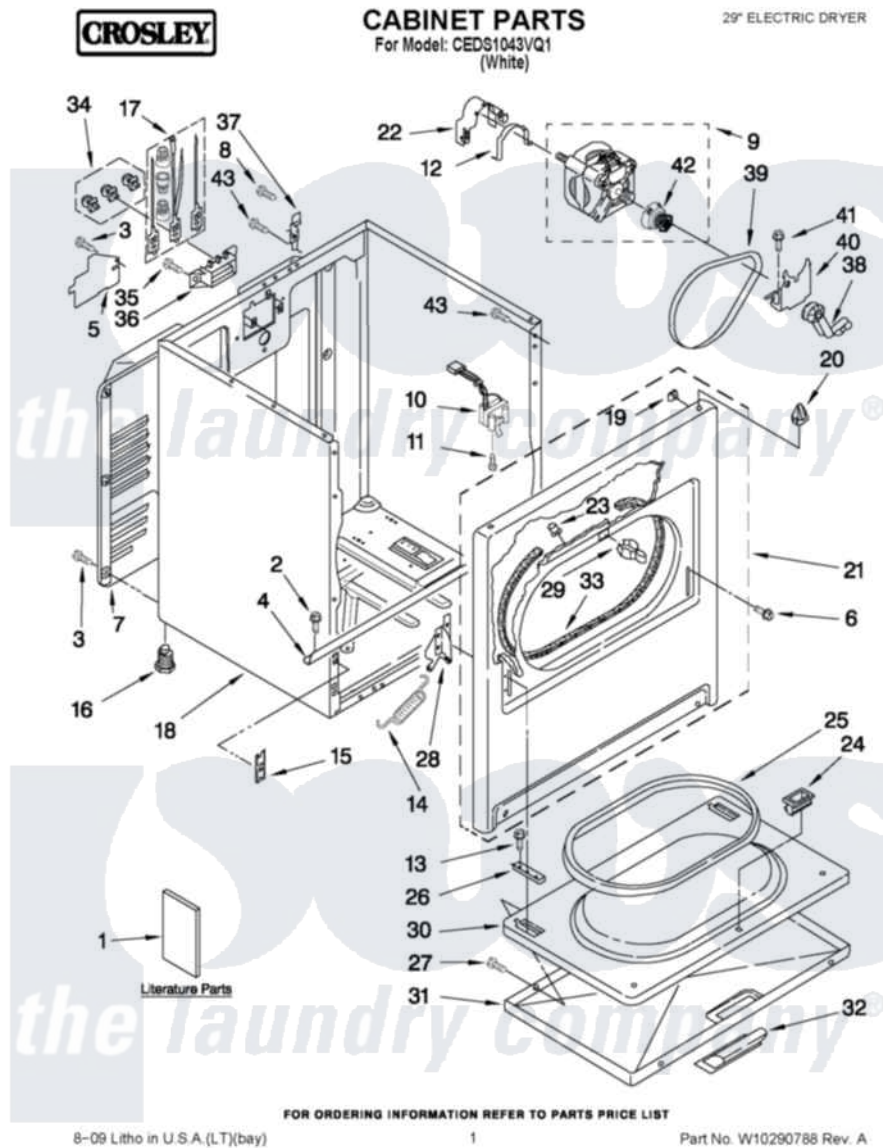

Crosley [Residential Crosley CEDS1043VQ1 Dryer Parts](#) Parts Diagram 01 - CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8577187		Not Available	Instructions, Installation
"	W10112315		Not Available	Sheet, Cycle Feature
"	W10223589		Not Available	Guide, Use & Care
"	W10185985		Not Available	Wiring Diagram
2	3390631			Screw, 10-16 X 3/8
3	693995			Screw, Hex Head
4	8541400			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	342043	486146		Screw
7	3396805	280043		Panel-Rear
8	8533974	4331106		Screw, No.10-32 X 7/16
9	W10194250	279827		Motor-Drive
10	3406107			Door Switch Assembly
11	697773	3395530		Screw
12	W10121316			Plug, Multivent
13	3357011	308685		Side Trim)

14	W10041960		Spring, Door
15	3394083		Clip, Front Panel
16	3392100	49621	Feet-Leveling
NI	279810		Foot-Optional
17	279318		Terminal Tinned And Brass Panel
18	8530603	8533643	Cabinet
19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	695620	279443	Panel
22	3404162		Clamp, Motor
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	3390731		Seal, Door
26	337189		Clip, Hinge
27	694091		Trim, Side Right Hand
28	8066056		Hinge, Door
"	8066057		Hinge, Door
29	696144	279570	Latch
30	695737		Door, Rear
31	3393549		Door, Front
32	690270	348721	Handle
33	3406129		Seal And Bearing Assembly
34	279393		Terminal Block Screw Kit
35	3393008	308685	Side Trim)
36	3397659		Block, Terminal
37	8066217		Hinge, Top
38	691366		Idler And Pulley Assembly
39	W10131364	341241	Belt
40	348780		Base, Motor
41	3400500		Bolt, 3405245 5/16-18 X 3/4
42	8066184		Pulley, Motor
43	343641	681414	Screw, 10AB X 1/2

