


Crosley CGD126SXQ0 01 - TOP AND CONSOLE PARTS

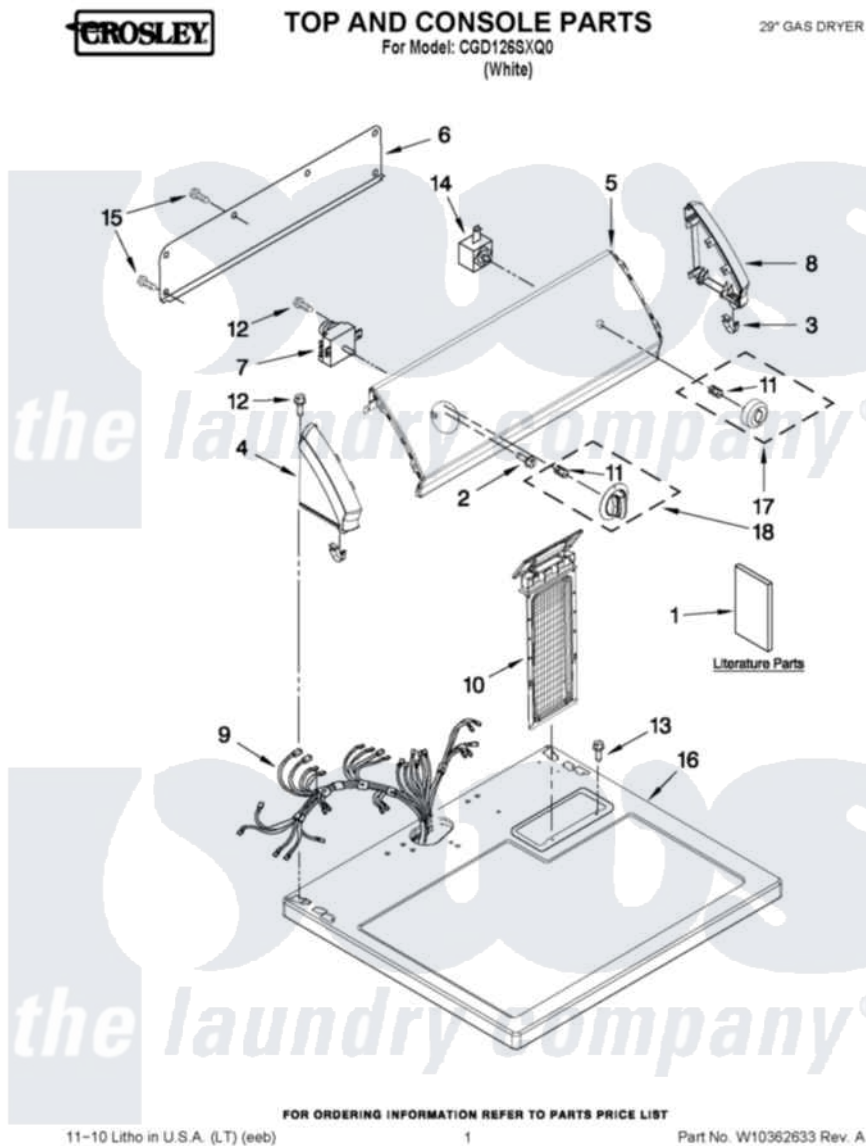

Crosley Residential Crosley CGD126SXQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10096992		Not Available	USE & CARE GUIDE
"	W10348336		Not Available	WIRING DIAGRAM
2	8533974	4331106		Screw, No.10-32 X 7/16
3	8312709			Clip-Console
4	8559502			Cap, End
5	W10115483			Panel Console And Bracket Assembly
6	8274261			Do-It-Yourself Repair Manuals
7	3977678			Timer Assembly
8	8559501			Cap, End
9	8299877			Harness, Wiring
10	8557861			Screen, Lint
11	8536939			Clip, Knob
12	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

13	688923	Not Available	SCREW, 8-18 X 5/8
14	3977456		Switch, Push-To-Start
15	693995		Screw, Hex Head
16	8559800	8563663	Top
17	W10317459		Knob, Push-To-Start
18	W10317457		Knob, Timer Assembly

