


Crosley CGD126SXQ2 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: CGD126SXQ2
(White)

29" GAS DRYER

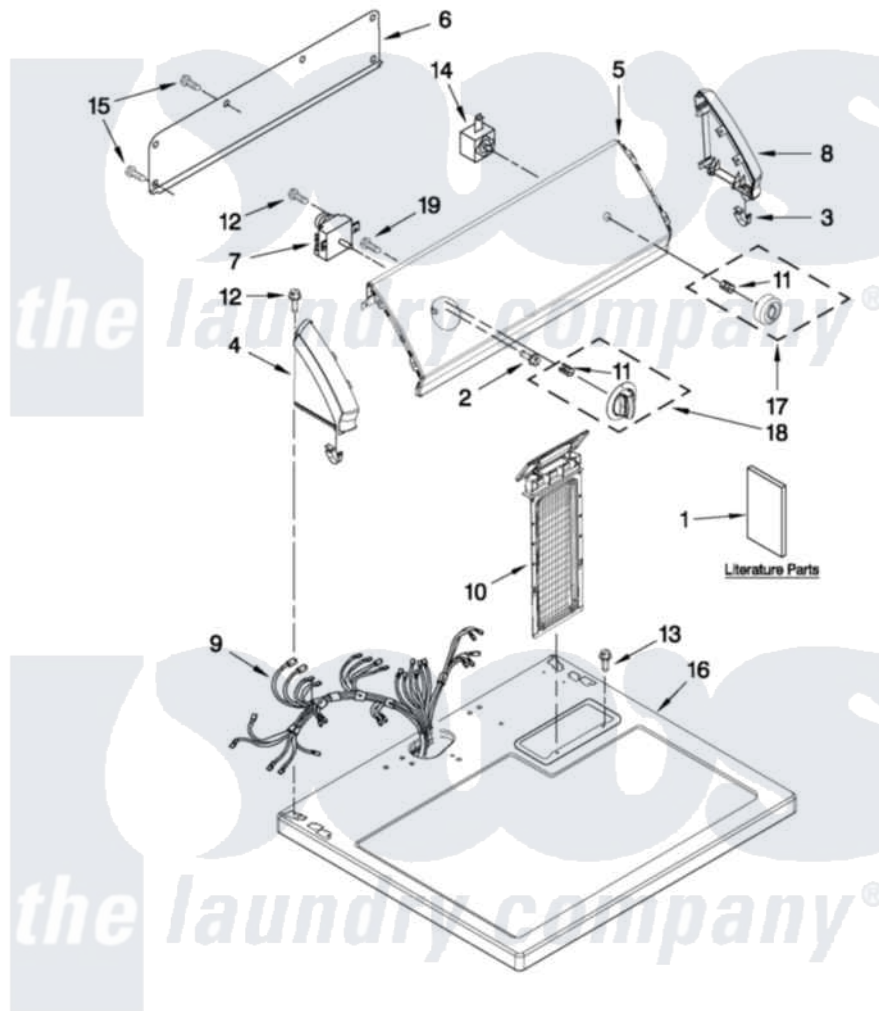

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

12-11 Litho in U.S.A. (BMN) (psw)

1

Part No. W10469884 Rev. A

Crosley [Residential Crosley CGD126SXQ2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10115228		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096992		Not Available	USE & CARE GUIDE
"	W10185990		Not Available	WIRING DIAGRAM
2	8533974	4331106		Screw, No.10-32 X 7/16
3	8312709			Clip-Console
4	8559502			Cap, End
5	W10115483			Panel Console And Bracket Assembly
6	8274261			Do-It-Yourself Repair Manuals
7	W10185987			Timer
8	8559501			Cap, End
9	W10366763			Harness, Wiring
10	8558467			Screen, Lint
11	8536939			Clip, Knob
12	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

13	688983	487240	Screw, For Mtg. Service Capacitor
14	3977456		Switch, Push-To-Start
15	693995		Screw, Hex Head
16	8559800	8563663	Top
17	W10317459		Knob, Push-To-Start
18	W10317457		Knob, Timer Assembly
19	3400818		Screw, Timer Mounting

