


Crosley CGD126SXQ2 02 - CABINET PARTS

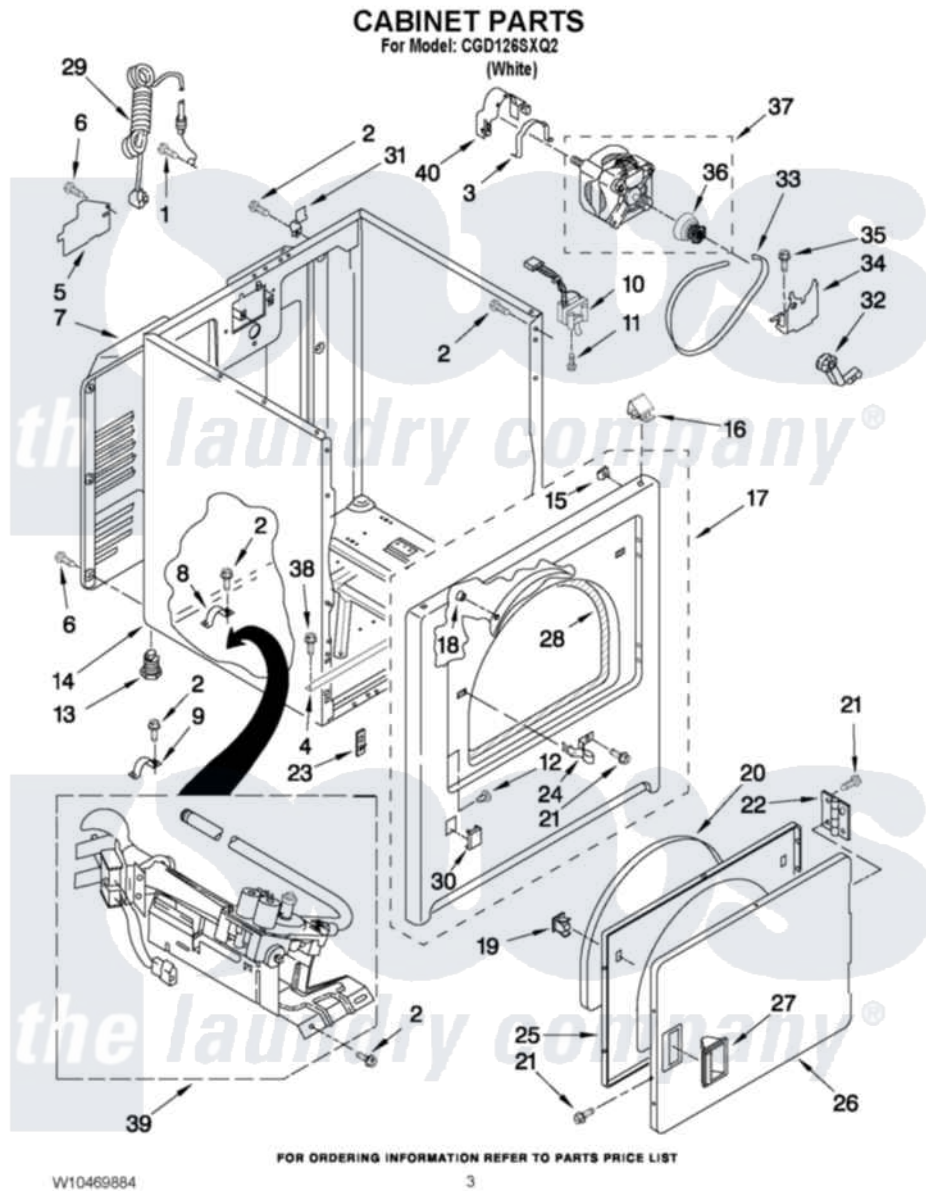

Crosley [Residential Crosley CGD126SXQ2 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	4331106		Screw, No.10-32 X 7/16
2	3390631			Screw, 10-16 X 3/8
3	W10121316			Plug, Multivent
4	W10236073			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	693995			Screw, Hex Head
7	3396807	280040		Panel-Rear
8	341029			Clamp, Pipe Door Spring
9	3980175			Clamp, Elbow
10	3406105			Door Switch Assembly
11	697773	3395530		Screw
12	3404413			Plug, Hinge Hole
13	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
14	8530603	8533643		Cabinet
15	98234			Clip, U-Bend

16	8066092		Lock, Front Top
17	3403574	279846	Panel
18	685203	279220	Clip
19	690081	279570	Latch
20	3405245		5/16-18 X 3/4
21	342055	488627	Screw
22	W10362431		Hinge And Pin Assembly
23	3394083		Clip, Front Panel
24	696144	279570	Latch
25	3403371		Door, Inner
26	3403361		Door Front
27	3405184		Handle, Door
28	8066124	279264	Air Channel Box
29	W10440460		Cord, Power
30	8564457		Plug, Front Panel
31	8066217		Hinge, Top
32	691366		Idler And Pulley Assembly
33	W10131364	341241	Belt
34	348780		Base, Motor
35	3400500		Bolt, 3405245 5/16-18 X 3/4
36	W10402909	Not Available	PULLEY, 60 HZ.
37	W10366770	279827	Motor-Drve
38	3390631		Screw, 10-16 X 3/8
39	W10336852	W10465748	Burner-Gas
40	3404162		Clamp, Motor

