


Crosley CGD126SXQ2 04 - W10336852 BURNER ASSEMBLY

W10336852 BURNER ASSEMBLY

For Model: CGD126SXQ2
(White)

USE WITH TYPE 1 - NATURAL, TYPE 2 - MIXED,
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

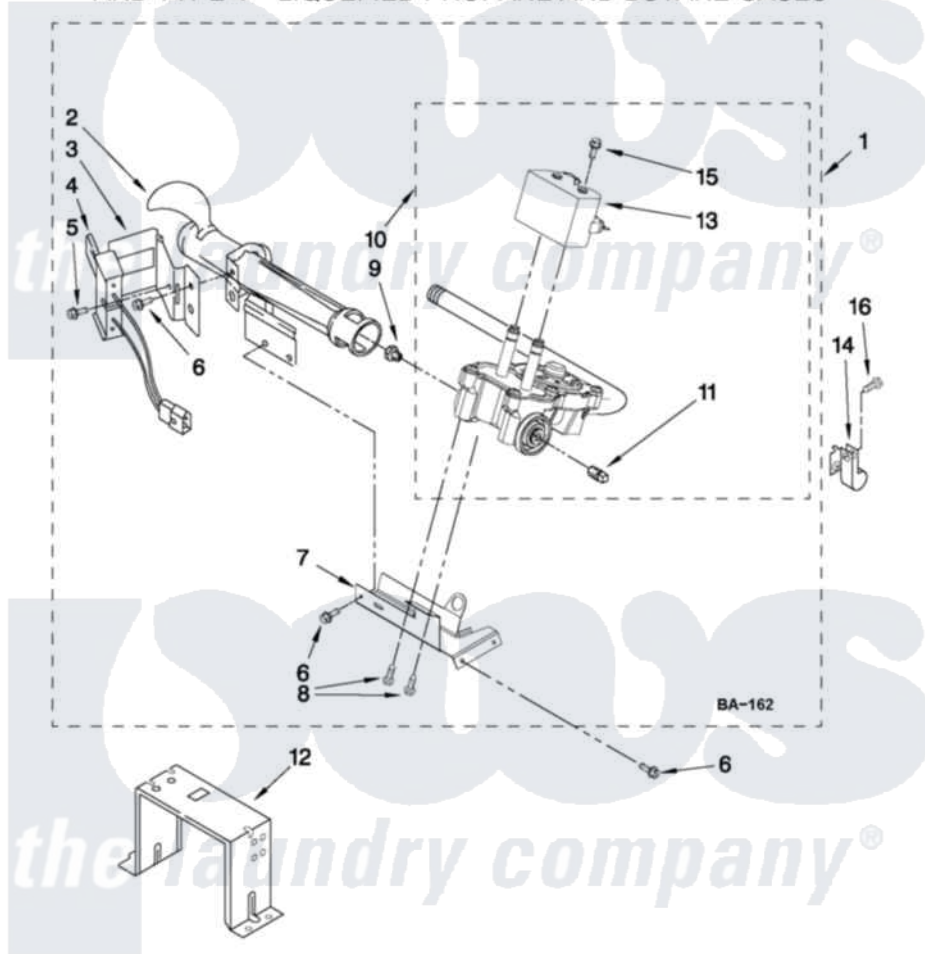

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10469884

7

Crosley [Residential Crosley CGD126SXQ2 Dryer Parts](#) Parts Diagram 04 - W10336852 BURNER ASSEMBLY
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10336852	W10465748		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	693986			Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234826			Orifice, Burner Type 1
10	W10304604	W10500695		Valve-Gas
11	W10295523			Plug, Pipe
12	3389889			Bracket, Support
13	W10328463			Coil, 60 Hz
14	3978776			Bracket, Gas Pipe Switch
15	326049536			Screw, Coil
16	3390647	488729		Screw

