


Crosley CGD137SXQ0 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: CGD137SXQ0
(Designer White)

29" GAS DRYER

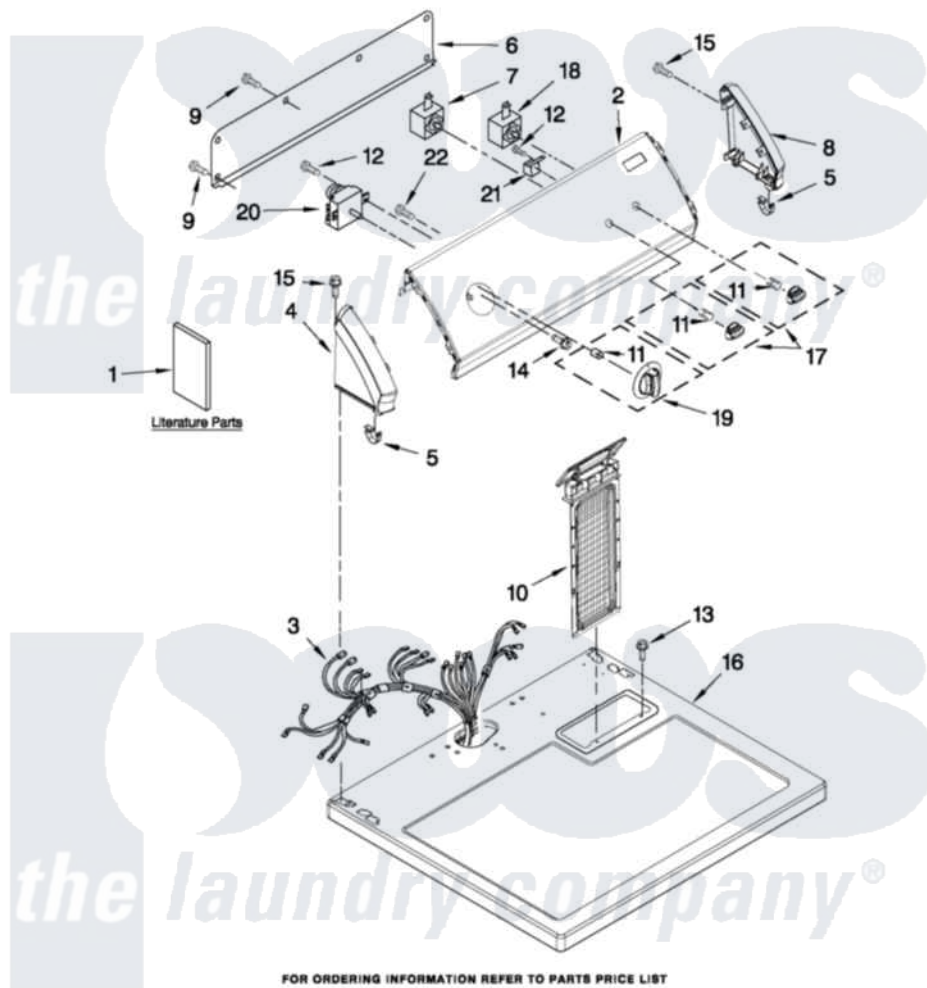

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

2-11 Litho in U.S.A. (L.T)(bay)

1

Part No. W10362640 Rev. A

Crosley Residential Crosley CGD137SXQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10096992		Not Available	USE & CARE GUIDE
"	W10185986		Not Available	WIRING DIAGRAM
2	W10115484			Control Panel And Bracket Assembly
3	W10186122			Harness, Wiring
4	8559502			Cap, End
5	8312709			Clip-Console
6	8274261			Do-It-Yourself Repair Manuals
7	3399639			Switch, Rotary Temperature
8	8559501			Cap, End
9	693995			Screw, Hex Head
10	8558463			HANdle And Lint Screen Assembly
11	8536939			Clip, Knob
12	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533974	4331106	Screw, No.10-32 X 7/16
15	3348629	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	8559800	8563663	Top
17	W10317458		Knob, Control
18	W10117655		Switch, Push-To-Start
19	W10317457		Knob, Timer Assembly
20	W10185981		Timer Assembly
21	694419		Mini-Buzzer
22	3400808		Screw. Mounting

Howes
the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]