


# Crosley CGD147HXW0 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

29" GAS DRYER

For Model: CGD147HXW0  
(White)

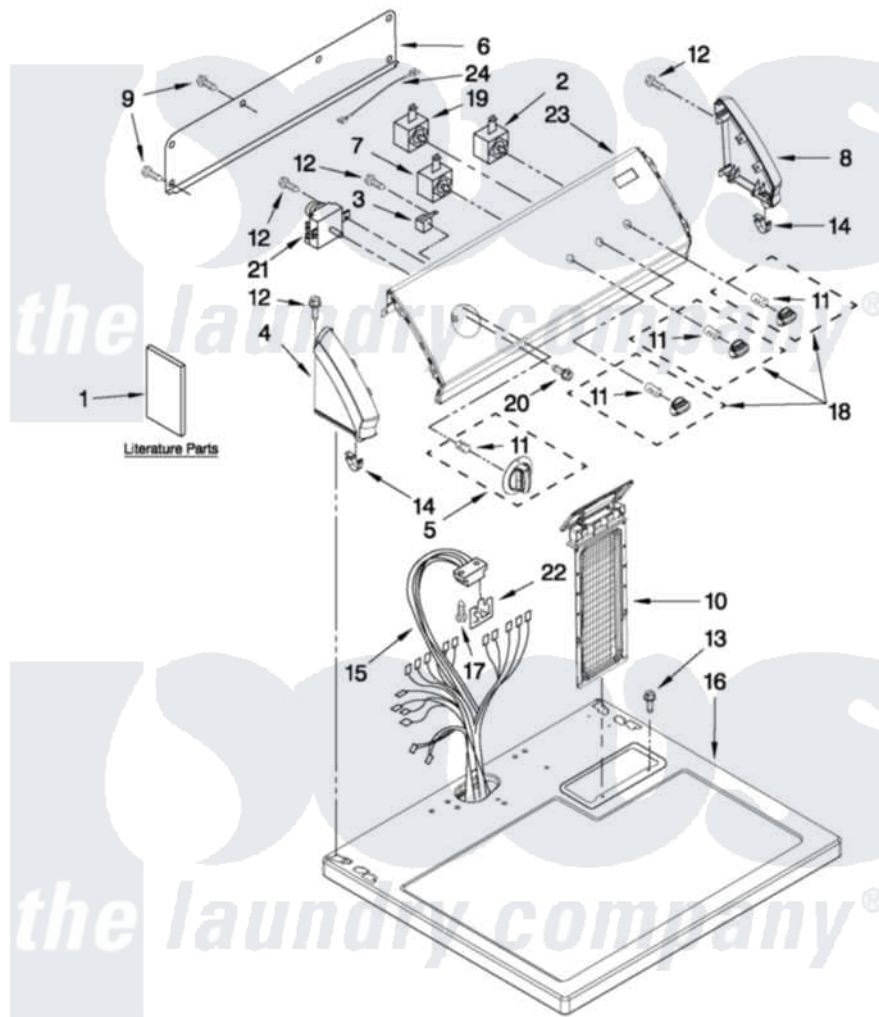

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

2-11 Litho in U.S.A. (LT)(bay)

1

Part No. W10394371 Rev. A

Crosley [Residential Crosley CGD147HXW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096984		Not Available	INSTALLATION (INSTRUCTIONS)
"	W10096992		Not Available	USE & CARE GUIDE
"	8578889		Not Available	Wiring Diagram
2	<a href="#">W10117655</a>			Switch, Push-To-Start
3	<a href="#">694419</a>			Mini-Buzzer
4	<a href="#">8559502</a>			Cap, End
5	<a href="#">W10317457</a>			Knob, Timer Assembly
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">8530169</a>			Switch, Temperature
8	<a href="#">8559501</a>			Cap, End
9	<a href="#">693995</a>			Screw, Hex Head
10	<a href="#">8558463</a>			HAndle And Lint Screen Assembly
11	<a href="#">8536939</a>			Clip, Knob
12	3348629	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">8312709</a>		Clip-Console
15	8576542	<a href="#">W10071310</a>	Hams-Wire
16	8559800	<a href="#">8563663</a>	Top
17	359625	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
18	<a href="#">W10317458</a>		Knob, Control
19	<a href="#">3405156</a>		Switch, Rotary
20	<a href="#">3400808</a>		Screw. Mounting
21	<a href="#">8566184</a>		Timer Assembly
22	<a href="#">8558178</a>		Control, Electronic
23	<a href="#">W10115485</a>		Control Panel And Bracket Assembly
24	<a href="#">W10113080</a>		Wire, Jumper

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>