


Crosley CGDS1043VQ1 01 - TOP AND CONSOLE PARTS

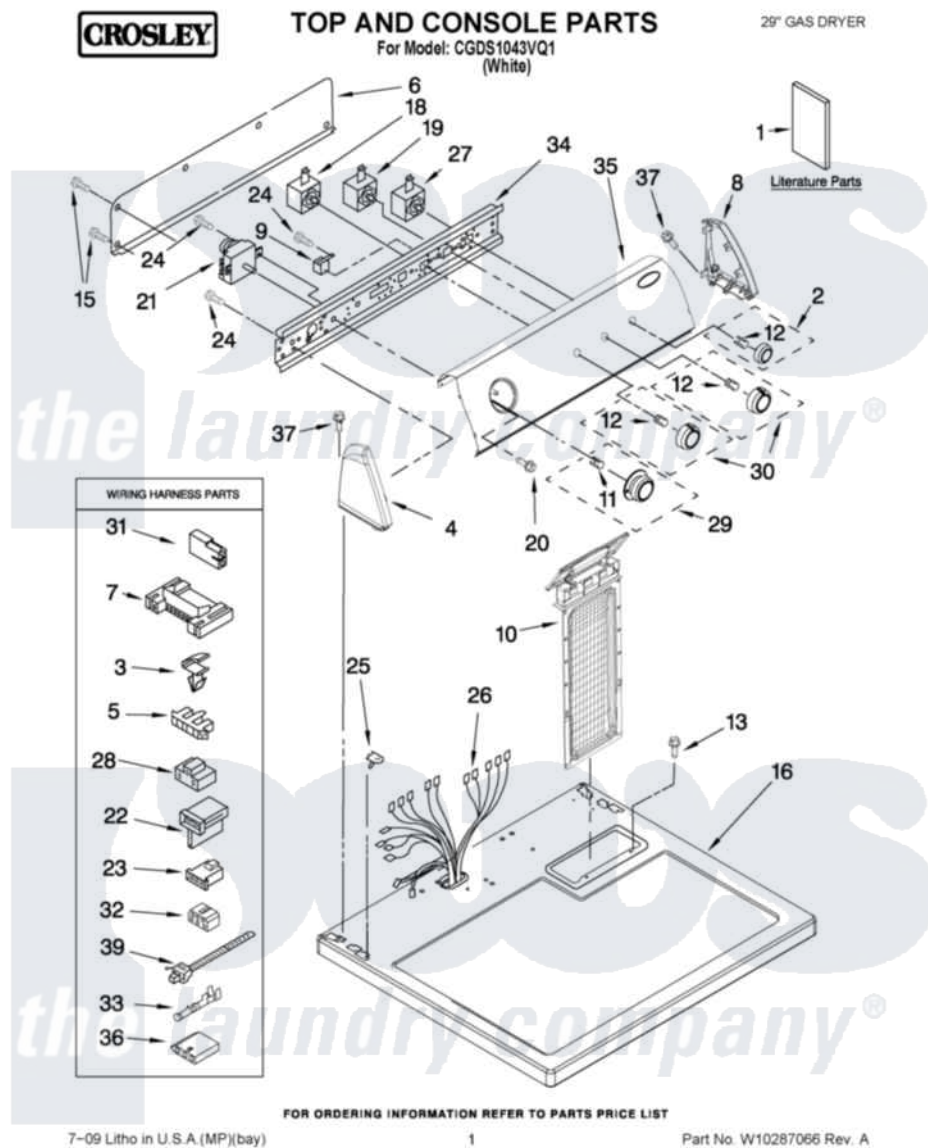

Crosley Residential Crosley CGDS1043VQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562589		Not Available	Instructions, Installation
"	W10112315		Not Available	Sheet, Cycle Feature
"	W10223589		Not Available	Guide, Use & Care
"	W10185985		Not Available	Wiring Diagram
2	8538959			Knob, Push-To-Start
3	3394427			Clip-Harness
4	8271365	279962		Endcap
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
9	694419			Mini-Buzzer
10	8558463			HANdle And Lint Screen Assembly
11	688805			Clip, Spring Knob
12	8536939			Clip, Knob
				Screw, For Mtn. Service

13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8557930	8563985	Top
18	3399639		Switch, Rotary Temperature
19	3405152		Switch, Wrinkle Shield
20	8533951	3400859	Screw, Grounding
21	W10185981		Timer Assembly
22	3403499		Connector, 2-Postion
23	3403498		Connector, 3-Position
24	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
25	357213		Nut, Push-In
26	W10186093		Harness, Wiring
27	3398094		Switch, Push To Start
28	3401144		Connector
29	8538953		Timer Knob Assembly
30	8538957		Knob, Control
31	717252		Receptacle, Terminal
32	3347243		Block, Disconnect
33	94614		Terminal
34	8271418		Bracket, Control
35	W10218311		Panel, Control
36	3936144		Do-It-Yourself Repair Manuals
37	388326		Screw, 8-18 X 1.25
39	3391249		Cable Tie, Push Mount

