


Crosley CGDS1043VQ1 02 - CABINET PARTS

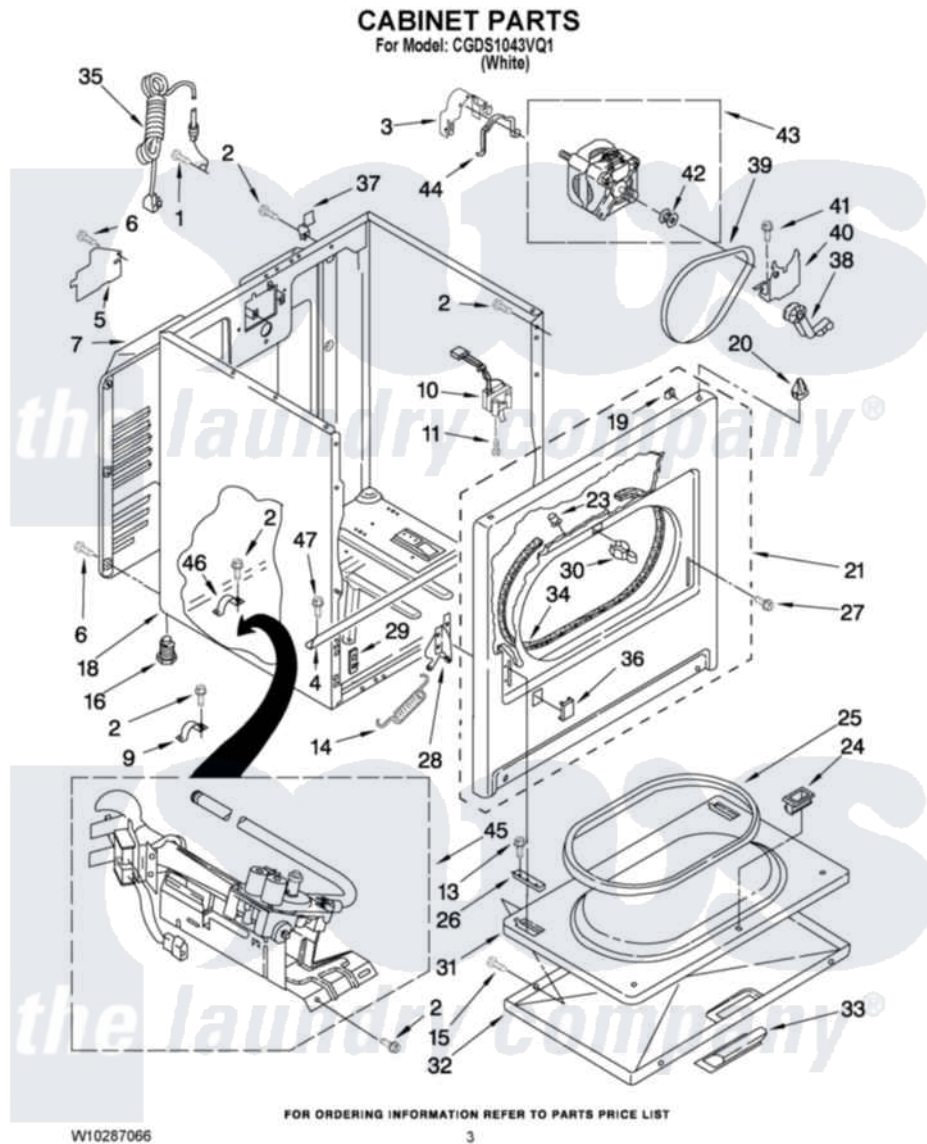

Crosley [Residential Crosley CGDS1043VQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533974	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	3404162			Clamp, Motor
4	8541400			Bracket, Cabinet
5	3396795			Cover, Terminal Block
6	693995			Screw, Hex Head
7	3396805	280043		Panel-Rear
9	3980175			Clamp, Elbow
10	3406107			Door Switch Assembly
11	697773	3395530		Screw
13	694091			Trim, Side Right Hand
14	W10041960			Spring, Door
15	3357011	308685		Side Trim)
16	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
18	8530603	8533643		Cabinet

19	98234		Clip, U-Bend
20	690363	18776	Lock, Front Top
21	3395197	279740	Panel
23	685203	279220	Clip
24	3389441		Door Catch Assembly
25	3390731		Seal, Door
26	337189		Clip, Hinge
27	342043	486146	Screw
28	8066056		Hinge, Door
"	8066057		Hinge, Door
29	3394083		Clip, Front Panel
30	696144	279570	Latch
31	695737		Door, Rear
32	3393549		Door, Front
33	690270	348721	Handle
34	3406129		Seal And Bearing Assembly
35	344020	3401402	Cord, Power
36	3394975		Plug, Front Panel
37	8066217		Hinge, Top
38	691366		Idler And Pulley Assembly
39	8066065	341241	Belt
40	348780		Base, Motor
41	3400500		Bolt, 3405245 5/16-18 X 3/4
42	3394341	W10299847	Pulley-Motor
43	W10194250	279827	Motor-Drve
44	W10121316		Plug, Multivent
45	8318272	W10465748	Burner-Gas
46	341029		Clamp, Pipe Door Spring
47	3390631		Screw, 10-16 X 3/8

