


Crosley CSWS16445WQ0 02 - CONTROLS AND REAR PANEL PARTS

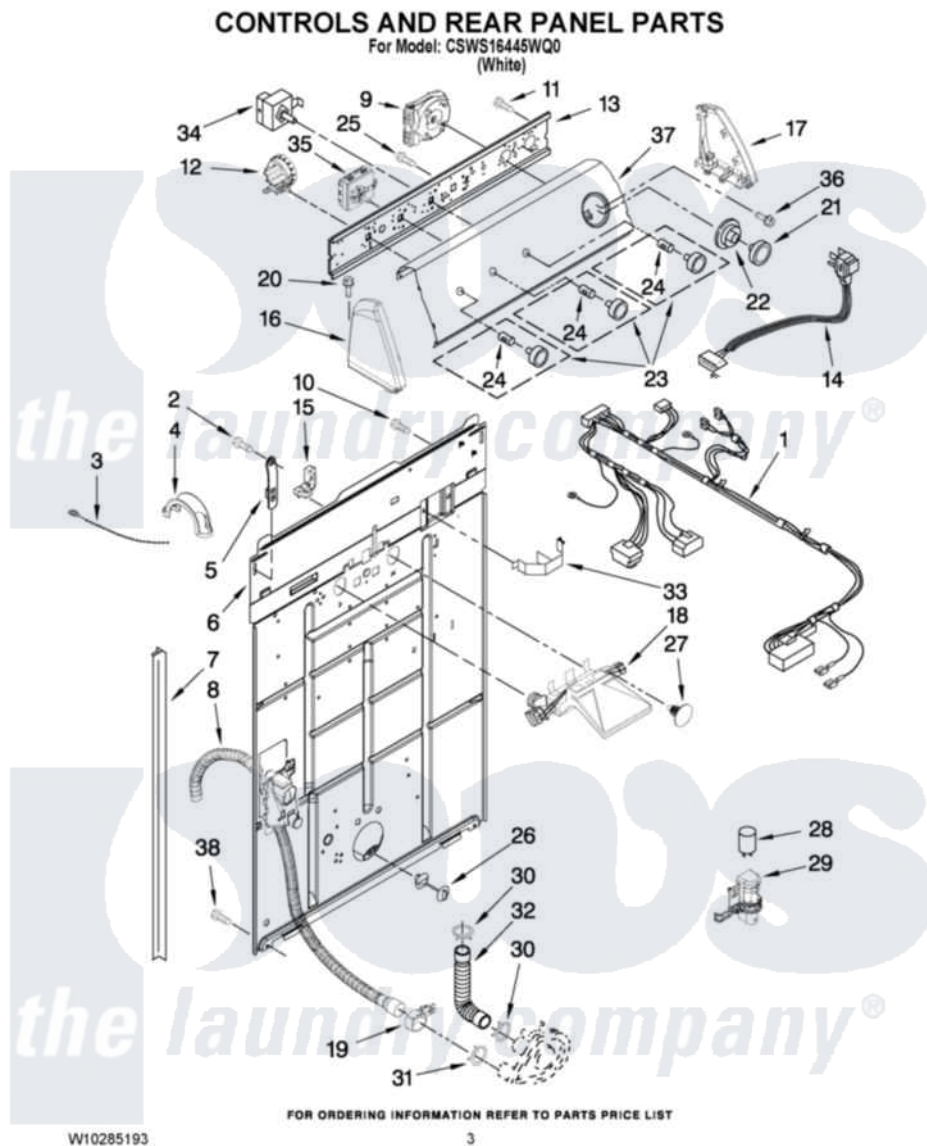

Crosley Residential Crosley CSWS16445WQ0 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10215083			Harness, Wiring
2	9740848			Screw, Mixing Valve Mounting
3	3347868	W10339879		Tie, Cable
4	8577378			U-Bend, Drain Hose
5	8568314			Strap, Console
6	W10194450			Panel, Rear
7	62747			Pad, Rear Panel
8	W10189267			Drain Hose Assembly
9	W10175553			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
12	8577843	W10337781		Switch-WL
13	3948608			Bracket, Control
14	8578842	285800		Cord-Power

15	3952821	285777	Relief-Str
16	8271365	279962	Endcap
17	8271359	279962	Endcap
18	W10144820		Valve, Water Inlet W/Thermistor And Vacuum Break
19	8541668		Clamp, Hose
20	388326		Screw, 8-18 X 1.25
21	8538949		Knob, Timer
22	8538955		Dial, Timer
23	8538957		Knob, Control
24	8536939		Clip, Knob
25	3400073		Screw, Ground
26	8519200		Support, Rear Panel
27	W10000080	8282566	Clip, Pine Tree
28	8572717		Capacitor, Motor Start
29	8318046		Clip, Capacitor
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8055003		Clip, Harness And Pressure Switch
34	3949180	W10168257	Switch, Rotary
35	W10184148		Switch, Water Temperature
36	3400818		Screw, Timer Mounting
37	W10196899		Panel, Console
38	62863	3390631	Screw, 10-16 X 3/8

the laundry company[®]

the laundry company[®]