


Crosley CSWS16445WQ0 03 - AGITATOR, BASKET AND TUB PARTS

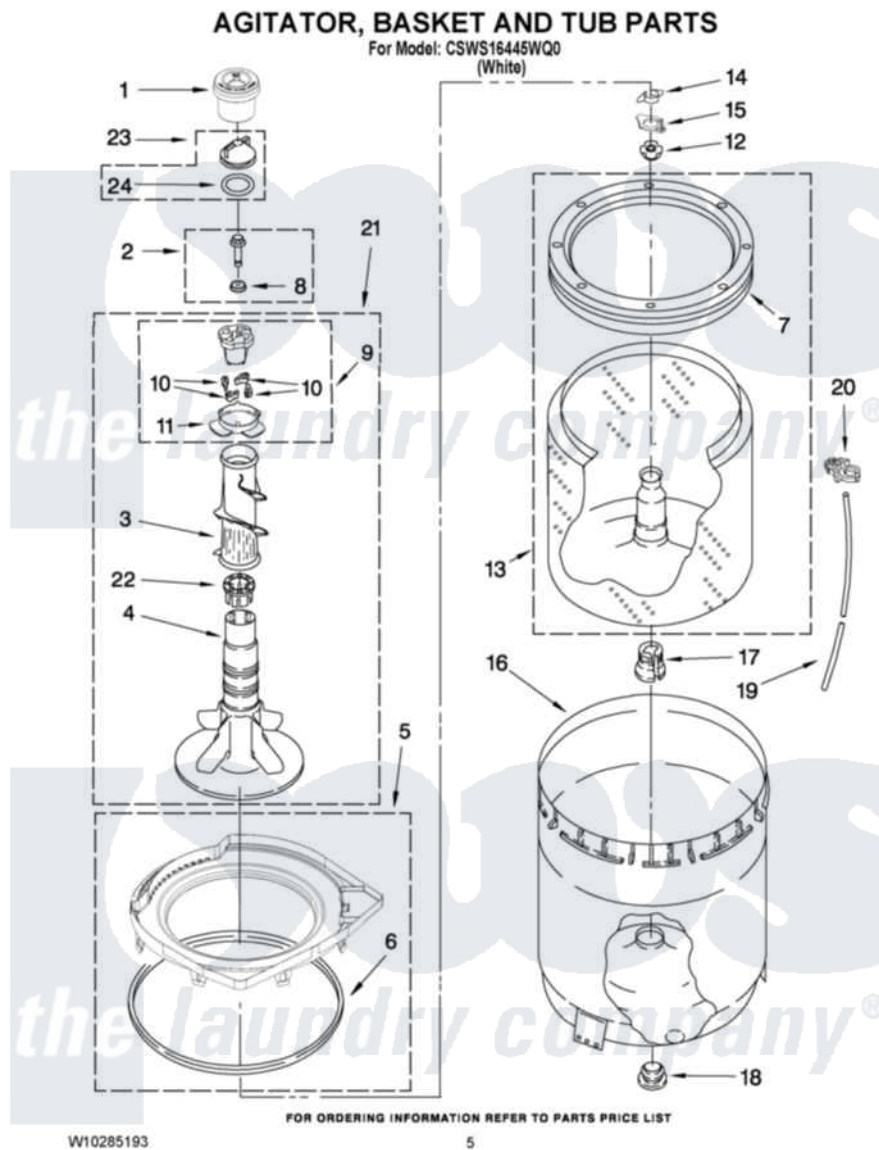

Crosley [Residential Crosley CSWS16445WQ0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	358237			Screw And Washer
3	3349019			Auger, Agitator
4	W10110020			Agitator
5	W10168523			Tub Ring And Gasket
6	3359585	3976308		Gasket, Tub Ring
7	W10006326			Balance Ring
8	3949550			Washer
9	3363663	285811		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3363661			Bearing, Driven Cam
12	W10116602			Nut, Spanner
13	W10006327			Basket And Balance Ring
14	3354845			Clip, Agitator
15	8543666			Washer, Agitator
16	63849			Strain Relief, Power Cord

17	389140		Tub Block, Basket Drive
18	383727		Gasket, Centerpodt
19	3347780	353244	Hose, Pressure Switch
20	2219077		Clip, Pressure Switch Hose
21	W10093672		Agitator
22	3350389	285587	Washer
23	3354733	W10074580	Cap, Barrier
24	W10072840		Fabric Softener

