


Crosley CW18C3A 02 - EXTERIOR (ORIG. REV. A-B)

MASTER CARE CW18C3 EXTERIOR

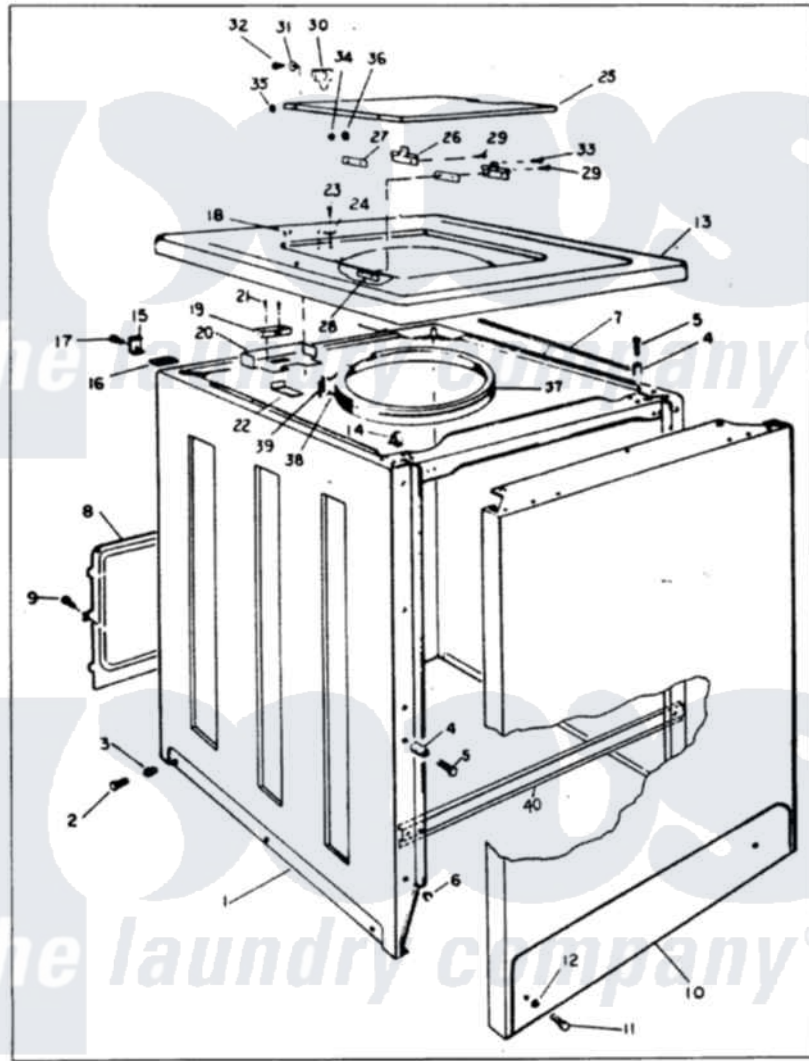

Crosley Residential Crosley CW18C3A Washer Parts Parts Diagram 02 - EXTERIOR (ORIG. REV. A-B)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061-24		Not Available	CABINET BODY
"	35-0061		Not Available	CABINET BODY
2	25-7001	308685		Side Trim)
3	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE WASHER,INT.TOOTH 10(PURCHASE)
"	25-7458	308685		Side Trim)
"	33-2088		Not Available	SLEEVE
4	34-9701			Guide, Cabinet
5	25-6109			Screw
6	33-2653			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW/No.10-16 X 3/8 (PURCHASE)
10	35-0056-24		Not Available	FRONT PANEL

11	25-7001	308685		Side Trim)
12	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE WASHER,INT.TOOTH 10(PURCHASE)
13	35-0065-24		Not Available	TOP PANEL
14	25-7285			Clip
15	33-7450	35-2846		Hinge, Cabinet Top
16	33-0930			Pad, Top Hinge
17	25-7732	681414		Screw, 10AB X 1/2
18	33-2653			Bumper, Cabinet
19	33-9064	12001187		Kit, Lid Switch Assembly
20	33-8289	12001187		Kit, Lid Switch Assembly
21	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW, SWITCH TO BRACKET No.6 -20 X 7/8 (PUCHASE LOCALLY)
22	33-8828	12001187		Kit, Lid Switch Assembly
23	25-7463	7101P012-60		Screw
24	25-7436			Nylite Washer
25	33-6484-24		Not Available	CLOTHES DOOR
26	33-6956			Hinge
27	33-6957			Hinge Pad
28	33-8058		Not Available	SPEEDNUT
29	25-7455	99002757		Screw
30	43-0057			Actuator, Door Switch
31	25-7436			Nylite Washer
32	25-7438			Screw
33	25-7455	99002757		Screw
34	25-7086	Y0308025		Washer, Stainless Steel
35	25-7436			Nylite Washer
36	25-8057		Not Available	PLASTIC NUT
37	33-9399		Not Available	SPLASH GUARD
38	33-6093		Not Available	RETAINING RING
39	33-0767			Spring
40	25-7752	3196169		Screw, Element
"	35-0445		Not Available	CABT BRACE

