


# Crosley CW18C3W 02 - CONTROL PANEL (ORIG. REV. A-B)

MASTER CARE

CW18C3

BACKGUARD

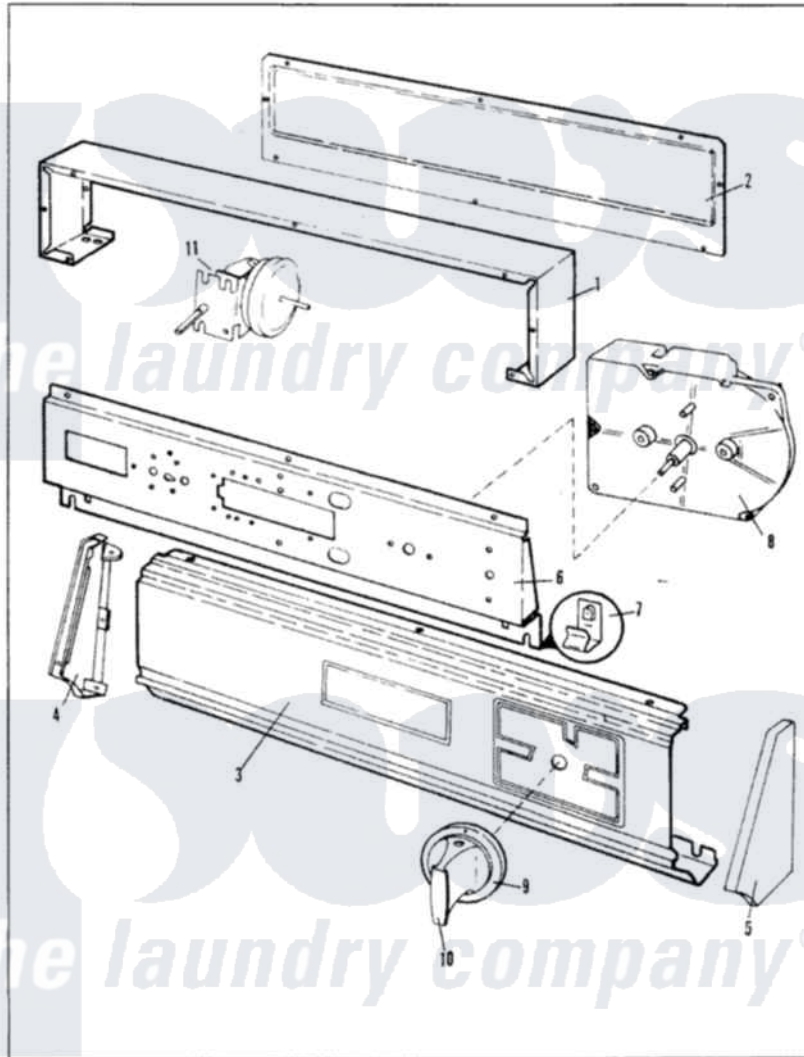

Issued 1/86

N-27-15

Crosley Residential Crosley CW18C3W Washer Parts Parts Diagram 02 - CONTROL PANEL (ORIG. REV. A-B)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-WRAPPER TO CAB.TOP 8-18 X 1/2 HXWSH HD (PURCHASE LOCALLY)
"	33-9668		Not Available	WRAPPER
2	33-4062		Not Available	REINFORCE PLATE
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW SHIELD MTG. 8-18 X 1/2 HX WSH HD (PURCHASE LOCALLY)
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	33-3701		Not Available	BACKGUARD PAD
"	33-8909		Not Available	SHIELD
"	34-9487		Not Available	PLATE, REINFORCEMENT
3	35-0040		Not Available	CONTROL PANEL
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE LOCKWASHER (PURCHASE LOCALLY)
"	<a href="#">25-7760</a>			Screw

4	<a href="#">33-6765</a>		LH End Cap
5	25-7496	<a href="#">25-7760</a>	Screw
"	<a href="#">33-6766</a>		RH End Cap
6	53-0243		Not Available CONTROL SHIELD
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
7	W10124350		Not Available NOT REQUIRED PART OR SEE NOTE WASHER NO.10 EXT. TOOTH (PURCHASE LOCALLY)
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7461		Not Available CLIP
8	<a href="#">35-0033</a>		Timer
"	35-0484		Not Available TIMER
"	W10124350		Not Available NOT REQUIRED PART OR SEE NOTE
"	<a href="#">35-0115</a>		Timer Motor 1 RPM
9	35-0159	<a href="#">12500057</a>	Knob Ski
10	35-0495	<a href="#">12500057</a>	Knob Ski
"	35-0495	<a href="#">12500057</a>	Knob Ski
11	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0110		Not Available PRESSURE SWITCH

