


Crosley CW18M4A 02 - CONTROL PANEL (ORIG. REV. A-B)

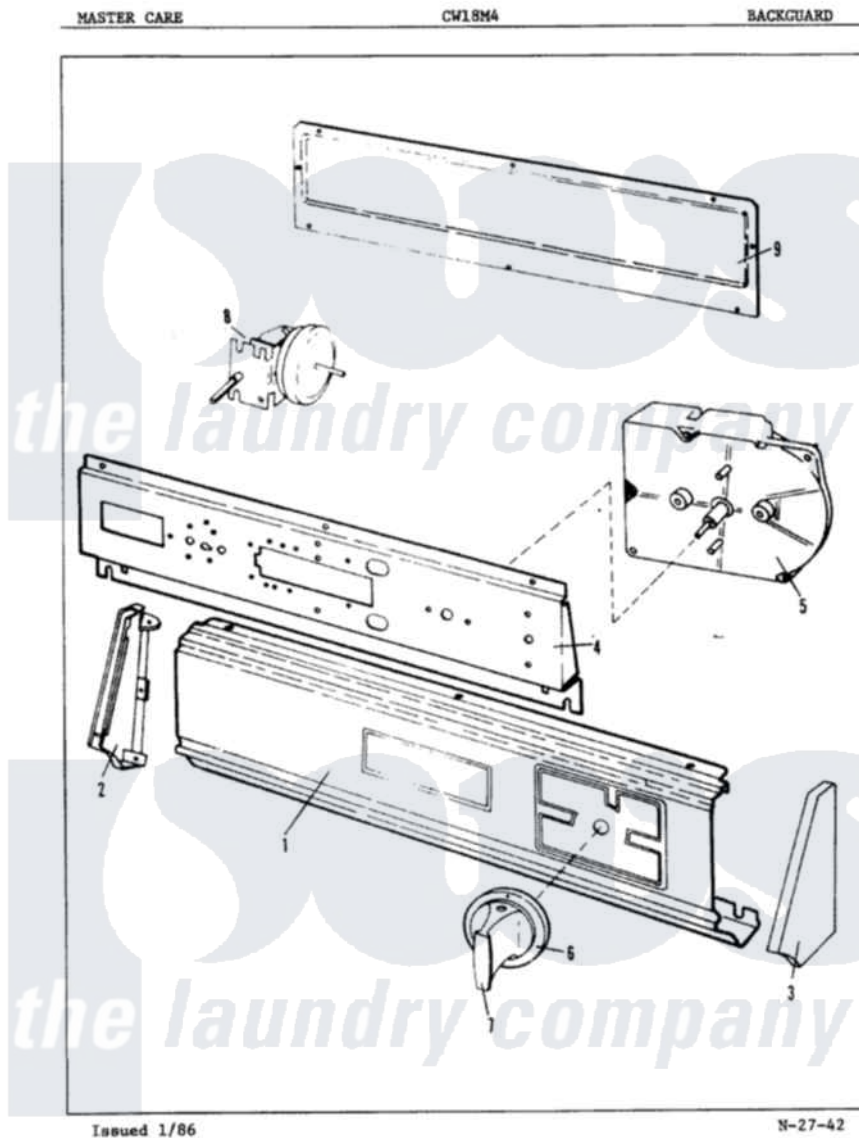

Crosley Residential Crosley CW18M4A Washer Parts Parts Diagram 02 - CONTROL PANEL (ORIG. REV. A-B)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0571		Not Available	CONTROL PANEL
"	25-7793			Screw
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
2	53-0265			LH Endcap
3	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0264			RH Endcap
"	25-7496	25-7760		Screw
4	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0365	53-1676		Shield, Control
5	35-0484		Not Available	TIMER
"	35-0115			Timer Motor 1 RPM
"	25-0205	216412		Screw, Bracket To Timer

6	35-0172	12500057	Knob Ski
7	35-0496	12500057	Knob Ski
8	35-0110		Not Available PRESSURE SWITCH
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7592		Not Available SCREW
"	25-7697	25-2219	Screw
"	25-7851		Speedclip, End Cap To Top
"	34-9487		Not Available PLATE, REINFORCEMENT
"	53-0268	21001460	Shield, Rear
"	25-7852		Speedclip, Rr Shld To End Cap

the laundry company[®]

the laundry company[®]

the laundry company[®]