


# Crosley CW18M4H 02 - CONTROL PANEL (ORIG. REV. A-B)

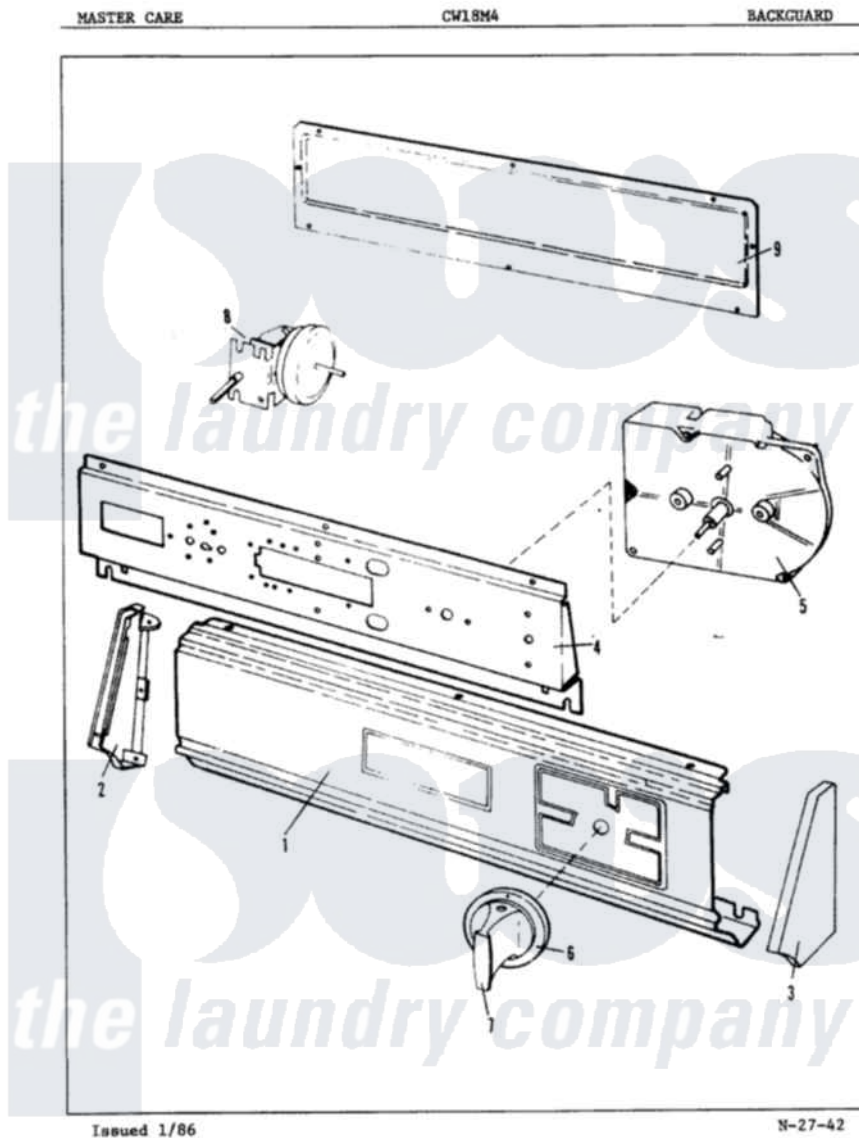

Crosley [Residential Crosley CW18M4H Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (ORIG. REV. A-B)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0571		Not Available	CONTROL PANEL
"	<a href="#">25-7793</a>			Screw
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-PURCHASE LOCALLY
2	<a href="#">53-0265</a>			LH Endcap
3	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">53-0264</a>			RH Endcap
"	25-7496	<a href="#">25-7760</a>		Screw
4	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0365	<a href="#">53-1676</a>		Shield, Control
5	35-0484		Not Available	TIMER
"	<a href="#">35-0115</a>			Timer Motor 1 RPM
"	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer

6	35-0172	<a href="#">12500057</a>	Knob Ski
7	35-0496	<a href="#">12500057</a>	Knob Ski
8	35-0110		Not Available PRESSURE SWITCH
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7592		Not Available SCREW
"	25-7697	<a href="#">25-2219</a>	Screw
"	<a href="#">25-7851</a>		Speedclip, End Cap To Top
"	34-9487		Not Available PLATE, REINFORCEMENT
"	53-0268	<a href="#">21001460</a>	Shield, Rear
"	<a href="#">25-7852</a>		Speedclip, Rr Shld To End Cap

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>