


Crosley CW18P2H 05 - EXTERIOR

SECTION: EXTERIOR

MODEL: CW18P2

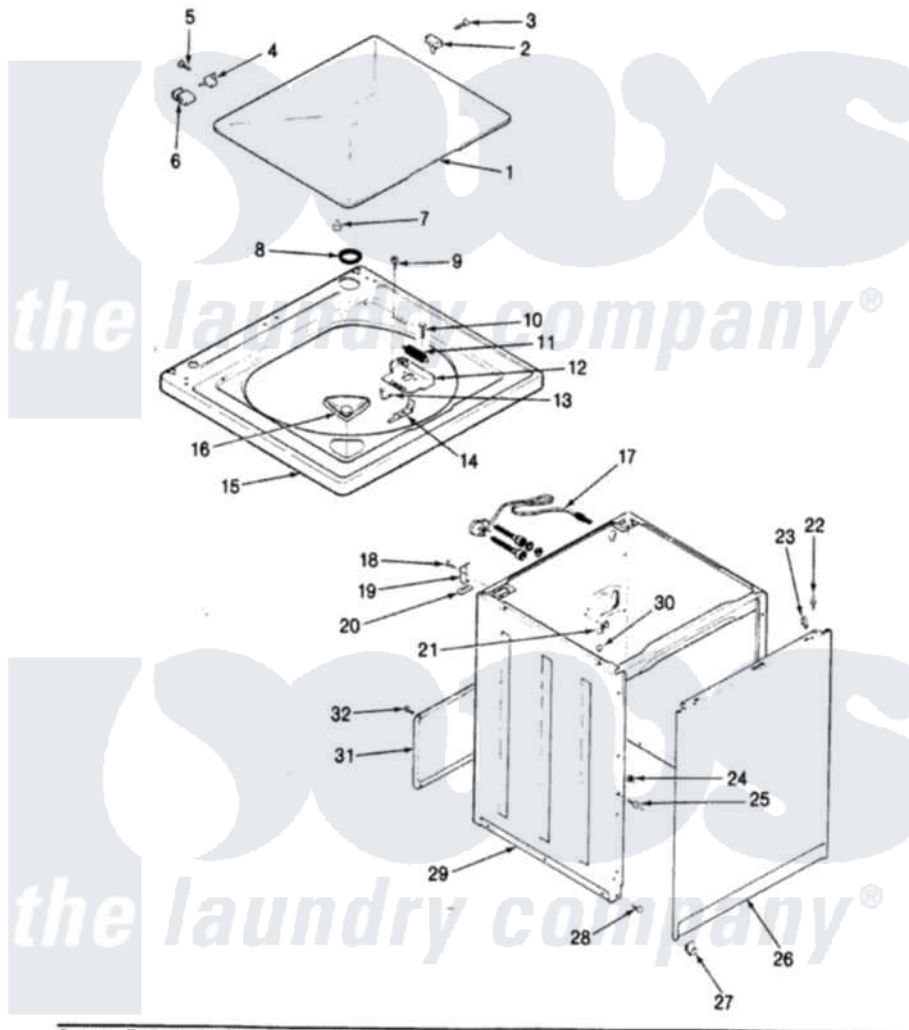

Issue Date: 2/91

Crosley [Residential Crosley CW18P2H Washer Parts](#) Parts Diagram 05 - EXTERIOR

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0581			Bumper, Door
"	35-2103-25		Not Available	CLOTHES DOOR
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	33-6957			Hinge Pad
"	25-7086	Y0308025		Washer, Stainless Steel
5	25-7455	99002757		Screw
6	33-6956			Hinge
7	25-7455	99002757		Screw
8	35-2063			Bushing, Insulator
"	35-2064			Bushing, Insulating
9	25-7463	7101P012-60		Screw
10	25-7940		Not Available	SCREW
11	35-2814	12001187		Kit, Lid Switch Assembly
12	25-7436			Nylite Washer

"	25-7463	7101P012-60	Screw
"	35-2795	12001187	Kit, Lid Switch Assembly
13	25-7878		Clip
14	35-2805	12001187	Kit, Lid Switch Assembly
15	35-2071-25		Not Available
			CABINET TOP
16	25-7733	681414	Screw, 10AB X 1/2
17	35-0680		Not Available
			CORD, POWER
18	25-7893		Screw
19	33-7450	35-2846	Hinge, Cabinet Top
20	33-0930		Pad, Top Hinge
21	33-6099		Clamp
22	53-0643		Pin, Locator
23	34-9701		Guide, Cabinet
24	25-0224	3400029	Nut, Adapter Plate
25	53-0643		Pin, Locator
26	25-7732	681414	Screw, 10AB X 1/2
"	35-2084-25		Not Available
			PANEL, FRONT
27	53-0120		Clip, Front Panel
28	33-2653		Bumper, Cabinet
29	35-2106-25		Not Available
			CABINET ASSY. (HW)
30	33-2653		Bumper, Cabinet
31	35-2108	21001871	Cabinet
32	25-7086	Y0308025	Washer, Stainless Steel
NI	33-8057		Not Available
			PLASTIC NUT
"	33-8058		Not Available
			SPEEDNUT
"	25-6109		Screw
"	34-9701		Guide, Cabinet
"	25-7285		Clip

the laundry company[®]

Howes
the laundry company[®]