


Crosley CW18P2WC 02 - CONTROL PANEL

SECTION: BACKGUARD
 MODEL: CW18P2C

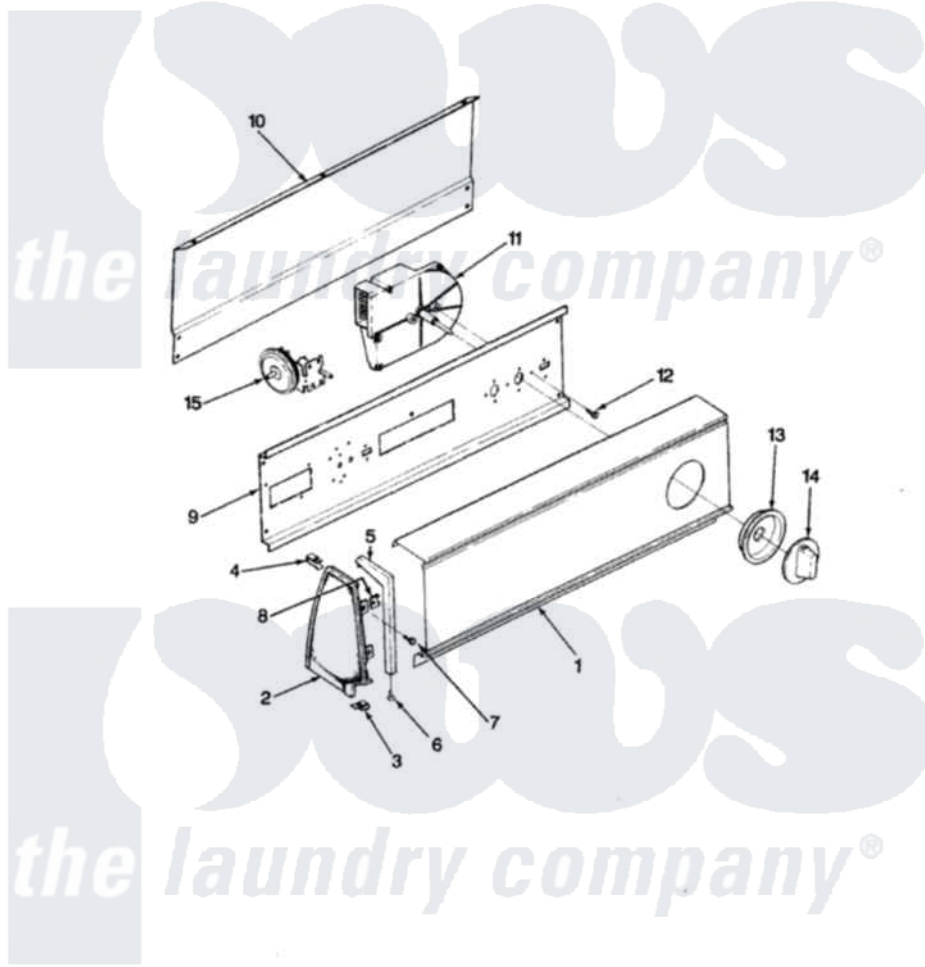

Issue Date: 2/91

Crosley [Residential Crosley CW18P2WC Washer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-2886		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
"	25-3457		Screw, Sems
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
11	35-2747	Not Available	TIMER
12	25-0088	489483	Screw 10-32 X 1/2
13	35-0180	12500058	Knob Ski
14	35-0498	12500058	Knob Ski
15	35-2811	Not Available	PRESSURE SWITCH
"	35-2887-1	Not Available	MANUAL, USE & CARE
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]