


# Crosley CW18P6A 06 - CONTROL PANEL (REV. H-M)

CROSLEY CW18P6 BACKGUARD

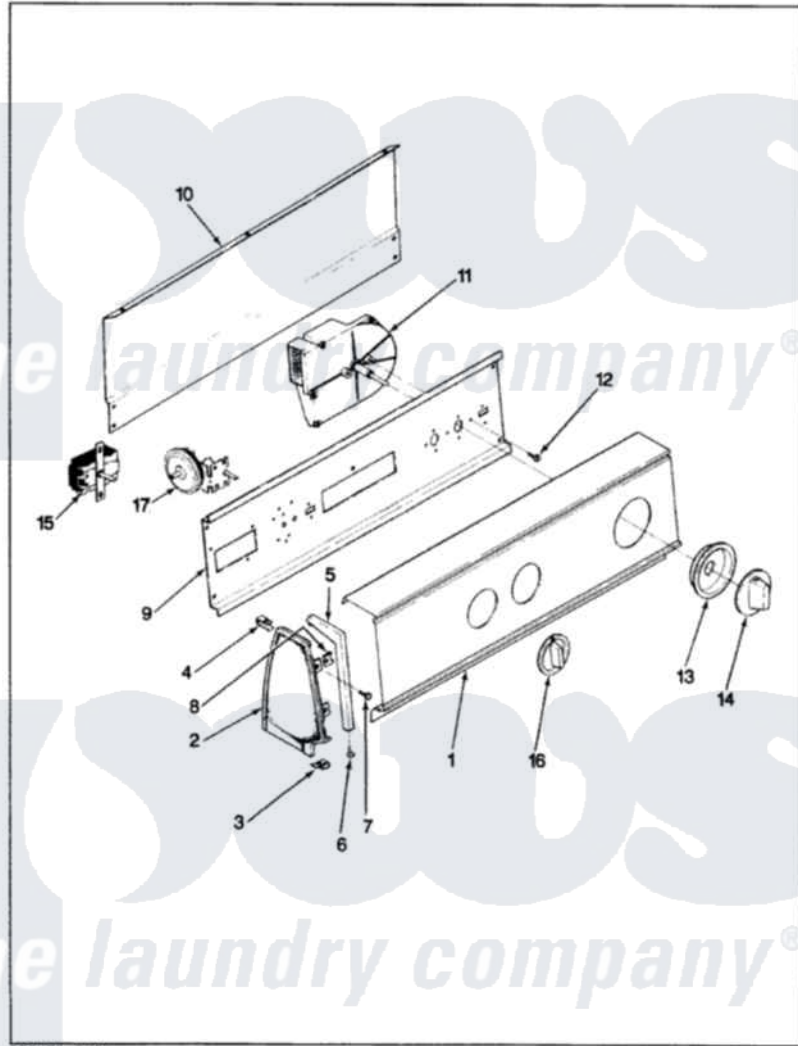

ISSUED 9/89

Crosley Residential Crosley CW18P6A Washer Parts Parts Diagram 06 - CONTROL PANEL (REV. H-M)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	<a href="#">25-7793</a>			Screw
"	35-2474		Not Available	CONTROL PANEL
2	35-2488	<a href="#">21001452</a>		Cap- End
"	35-2487	<a href="#">21001451</a>		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw
7	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

8	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
9	<a href="#">53-1676</a>		Shield, Control
10	25-7853	<a href="#">25-7933</a>	Ring, Retaining
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">25-3457</a>		Screw, Sems
"	35-2688	<a href="#">21001460</a>	Shield, Rear
11	35-2210	<a href="#">35-2749</a>	Timer
12	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
13	35-0180	<a href="#">12500058</a>	Knob Ski
14	35-2486	<a href="#">12500058</a>	Knob Ski
15	35-2838	<a href="#">35-2839</a>	Switch
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
16	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2256	<a href="#">21001283</a>	Knob, Selector---Piq
17	35-3283	<a href="#">21001554</a>	Switch, Water Level
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2503	Not Available	MANUAL, U&C INSERT
"	35-2145	<a href="#">21001554</a>	Switch, Water Level

