


Crosley CW18P6A 07 - EXTERIOR (REV. H-M)

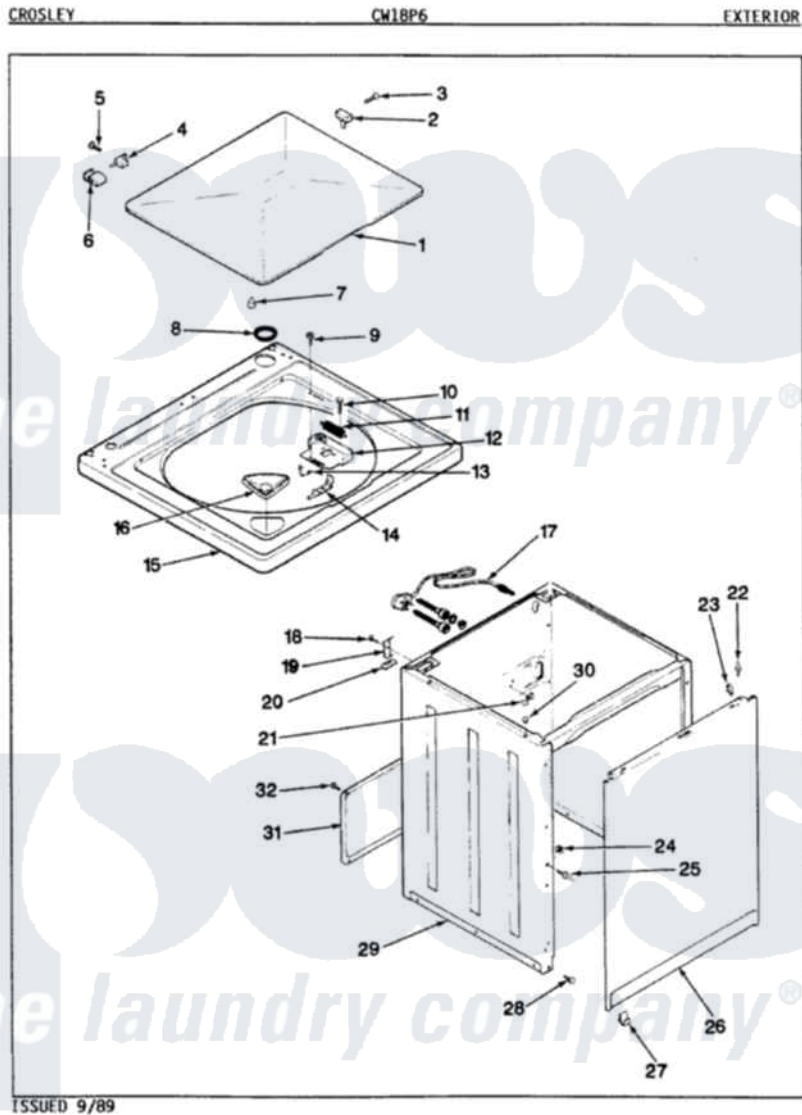

Crosley Residential Crosley CW18P6A Washer Parts Parts Diagram 07 - EXTERIOR (REV. H-M)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-2026-24		Not Available	LID (ALM)
2	25-7436			Nylite Washer
"	43-0057			Actuator, Door Switch
3	25-7438			Screw
4	25-7086	Y0308025		Washer, Stainless Steel
"	35-2045			Pin, Hinge
5	25-7893			Screw
6	35-2044			Hinge, Lid
7	35-0581			Bumper, Door
8	35-2063			Bushing, Insulator
"	35-2064			Bushing, Insulating
9	25-7463	7101P012-60		Screw
10	25-7437	40040701		Screw, Tapping No.6b-20
11	35-2814	12001187		Kit, Lid Switch Assembly
12	35-2795	12001187		Kit, Lid Switch Assembly
13	25-7878			Clip

14	35-2805	12001187		Kit, Lid Switch Assembly
15	35-2739-24		Not Available	TOP, CABINET (ALM)
16	33-9906	21001167		Dispenser, Bleach
17	35-0680		Not Available	CORD, POWER
18	25-7893			Screw
19	33-7450	35-2846		Hinge, Cabinet Top
20	33-0930			Pad, Top Hinge
21	25-7796	596669		Clamp, Manifold
22	53-0643			Pin, Locator
23	25-7220			Clip, Cabinet Top
24	25-0224	3400029		Nut, Adapter Plate
25	53-0643			Pin, Locator
26	35-2084-24			Panel, Front
27	53-0120			Clip, Front Panel
28	33-2653			Bumper, Cabinet
29	35-2106-24	12001802		Kit, Cabinet/Rear Shield
30	33-2653			Bumper, Cabinet
31	35-2108	21001871		Cabinet
32	25-7733	681414		Screw, 10AB X 1/2

