


# Crosley CW18P6W 04 - CONTROL PANEL (ORIG. REV. A-D)

CROSLEY

CW18P6

BACKGUARD

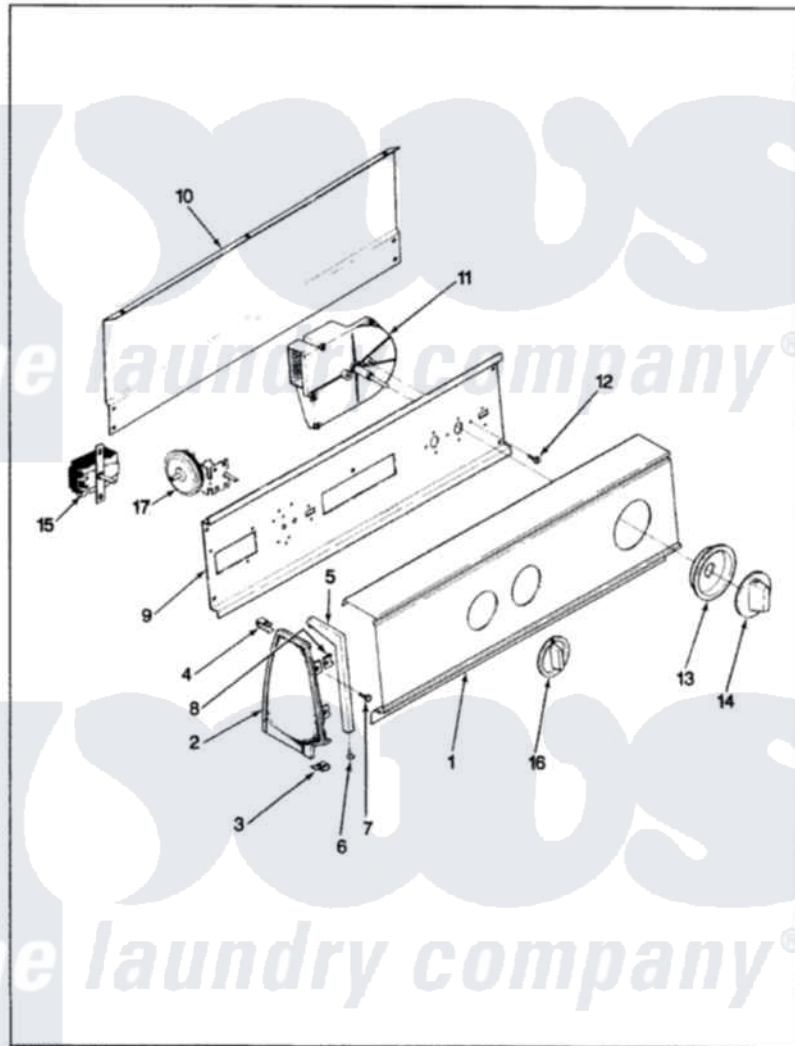

ISSUED 9/89

Crosley Residential Crosley CW18P6W Washer Parts Parts Diagram 04 - CONTROL PANEL (ORIG. REV. A-D)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">25-7793</a>			Screw
"	35-2474		Not Available	CONTROL PANEL
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
2	<a href="#">53-0265</a>			LH Endcap
"	<a href="#">53-0264</a>			RH Endcap
"	35-2488	<a href="#">21001452</a>		Cap- End
"	35-2487	<a href="#">21001451</a>		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	25-7697	<a href="#">25-2219</a>		Screw
4	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	<a href="#">25-7760</a>			Screw

7	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
8	<a href="#">25-7702</a>		Speedclip, End Cap To Control Panel
9	<a href="#">53-1676</a>		Shield, Control
"	53-0365	<a href="#">53-1676</a>	Shield, Control
10	<a href="#">25-3457</a>		Screw, Sems
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	<a href="#">21001460</a>	Shield, Rear
"	53-0268	<a href="#">21001460</a>	Shield, Rear
11	35-2210	<a href="#">35-2749</a>	Timer
12	25-0088	<a href="#">489483</a>	Screw 10-32 X 1/2
13	35-0180	<a href="#">12500058</a>	Knob Ski
14	35-0498	<a href="#">12500058</a>	Knob Ski
15	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">35-0119</a>		Rotary Switch
16	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2256	<a href="#">21001283</a>	Knob, Selector---Piq
17	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2145	<a href="#">21001554</a>	Switch, Water Level
NI	33-8304	Not Available	MANUAL, USE & CARE

