


Crosley CW18P6W 06 - CONTROL PANEL (REV. H-M)

CROSLEY

CW18P6

BACKGUARD

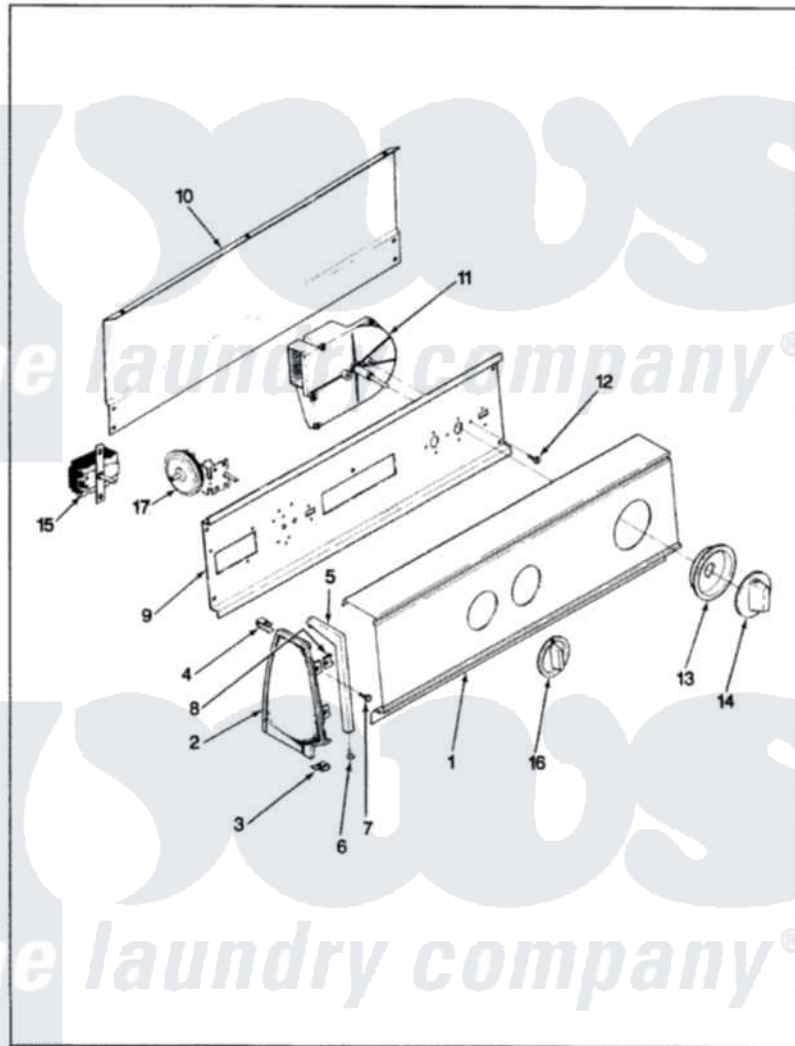

ISSUED 9/89

Crosley [Residential Crosley CW18P6W Washer Parts](#) Parts Diagram 06 - CONTROL PANEL (REV. H-M)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7702			Speedclip, End Cap To Control Panel
"	25-7793			Screw
"	35-2474		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
3	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

8	25-7702		Speedclip, End Cap To Control Panel
9	53-1676		Shield, Control
10	25-7853	25-7933	Ring, Retaining
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457		Screw, Sems
"	35-2688	21001460	Shield, Rear
11	35-2210	35-2749	Timer
12	25-0205	216412	Screw, Bracket To Timer
13	35-0180	12500058	Knob Ski
14	35-2486	12500058	Knob Ski
15	35-2838	35-2839	Switch
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
16	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2256	21001283	Knob, Selector---Piq
17	35-3283	21001554	Switch, Water Level
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2503	Not Available	MANUAL, U&C INSERT
"	35-2145	21001554	Switch, Water Level

