


Crosley CW20C7W 02 - CONTROL PANEL (ORIG. REV. A-B)

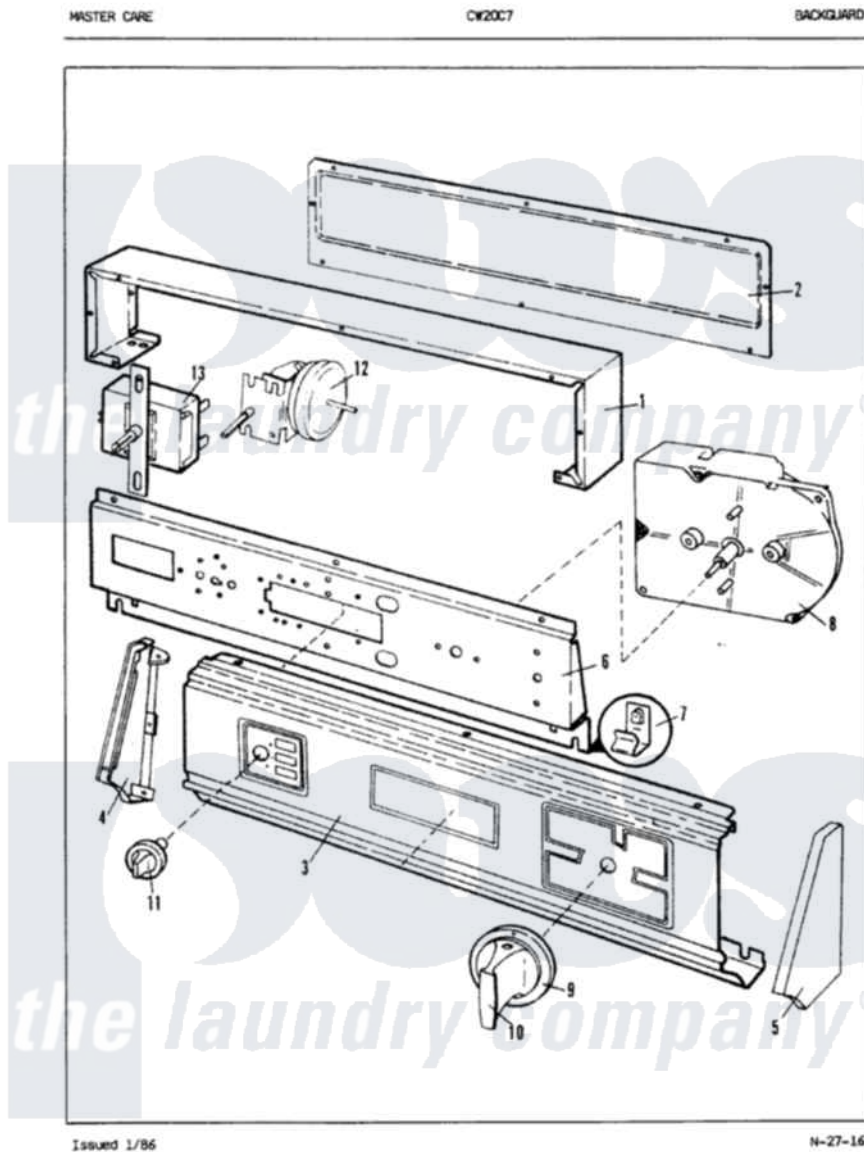

Crosley [Residential Crosley CW20C7W Washer Parts](#) Parts Diagram 02 - CONTROL PANEL (ORIG. REV. A-B)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-WRAPPER TO CAB.TOP 8-18 X 1/2 HXWSH HD (PURCHASE LOCALLY)
"	33-9668		Not Available	WRAPPER
2	33-4062		Not Available	REINFORCE PLATE
"	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW SHIELD MTG. 8-18 X 1/2 HX WSH HD (PURCHASE LOCALLY)
"	25-7435	33002917		Screw, No.10-16
"	33-3701		Not Available	BACKGUARD PAD
"	33-8909		Not Available	SHIELD
"	34-9487		Not Available	PLATE, REINFORCEMENT
3	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE LOCKWASHER (PURCHASE LOCALLY)
"	35-0043		Not Available	CONTROL PANEL
"	25-7760			Screw

4	33-6765		LH End Cap
5	25-7496	25-7760	Screw
"	33-6766		RH End Cap
6	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0243		Not Available CONTROL SHIELD
7	W10124350		Not Available NOT REQUIRED PART OR SEE NOTE WASHER NO.10 EXT. TOOTH (PURCHASE LOCALLY)
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7461		Not Available CLIP
8	35-0117		Timer Motor 1/2rpm
"	W10124350		Not Available NOT REQUIRED PART OR SEE NOTE SCREW- TIMMER TO SHIELD 10-32 X 3/8 HX HD (PURCHASE LOCALLY)
"	33-9803		Timer
"	35-0491		Timer
9	35-0159	12500057	Knob Ski
10	33-2862		Not Available TIMER KNOB
"	25-6044		Set Screw
"	35-0495	12500057	Knob Ski
11	35-0158		Not Available SELECTOR KNOB
12	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0112	35-0782	Pressure Switch
13	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-0114		Not Available TEMP SWITCH

the laundry company[®]

the laundry company[®]