


Crosley CW20C7W 03 - EXTERIOR (ORIG. REV. A-B)

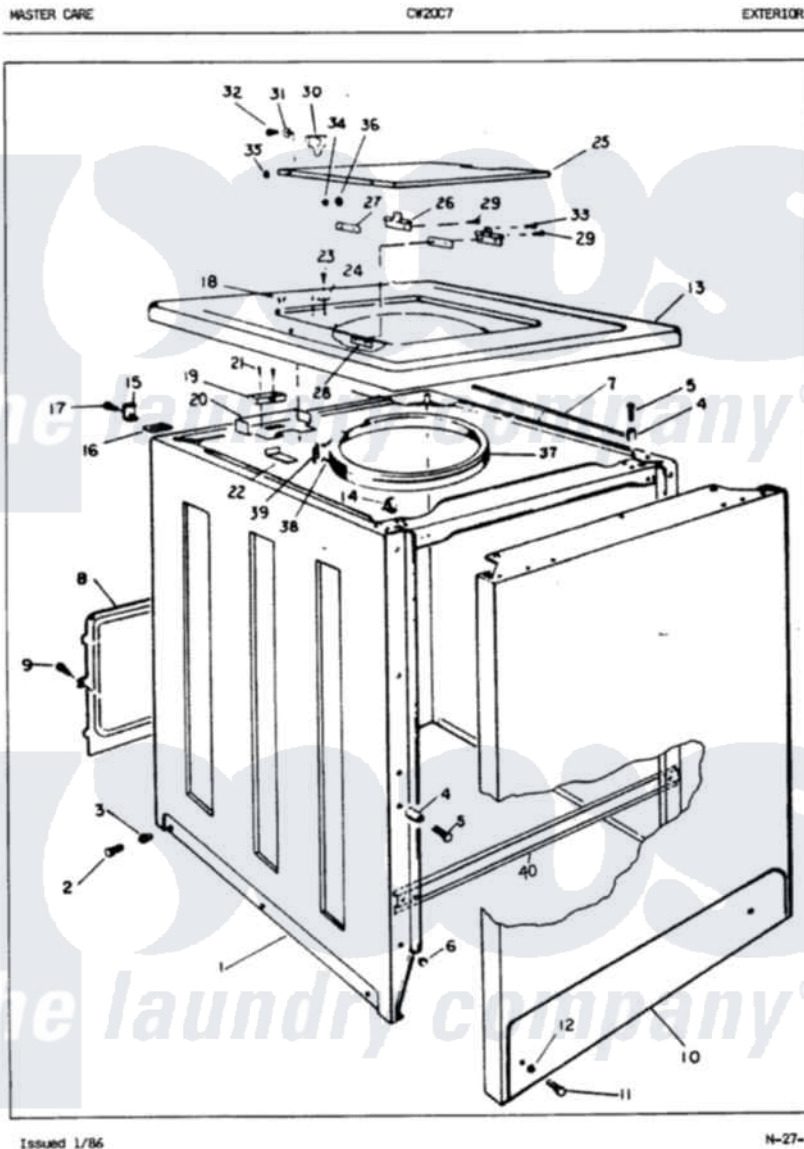

Crosley Residential Crosley CW20C7W Washer Parts Parts Diagram 03 - EXTERIOR (ORIG. REV. A-B)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-0061		Not Available	CABINET BODY
2	25-7001	308685		Side Trim)
3	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE WASHER INT. TOOTH 10 (PURCHASE LOCALLY)
"	25-7458	308685		Side Trim)
"	33-2088		Not Available	SLEEVE
4	34-9701			Guide, Cabinet
5	25-6109			Screw
6	33-2653			Bumper, Cabinet
7	33-9948		Not Available	CUSHION STRIP
8	33-8687		Not Available	REAR SHIELD
9	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW-NO.10-16 X 3/8 (PURCHASE LOCALLY)
10	35-0056		Not Available	FRONT PANEL
11	25-7001	308685		Side Trim)

12	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE WASHER INT. TOOTH 10 (PURCHASE LOCALLY)
13	35-0065		Not Available	TOP PANEL
14	25-7285			Clip
15	33-7450	35-2846		Hinge, Cabinet Top
16	33-0930			Pad, Top Hinge
17	25-7732	681414		Screw, 10AB X 1/2
18	33-2653			Bumper, Cabinet
19	33-9064	12001187		Kit, Lid Switch Assembly
20	33-8289	12001187		Kit, Lid Switch Assembly
21	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE SCREW SWITCH TO BRACKET NO. 6-20 X 7/8 (PURCHASE LOCALLY)
22	33-8828	12001187		Kit, Lid Switch Assembly
23	25-7463	7101P012-60		Screw
24	25-7436			Nylite Washer
25	33-7929	35-2103		Clother Door
26	33-6956			Hinge
27	33-6957			Hinge Pad
28	33-8058		Not Available	SPEEDNUT
29	25-7455	99002757		Screw
30	43-0057			Actuator, Door Switch
31	25-7436			Nylite Washer
32	25-7438			Screw
33	25-7455	99002757		Screw
34	25-7086	Y0308025		Washer, Stainless Steel
35	25-7436			Nylite Washer
36	25-8057		Not Available	PLASTIC NUT
37	33-9399		Not Available	SPLASH GUARD
38	33-6093		Not Available	RETAINING RING
39	33-0767			Spring
40	25-7752	3196169		Screw, Element
"	35-0445		Not Available	CABT BRACE

